

<b>GF54.15-P-1256R</b>	<b>Fuse assignment, as-built configuration</b>	<b>16.12.05</b>
------------------------	--	-----------------

**MODEL 230.4 up to 28.2.06**

	Fuse assignment of rear fuse and relay box	Up to 31.05.02 As of 01.06.02 up to 31.05.04 as of 01.06.04 up to 28.02.06	GF54.15-P-1256-01R GF54.15-P-1256-01RA GF54.15-P-1256-01RB
	Fuse assignment of fuse and relay box in right engine compartment	Up to 31.05.02 as of 01.06.02 up to 31.08.03 as of 01.09.03 up to 31.05.04 as of 01.06.04 up to 31.05.05 as of 01.06.05 up to 28.02.06	GF54.15-P-1256-02R GF54.15-P-1256-02RA GF54.15-P-1256-02RB GF54.15-P-1256-02RC GF54.15-P-1256-02RD
	Fuse assignment of fuse and relay box in left engine compartment	Up to 31.05.02 as of 01.06.02 up to 31.08.03 as of 01.09.03 up to 31.05.04 as of 01.06.04 up to 28.02.06	GF54.15-P-1256-03R GF54.15-P-1256-03RA GF54.15-P-1256-03RB GF54.15-P-1256-03RC
	Fuse assignment of front prefuse box	up to 31.08.03 as of 01.09.03 up to 31.05.04 as of 01.06.04 up to 28.02.06	GF54.15-P-1256-07R GF54.15-P-1256-07RA GF54.15-P-1256-07RB
	Fuse assignment of rear prefuse box		GF54.15-P-1256-08R