


Assignment of fuse and relay box in engine compartment, left

1-27 Fuses
K40/2 Driver-side fuse and relay module

A-J Relays
X Direction of travel

i Multiple designations are available for fuses for model series 230.4.

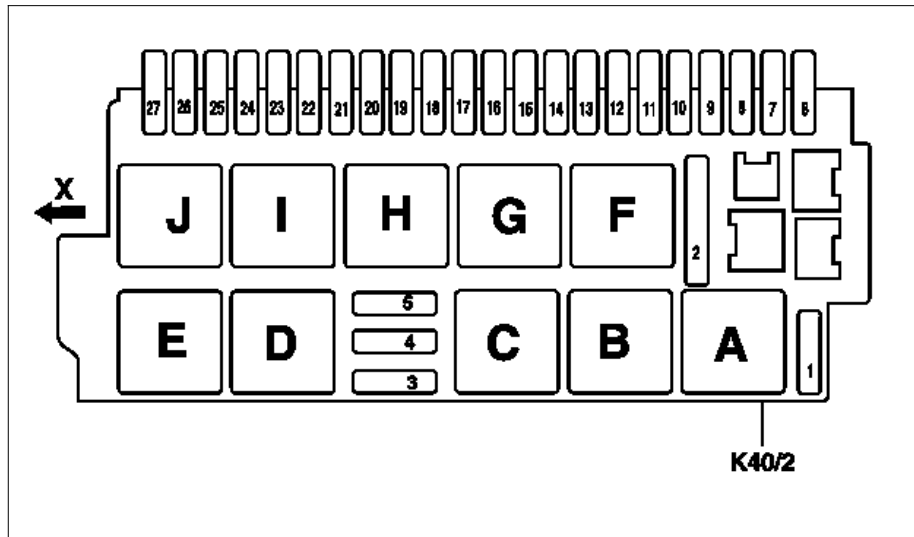

P54.15-2316-05

Fuse	Terminal	Cable ID (fused)	Fused function	Rating in amperes (A)
f1	30	-	<ul style="list-style-type: none"> Wiper park position heater relay (K40/2kA) 	20
f2	30	-	<ul style="list-style-type: none"> High pressure and return flow pump relay (K40/2kF) 	40
f3	30	-	<ul style="list-style-type: none"> Steering column forward/back adjustment relay 1 (K40/2kD) Steering column forward/back adjustment relay 2 (K40/2kE) 	15
f4	30	-	<ul style="list-style-type: none"> Steering column height adjustment relay 1 (K40/2kl) Steering column height adjustment relay 2 (K40/2kJ) 	15
f5	15R	-	<ul style="list-style-type: none"> Wiper On and Off relay (K40/2kH) 	40
f6	15	RDGN 0.75	Valid for code (292) left front and right sidebag: <ul style="list-style-type: none"> Restraint systems control unit (N2/7) 	7.5
f7	15	RDGN 1.5	<ul style="list-style-type: none"> Rear fuse and relay module (K40/5) 	5
f8	30	RD 0.75	<ul style="list-style-type: none"> Central gateway control unit (N93) 	10
f9	30	PKWH 2.5	Valid for left-hand drive vehicles: <ul style="list-style-type: none"> Left door control unit (N69/1) Valid for right-hand drive vehicles: <ul style="list-style-type: none"> Right door control unit (N69/2) 	40
f10	15	BKVT 0.75	<ul style="list-style-type: none"> Left front lamp unit (E1) Right front lamp unit (E2) 	10
f11	15R	BKYE 4.0	<ul style="list-style-type: none"> Circuit 15R/30 cutoff relay (K75) 	30
f12	15R	RDVT 0.75	Valid for code (292) left front and right sidebag: <ul style="list-style-type: none"> Restraint systems control unit (N2/7) 	7.5
f13	30	RDGN 1.5	Valid for code (487a) Active Body Control (ABC): <ul style="list-style-type: none"> ABC control unit (N51/2) 	15
f14	15R	BKGN 0.75	<ul style="list-style-type: none"> Windshield washer fluid pump (M5/1) 	7.5
f15	30	RDGN 1.0	<ul style="list-style-type: none"> Data link connector (X11/4) 	10
f16	15R	PKYE 1.0	Valid for code (359) TELE AID emergency call system, low-cost with code (491) US-version: <ul style="list-style-type: none"> Emergency call system control unit (N123/4) Valid for code (278) complete telephone preinstallation without portable CTEL: <ul style="list-style-type: none"> CTEL separation point (X39/37) Valid for code (352a) COMAND operating and display system: with code (498) Japan version: <ul style="list-style-type: none"> VICS power supply separation point (X137/1) 	5
f17	15R	RDYE 0.5	<ul style="list-style-type: none"> Vehicle-sensitive seat belt lock sensor (A60) 	5

f18	15R	-	Spare	-
f19	15	BKYE 1.0	Valid for engines 112, 113, SL55AMG: <ul style="list-style-type: none"> ● Cylinder 1 ignition coil (T1/1) ● Cylinder 2 ignition coil (T1/2) ● Cylinder 3 ignition coil (T1/3) ● Cylinder 4 ignition coil (T1/4) ● Cylinder 5 ignition coil (T1/5) ● Cylinder 6 ignition coil (T1/6) Valid for engine 113, SL55AMG: <ul style="list-style-type: none"> ● Cylinder 7 ignition coil (T1/7) ● Cylinder 8 ignition coil (T1/8) 	15
f20	15	BKGN 0.75	<ul style="list-style-type: none"> ● Data link connector (X11/4) 	7.5
f21	15R	BKYE 0.5	<ul style="list-style-type: none"> ● Instrument cluster (A1) 	5
f22	30	RDYE 0.5	<ul style="list-style-type: none"> ● Instrument cluster (A1) 	5
f23	30	RDWH 0.75 RDWH 1.0	Valid for code (581a) automatic air conditioning <ul style="list-style-type: none"> ● Coolant circulation pump (M13) ● AAC [KLA] control and operating module (N22) 	10
f24	30	RDWH 0.5	<ul style="list-style-type: none"> ● Stop lamp switch (S9/1) 	5
f25	30	RDYE 0.75	<ul style="list-style-type: none"> ● Alarm signal horn (H3) 	7.5
f26	30	RDBU 0.5	<ul style="list-style-type: none"> ● Lower control panel control unit (N72/) 	5
f27	30	RDVT 2.5	<ul style="list-style-type: none"> ● Left front seat adjustment control unit with memory (N32/1) 	30