


 


	Remove/install		
 Danger!	Risk of death caused by contact with parts conducting high voltages.	Do not touch parts which conduct high voltages. Persons with electronic implants (e.g. pacemakers) must not work on the ignition system.	AS15.10-Z-0001-01A
	Notes on avoiding damage to ignition system	Engine 137, 275, 285	AH15.10-P-0002-01L
1 	Remove ECI ignition module, right cylinder bank (N92/1) and ECI ignition module, left cylinder bank (N92/2) Remove/install ignition coil module	Engine 137.970 in model 215.378, 220.178/878 Engine 275.950 in model 215.376, 220.176, 275.951 in model 230.476, 275.980 in model 215.379, 220.179	AR15.12-P-1100L AR15.12-P-1100LA
2	Remove spark plugs (R4)	 Engine 137  Engine 275 	*BA15.10-P-1001-01A *BA15.10-P-1001-01C *112589010900
3	Install in the reverse order		