

MODEL 230.467 /474 /475 /476


- 1 Selector lever boot
- 2 Shift lever knob lock
- Selector lever handle

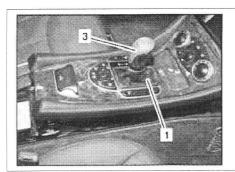

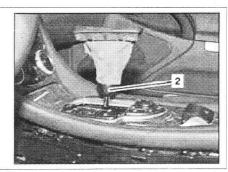

P68.20-2481-04

XX	Remove/Install		
1	Move selector lever to position "N"	i Secure vehicle to prevent it rolling.	,
2	Unclip selector lever boot (1) with assembly wedge	3	*110589035900
3.1	Move selector lever into position "P" and switch off ignition, detach remote control key from EILS control module	Only on vehicles with code (889) Keyless go i Repeat pressing keyless go start/stop button until the ignition has switched off. Remove keyless go transmitter card or remote control key from vehicle and keep outside of transmitter range (min. 2 m).	
4	Remove selector lever handle (3) together with selector lever boot (1)	i Turn lock of shift lever knob (2) 90° counterclockwise.	
5	Install in the reverse order		

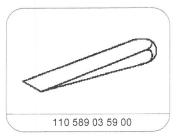

Assembly wedge

ETC Control 4N,7 EGS M15/3

Console Coner.