
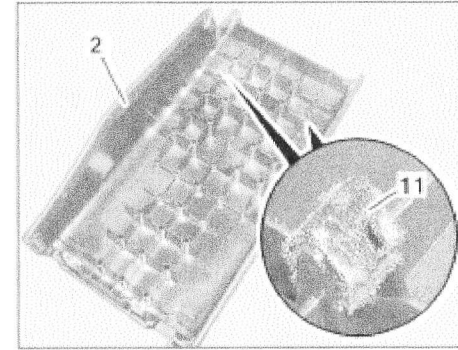
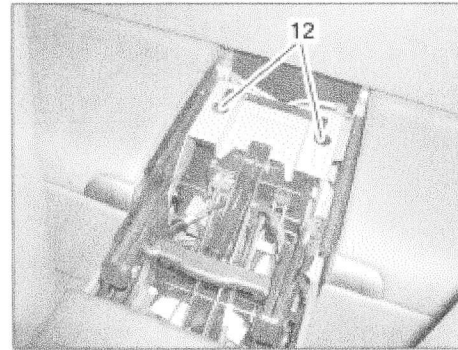


AR68.20-P-2320R	Remove/install storage box	20.12.05
-----------------	----------------------------	----------

MODEL 230.4





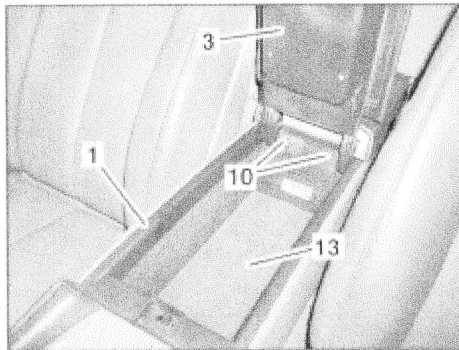


P68.20-2933-07

- 1 Storage box
- 2 Cover
- 3 Cover

- 10 Bolts
- 11 Retaining clamp

- 12 Guides
- 13 Insert mat

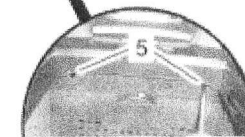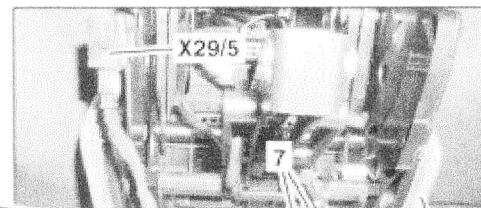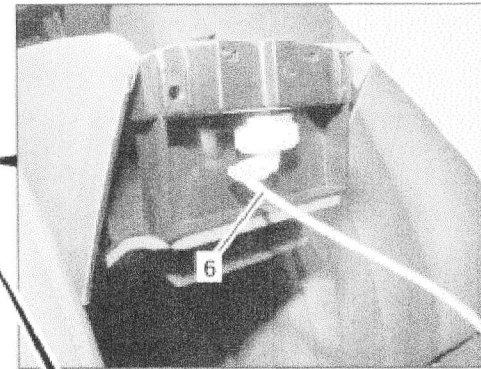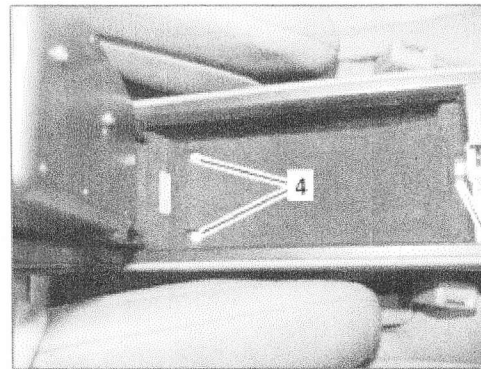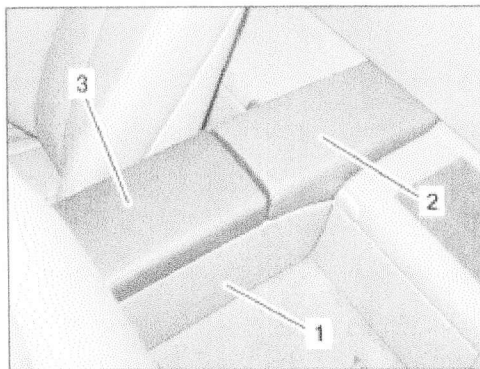

P68.20-3534-09




1 Stowage box
2 Cover
3 Lid
4 Nuts
5 Bolts

6 Central locking pneumatic line
7 Electrical connectors
8 Socket
9 Connector

X29/5 Armrest stowage compartment
illumination intermediate connector

Modification notes

8.7.03	Modification to repair method	Work steps 1 to 6	
--------	-------------------------------	-------------------	--

	Remove/install		
1	Open lid (3) and remove insert mat (13).		
2	Unscrew bolts (5, 10) and nuts (4)	 Bolts (5) are located behind access openings in stowage box (1).	
3	Close cover (3)		
4	Remove cover (2)	 Installation: Ensure that retaining clips (11) are seated properly in guides (12).	
5	Open lid (3)		
6	Lift front stowage box (1) until central locking pneumatic line (6) is accessible		
7	Disconnect central locking pneumatic line (6)		
8	Lift rear stowage box (1) until electrical connectors (7) and socket (8) are accessible		
9	Disconnect electrical connectors (7) and armrest stowage compartment illumination intermediate connector (X29/5)		
10	Unclip socket (8) from stowage box (1).		
11	Disconnect connector (9) from socket		