


ENGINE 272, 273 in MODEL 230

- 1 Cable
 2 Oil separator
 2a Bolts
 3 Left cylinder head cover
 4 Hose

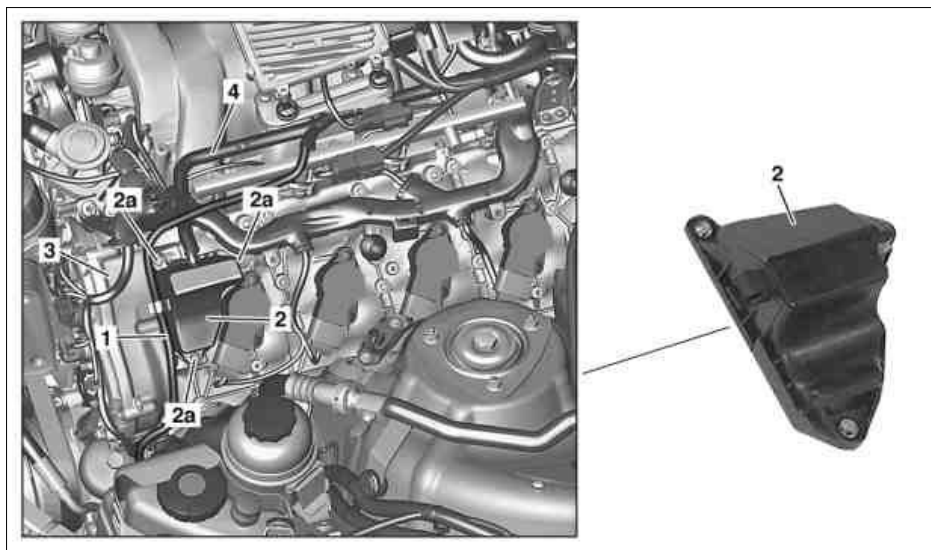

P01.20-2157-05

	Remove/install		
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Remove air filter housing		AR09.10-P-1150RX
2	Unclip the line (1) from the bracket at the oil separator (2)		
3	Detach hose (4)		
4	Remove bolts (2a)		*BA01.20-P-1003-01L
5	Remove oil separator (2) from the left cylinder head cover (3)	Intercept the engine oil that flows out with an absorbent rag. Installation: Inspect the gasket in the oil separator (2) for wear and damage, if necessary, replace the oil separator (2).	
6	Install in the reverse order		
	Checking		
7	Check engine oil level, correct if required.	See ↓ Engine - oil and filter change	AP18.00-P-0101RX
Danger!	Risk of accident caused by vehicle starting off by itself when engine is running. Risk of injury caused by contusions and burns during starting procedure or when working near the running engine Conduct engine test run and check the engine for leaks	Secure vehicle to prevent it from moving by itself. Wear closed and snug-fitting work clothes. Do not grasp hot or rotating parts.	AS00.00-Z-0005-01A
8			

Crankcase ventilation, cylinder head cover

Number	Designation		Engine 272	Engine 273
BA01.20-P-1003-01L	Bolt connecting oil separator to cylinder head cover	Nm	12	12