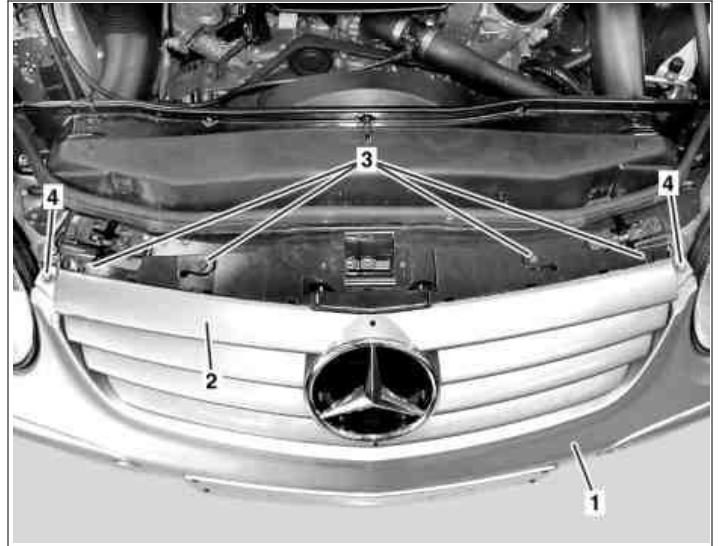


i The following work procedure is illustrated on vehicles up to 28.2.06 and serves as an example for removal of the left front lamp unit.

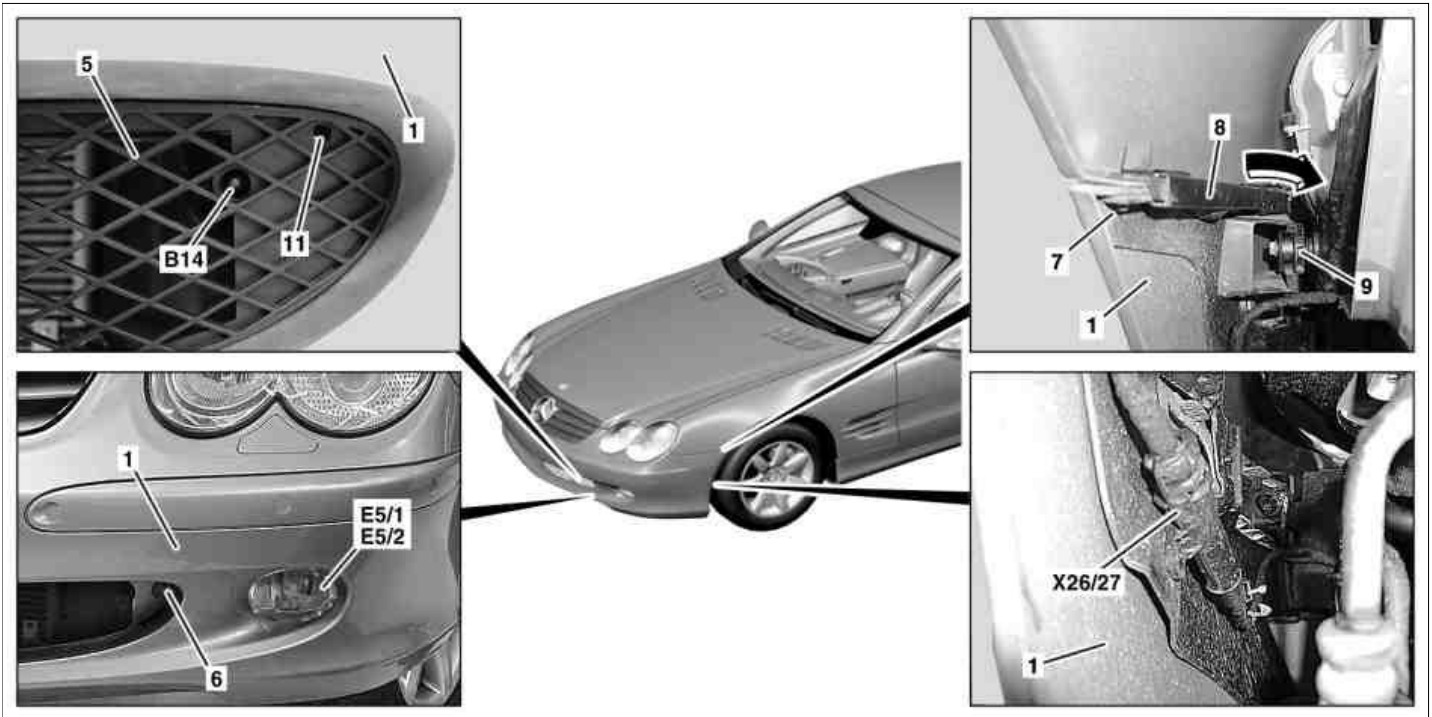
- 1 Unscrew bolts (3) at top of radiator grille (2).

i The radiator grille (2) remains on the front bumper (1).

- 2 Unscrew bolts (4) at top on front bumper (1).



P88.20-2847-11



P88.20-2849-09


- 3 Unscrew bolt (7) from clamping bracket (8).
 - 4 Pivot clamping bracket (8) toward center of vehicle (arrow), pull toward rear and remove.
 - 5 Disconnect front bumper PTS connector (X26/27).
- i** Only on vehicles with code (220) Parktronic system (PTS).
-
- 7 Remove outside temperature display temperature sensor (B14).

 
- 6 Unlock catch hooks on the left inlet grille (5) using a suitable screwdriver through the access opening (11). Pull air inlet grille (5) out of front bumper (1) until outside temperature display temperature sensor (B14) is accessible.

 
i Pull air inlet grille (5) out of front bumper (1) carefully to avoid damaging air inlet grille (5).

i Only for vehicles up to 28.2.06.

 
8 Unscrew nut (6) at bottom on front bumper (1).

 Do not pull electric wiring harness on outside temperature display temperature sensor (B14) to prevent damaging the outside temperature display temperature sensor (B14).

 
 On vehicles as of 1.3.06, the outside temperature display temperature sensor (B14) is installed in the cover frame of left front fog lamp (E5/1).

 On vehicles as of 1.3.06 the nut (6) is accessible through the corresponding access opening in the cover frame of left front fog lamp (E5/1) or right front fog lamp (E5/2).

9 Pull out front bumper (1) toward front.

 **Mounting:** Install front bumper (1) in bracket (9). Ensure that front bumper (1) is seated correctly in front engine compartment paneling.

10 Mask front bumper (1) and front fender (12) in transition area to left front lamp unit (E1) or right front lamp unit (E2) with suitable adhesive tape.

 To loosen or remove left front lamp unit (E1) or right front lamp unit (E2). Prevents paint damage on front bumper (1) and front fender (12) when removing left front lamp unit (E1) or right front lamp unit (E2).

11 Fasten in reverse order.



P88.20-2848-11