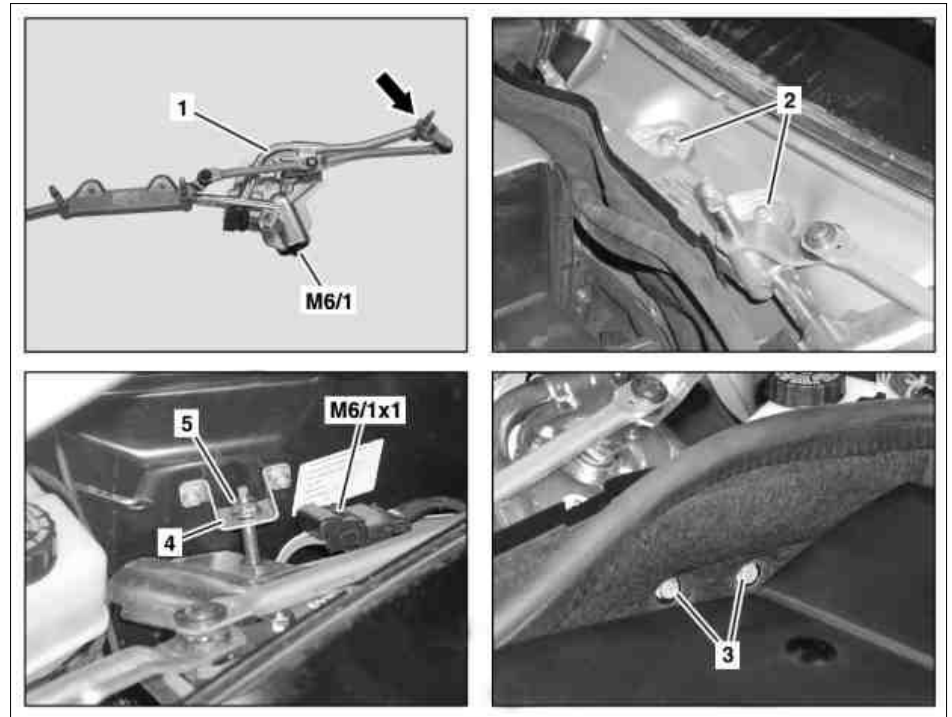


 
 

 
## MODEL 230.4

- 1 Wiper system  
 2 Securing nuts  
 3 Bolts  
 4 Bracket  
 5 Adjusting nut

- M6/1 Wiper motor  
 M6/1x1 Wiper motor connector



P82.30-2577-06

	Remove/install		
<b>⚠ Danger!</b>	<b>Risk of injury in the form of trapping or crushing, or even severing of limbs, if caught in windshield wiper mechanism</b>	Always remove ignition key when working on windshield wiper mechanism.	AS82.30-Z-0001-01A
1	Remove water collector		AR83.25-P-1402R
2	Remove mounting nuts (2) and concealed mounting nut on wiper shaft (arrow) of wiper system (1)		*BA82.30-P-1006-01A
3	Remove bolts (3) from bracket (4) of wiper system (1)	 Do not loosen adjusting nut (5). 	*BA82.30-P-1007-01A
4	Lift wiper system (1) and disconnect wiper motor connector (M6/1x1) from wiper motor (M6/1)		
5	Move wiper system (1) to vertical position and remove		
6	Install in the reverse order		

 Windshield wiper

Number	Designation	Model 230	
BA82.30-P-1006-01A	Nut/screw, wiper system to body	Nm	19
BA82.30-P-1007-01A	Nut/screw, wiper system to partition wall	Nm	10