


MODEL 230.467 /474 /475 /476

- 1 Front bumper
- 2 Bolt
- 3 Bolt
- 4 Terminal strip
- 5 Bracket
- 6 Electrical connector


- E5/1 Left fog lamp
- E5/2 Right fog lamp
- X26/27 Front bumper PTS connector
(with code (220a) Parktronic
system (PTS))

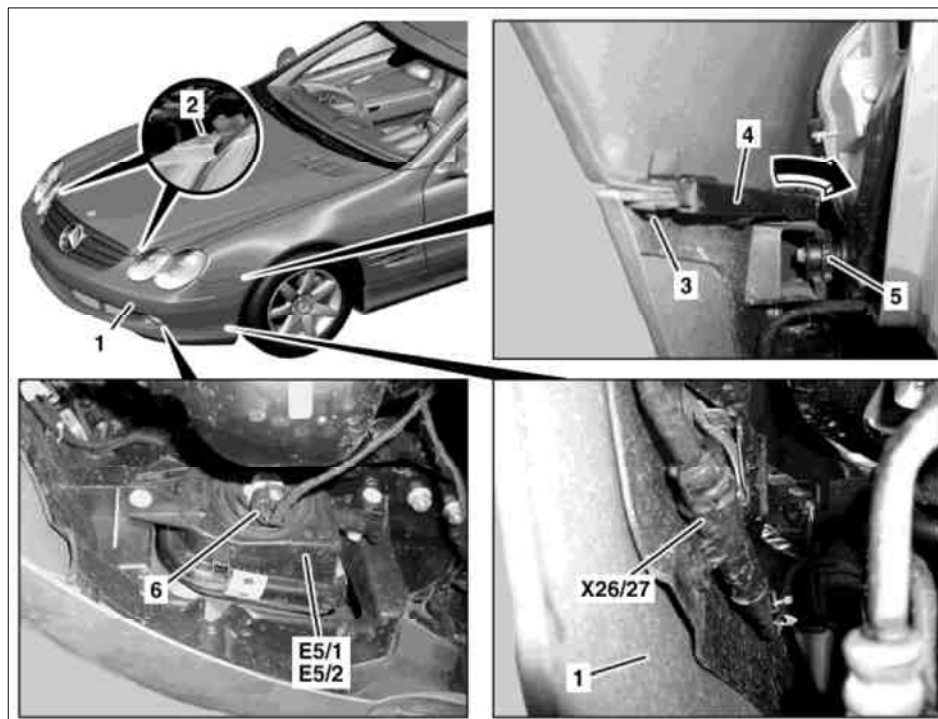

P88.20-2570-06


Shown on left side of front bumper

- 1 Front bumper
- 7 Air inlet grille
- 8 Access cover
- 9 Nut
- B14 Outside temperature display
temperature sensor

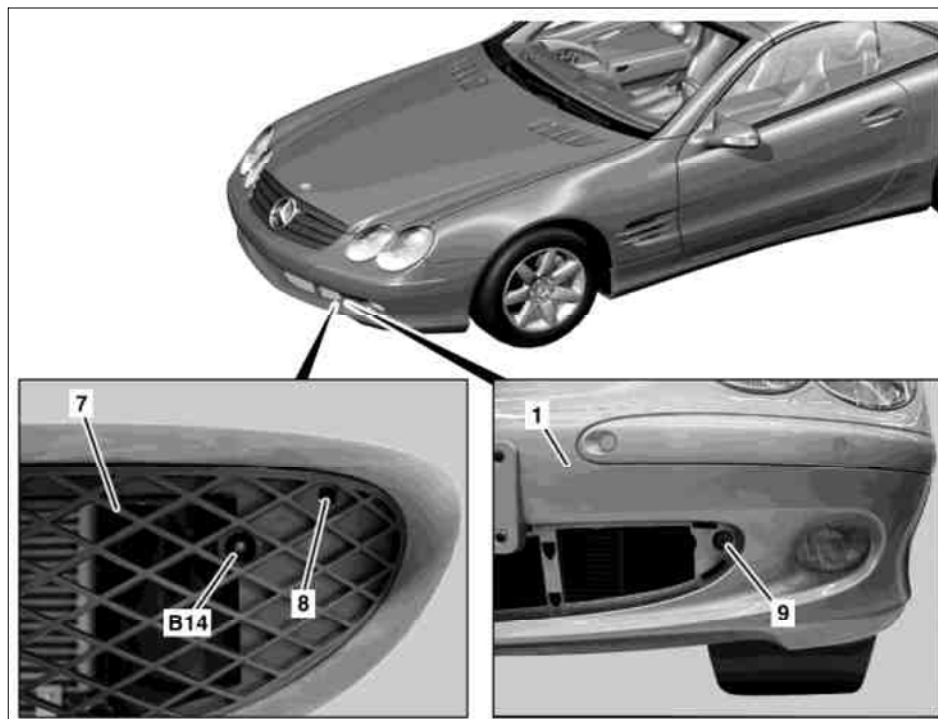

P88.20-2571-06

	Remove/Install		
1	Remove radiator trim		AR88.40-P-4001R
2	Unscrew bolts (2)		
3	Remove front part section of fender liner in front fender		AR88.10-P-1300R
4	Unscrew bolt (3) from terminal strip (4)		
5	Pivot terminal strip (4) to center of vehicle (arrow), pull toward rear and remove		

6	Disconnect electrical connectors (6) from left fog lamp (E5/1) and right fog lamp (E5/2)		
7.1	Unlock and separate front bumper PTS connector (X26/27)	On vehicles with code (220a) Parktronic system (PTS)	
8	Unlock catch lugs on air inlet grille (7) with suitable screwdriver through left and right access cover (8) and pull air inlet grille (7) out of front bumper (1) until outside temperature display temperature indicator (B14) is accessible	⚠ Carefully pull air inlet grille (1) out of front bumper (1) to prevent damaging air inlet grille (7)	
9	Pull outside temperature display temperature indicator (B14) out of air inlet grille (7)	⚠ Do not pull electrical line on outside temperature display temperature indicator (B14), otherwise outside temperature display temperature sensor (B14) can be damaged	
10	Unscrew nuts (9) on both sides		
11	Remove front bumper (1) toward front with aid of helper	⚠ Carefully remove front bumper (1) with aid of helper to prevent damaging paint on left and right front fender and front bumper (1) i Installation: Slide front bumper (1) into left and right bracket (5) at side. Ensure that front bumper (1) is seated properly on the bottom engine compartment paneling.	
12	Install in the reverse order		
13	Check adjustment for left fog lamp (E5/1) and right fog lamp (E5/2), correct is necessary		
 AP	Check and correct headlamp adjustment		AP82.10-P-8260R