

Item	Designation	Co
<u>A7/3</u>	SBC hydraulic unit	4A 12, 20, 28, 36, 44, 51,
<u>A7/3b1</u>	Front axle pre-pressure sensor	23,
<u>A7/3b2</u>	Reservoir sensor	24,
<u>A7/3b3</u>	Left front pressure sensor	25,
<u>A7/3b4</u>	Right front pressure sensor	26,
<u>A7/3b5</u>	Left rear pressure sensor	26,
<u>A7/3b6</u>	Right rear pressure sensor	27,
<u>A7/3m1</u>	High-pressure charging pump	3D
<u>A7/3n1</u>	SBC control module	29,
<u>A7/3y1</u>	Left front separation valve	2D
<u>A7/3y2</u>	Right front separation valve	1D
<u>A7/3y3</u>	Front axle balance valve	2D
<u>A7/3y4</u>	Rear axle balance valve	1D
<u>A7/3y6</u>	Left front inlet control valve	1C
<u>A7/3y7</u>	Left front outlet control valve	2C
<u>A7/3y8</u>	Right front inlet control valve	1C
<u>A7/3y9</u>	Right front outlet control valve	2C
<u>A7/3y10</u>	Left rear inlet control valve	1B
<u>A7/3y11</u>	Left rear outlet control valve	2B
<u>A7/3y12</u>	Right rear inlet control valve	1B
<u>A7/3y13</u>	Right rear outlet control valve	2B
<u>B24/15</u>	Turn rate and lateral acceleration sensor	70I
<u>B37/1</u>	SBC pedal value sensor	5L
<u>F32</u>	Front prefuse	16I
<u>F32f7</u>	Fuse 7	15I
<u>K40/2</u>	Driver-side fuse and relay module	32I
<u>K40/2f24</u>	Fuse 24	31I
<u>K40/4</u>	Fuse and relay module (front passenger)	12I 64I
<u>K40/4f33</u>	Fuse 33	10I
<u>K40/4f34</u>	Fuse 34	8L
<u>K40/4f35</u>	Fuse 35	13I
<u>K40/4f36</u>	Fuse 36	62I
<u>K40/4f42</u>	Fuse 42	13I
<u>K40/4f45</u>	Fuse 45	62I
<u>L6/1</u>	Left front wheel speed sensor	39I
<u>L6/2</u>	Right front wheel speed sensor	46I
<u>L6/3</u>	Left rear wheel speed sensor	19I
<u>L6/4</u>	Right rear wheel speed sensor	20I

<u>N10/8</u>	Rear SAM control module	221
<u>N10/10</u>	Driver-side SAM control module	431
<u>N10/11</u>	Passenger-side SAM control module	491
<u>N47-5</u>	ESP, SPS and BAS [ESP, PML and BAS] control module	54, 60, 68, 74,
<u>N69/5</u>	Keyless Go control module	361
<u>N73</u>	DI control module	291
<u>S9/1</u>	Stop lamp switch (4-pin)	261
<u>S10/1</u>	Left front brake pad contact sensor	401
<u>S10/2</u>	Right front brake pad contact sensor	471
<u>U82</u>	Valid for Keyless Go	341
<u>U425</u>	Valid for SL 55 AMG	7F 601
<u>U428</u>	Valid for SL 65 AMG and SL 600	7F 601
<u>U834</u>	Valid for SL 500	7F 601
<u>W3/1</u>	Ground (right front wheelhousing)	471
<u>W10/3</u>	Ground (starter battery partition wall)	401
<u>W14/3</u>	Ground (SBC - right)	6E
<u>W34/1</u>	Ground (electronics - left footwell)	561
<u>X11/4</u>	Data link connector	591
<u>X30/18</u>	Left voltage distributor connector (CAN C)	731
<u>X35/15</u>	Module box separation point	181 671
<u>X62/1</u>	Left rear axle VSS [GES] sensor/brake pad wear sensor connector	18.
<u>X62/2</u>	Right rear axle VSS [GES] sensor/brake pad wear sensor connector	20.
<u>X62/6</u>	Right front axle multiple circuit junction connector, in component compartment	45.
<u>X62/7</u>	Left front axle multiple circuit junction connector, in component compartment	38.
<u>X99/5</u>	Keyless Go separation point	351
<u>X151</u>	SBC feed circuit 30 connector	151
<u>Y10</u>	SPS [PML] solenoid valve	561
<u>Z6/33</u>	Diagnostic cables connector sleeve	211 591
<u>Z50/1</u>	F1f10 connector sleeve, circuit15	4G 481

