


MODEL 230

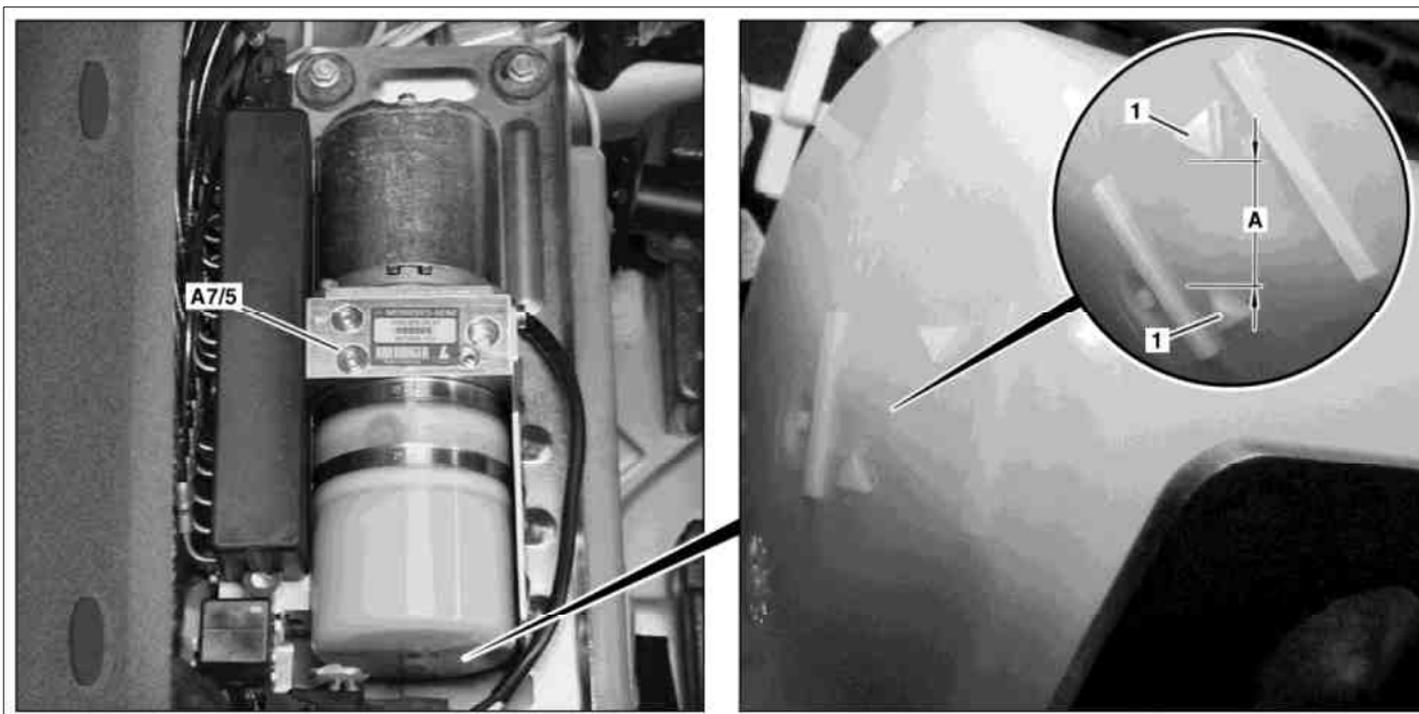

1 Oil level markings

A7/5 RVC [UVS] hydraulic unit

A Oil level

P77.37-2069-09


	Inspecting		
Danger!	Risk of injury to skin or eyes from hydraulic fluid spraying out under pressure. Risk of poisoning from swallowing hydraulic fluid.	Depressurize the hydraulic system completely before starting any work on the system. Wear protective clothing and eye protection.	AS00.00-Z-0013-01A
1	Open and close Vario roof with the soft top switch	See Owner's Manual The hydraulic system is bled by opening and closing the roof. After bleeding the Vario roof must remain closed	
2	Open trunk lid		
3	Remove spare wheel cover from trunk		
4	Read off oil level (A) at oil reservoir of RVC hydraulic unit (A7/5), correct if necessary	The oil level (A) must be located between the two oil level markings (1) when the Vario roof is closed. If the oil level (A) has to be corrected: - Correct oil level of hydraulic unit Filler screw on hydraulic unit 	AR77.37-P-3501-01R *BA77.37-P-1005-01A *BF77.37-P-1001-01A *230589016300
5	Place spare wheel cover into trunk and close trunk lid		

Hydraulic soft top

Number	Designation	Model 230	
BA77.37-P-1005-01A	Filler screw on hydraulic unit	Nm	8,0

Soft top hydraulic system

Number	Designation	Model 230
BF77.37-P-1001-01A	Filling quantities Soft top hydraulic system oil reservoir	Liters 0.132
	Specifications for Service Products	Sheet BB00.40-P-0343-00A

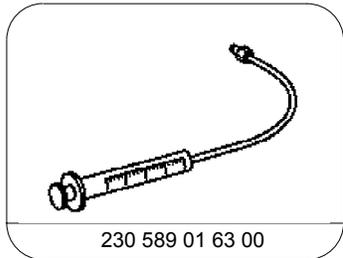

230 589 01 63 00

Filling syringe