



P88.50-2431-09

Shown with code (889) Keyless Go

- | | | |
|---------------------------|---------------------|---|
| 1 Trunk lid | 7 Relay lever | S62/21 Trunk lid Keyless Go button (with code (889) Keyless Go up to 31.8.06) |
| 2 Bolts | 8 Panel | S88/8 Trunk lid external operation switch |
| 3 Side flap drive | 9 Bolts | S134 Trunk lid locking switch |
| 4 Side flap drive rebound | 10 Trunk lid handle | |
| 5 Nuts | 11 lock cylinders | |
| 6 Ball head | | |

BT	Remove/install		
	Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
1	Remove outer paneling on trunk lid (1)		AR88.50-P-5080R
2	Unscrew bolts (2) on side flap drive (3)		
3	Unclip left and right side flap drive rebound (4) from trunk lid (1) until side flap drive (3) can be detached from trunk lid (1)	i Installation: Replace damaged clips.	
4	Remove side flap drive (3) from trunk lid (1) until components below are accessible	i Do not disconnect electrical connector on side flap drive (3).	
5	Unclip ball head (6) from relay lever (7)		
6	Unscrew nuts (5) and unclip cover (8)		
7	Remove bolts (9)	Nm	*BA88.50-P-1016-01A
8	Remove trunk lid handle (10) toward inside from trunk lid (1) until electrical connectors on trunk lid lock switch (S134) and trunk lid outer actuation switch (S88/8) are accessible	! Carefully remove trunk lid handle (10) to prevent damaging electrical connectors.	
9	Disconnect electrical connectors from trunk lid lock switch (S134) and trunk lid outer actuation switch (S88/8)		
10	Disconnect electrical connector from trunk lid Keyless Go button (S62/21)	With code (889) Keyless Go up to 31.8.06	
11	Remove stop for selector drum on trunk lid handle (10) 90° trunk lid handle position, dropped	When replacing trunk lid handle (10) on vehicles up to vehicle ident. end no. 072381. Vehicles as of vehicle ident. end no. 072382.	AR88.50-P-5060-01R BT88.50-P-1000-01R
12	Remove trunk lid contact switch from trunk lid handle (10)	When replacing trunk lid handle (10) on vehicles up to vehicle ident. end no. 072381.	
13	Remove lock cylinder (11) from trunk lid handle (10)	When replacing trunk lid handle (10).	AR88.50-P-5061R
14	Install in the reverse order		

Nm Trunk lid

Number	Designation	Model 230
BA88.50-P-1016-01A	Bolt, handle plate to trunk lid	Nm 9