


i The trunk lid can be adjusted to the assembly position when the Vario roof is closed or open

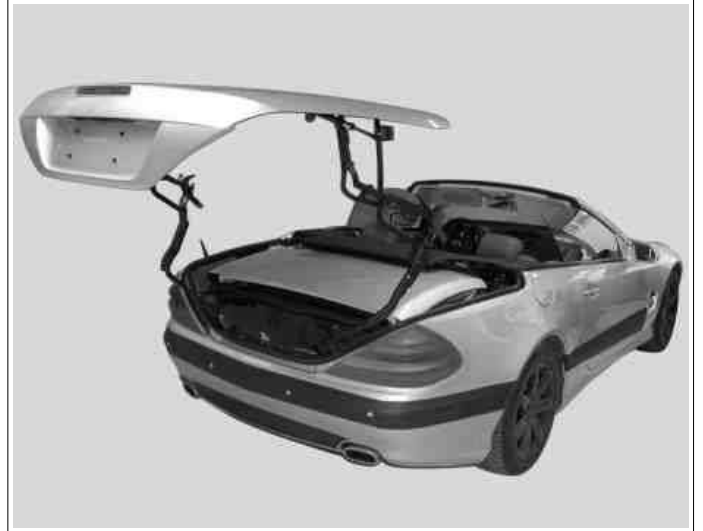


P88.50-2281-11

- 1 Open trunk lid.
- 2 Unclip covers above lock and unlock screws (1) from side luggage compartment lining (2).
i Previously move open Vario roof to load assist position.
- 3 Turn lock and unlock screws (1) counterclockwise as far as the stop.
i Tubular frame locks are unlocked.



P88.50-2282-11

- 4 Raise tubular frame (3) at rear with aid of helper. Support trunk lid by hand

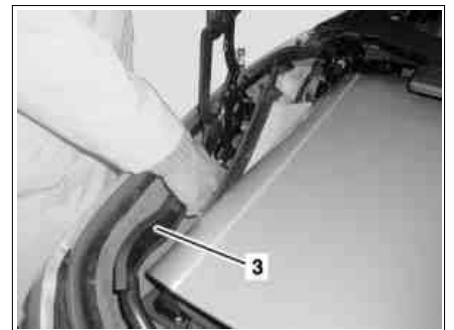

P88.50-2283-01

- 5 Support trunk lid with a suitable object, e.g. an adjustable support brace.
⚠ Do not put trunk lid under load in wing position to prevent damaging tubular frame and trunk lid hinge.



P88.50-2312-01

Move trunk lid to assembly position with Vario roof switch:

- 6 Actuate Vario roof switch until the trunk lid is fully upright as shown in the diagram.
- 7 Unlock trunk lid lock and move the trunk lid to the assembly position.



P88.50-2294-01

- 8 Support trunk lid with a suitable object, e.g. an adjustable support brace.
 - ⓘ Do not put trunk lid under load in wing position to prevent damaging tubular frame and trunk lid hinge.
- 9 Return trunk lid to normal position in the reverse sequence.



P88.50-2312-01