


Document number: pe15.00-p-2103-97saa

Document title: Wiring diagram for engine start/stop

Code:	Designation:	Position:
A0	Color code key	32L
B95	Battery sensor	24L
F25/7	Backup battery fuse	11L
F32/3	Engine compartment prefuse box	19L
F32/4	Interior prefuse box	2L
F32/4f4	Fuse 4	1K
G1	On-board electrical system battery	22L
G1/13	ECO start/stop function additional battery	9L
K98	ECO start/stop function relay	6L
N10/1	Front SAM control unit with fuse and relay module	12A
N10/1	Front SAM control unit with fuse and relay module	6A
N10/1	Front SAM control unit with fuse and relay module	28L
S62/43	Left engine hood contact switch	13L
U12	Valid for left-hand drive vehicles	13F
U13	Valid for right-hand drive vehicles	13F
U968	Valid for mild hybrid drive	26E
U977	Not valid for mild hybrid drive	26E
V19	ECO start/stop function diode	15L
W10/4	Ground (2nd battery)	24G
W15/1	Ground (right footwell)	14G
W17	Ground (right rear seat)	6G
W34/1	Ground (electronics - left footwell)	14G
W54	Ground (right rear wheelhouse)	9G
X225	ECO start/stop function additional battery electrical connector	11G

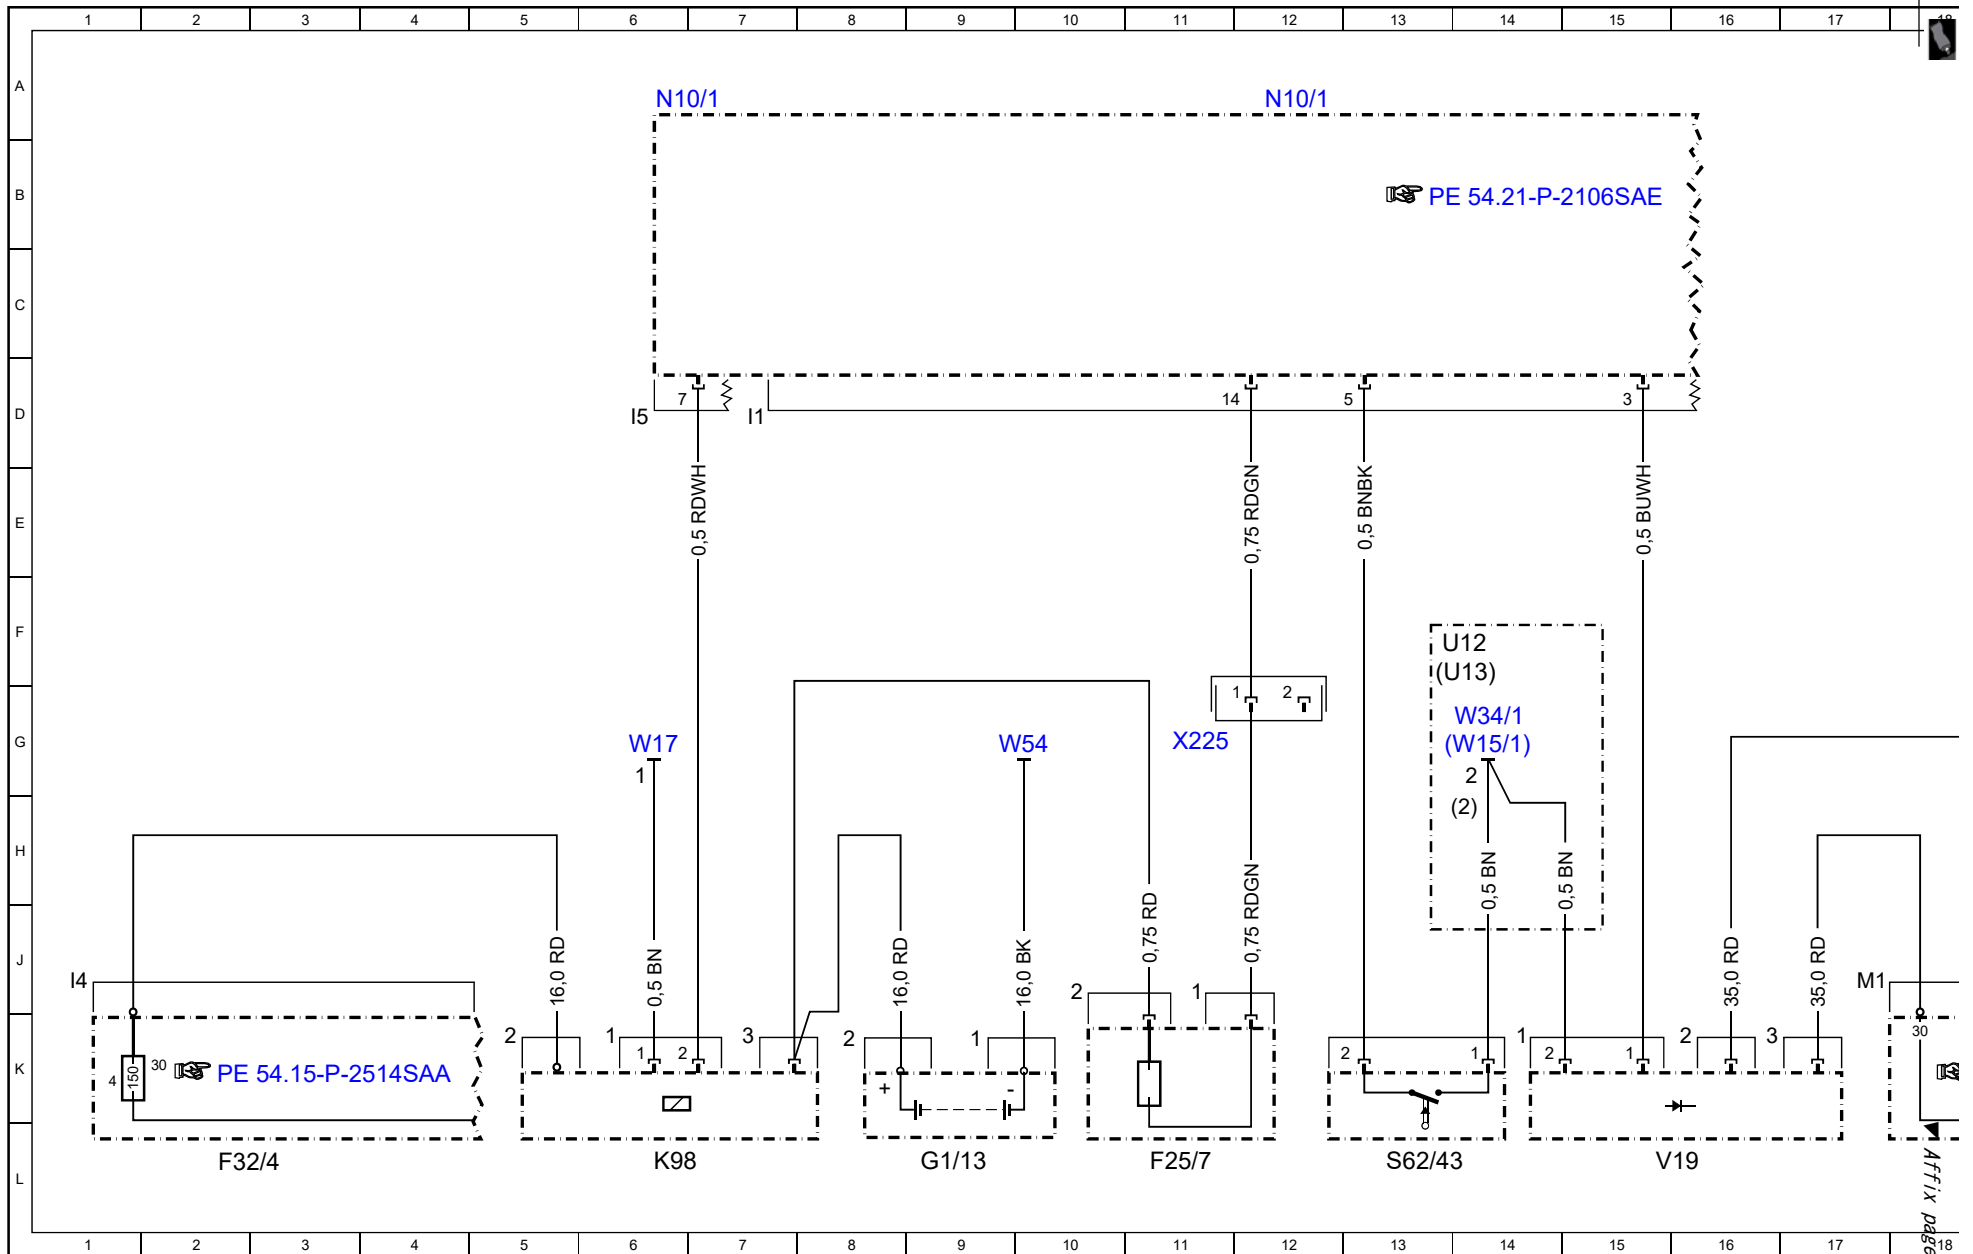

Affix page 2 here

