AR80.57-P-1000R MODEL 230.4




1 Trim ring

3 Bowden cable

N73 EIS [EZS] control unit

2 Electrical connectors

| XX | Remove/install | | |
|----|--|--|--------------------|
| • | Information on preventing damage to electronic components due to electrostatic discharge | | AH54.00-P-0001-01A |
| 1 | Switch off the ignition and remove the transmitter key from the EIS control unit | Don vehicles with code (889) Keyless-Go, press Keyless-Go start/stop button repeatedly until ignition is switched off. Remove Keyless-Go transmitter card or transmitter key from vehicle and store beyond reach of transmitter (min. 2 m). | |
| 2 | Remove cover below dashboard on left | i Do not remove rotary light switch. | AR68.10-P-1500R |
| 3 | Unscrew rosette (1) from EIS control unit (N73) with claw-type wrench | 3 | *210589000700 |
| 4 | Remove bottom section of dashboard on driver's side | Vehicles with Code 494 i Do not remove rotary light switch. | AR68.10-P-1505R |
| 5 | Disconnect electrical connectors (2) from EIS control unit (N73) | | |
| 6 | Unclip control cable (3) from EIS control unit (N73) and remove EIS control cable (N73) | | |
| 7 | Install in the reverse order | | |

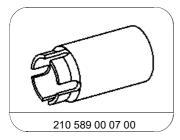

Claw-type wrench for rosette on ignition switch