

**Document number:** pe54.15-p-2104-97ka

**Document title:** Wiring diagram of driver-side fuse and relay box

<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
A0	Color code key	
F32	Front prefuse	13L
F32f2	Fuse 2	
F32f3	Fuse 3	12K
K40/2	Driver-side fuse and relay module	12A
K40/2	Driver-side fuse and relay module	4A
K40/2	Driver-side fuse and relay module	19A
K40/2	Driver-side fuse and relay module	36A
K40/2	Driver-side fuse and relay module	44A
K40/2	Driver-side fuse and relay module	28A
K40/2	Driver-side fuse and relay module	50A
K40/2f1	Fuse 1	6A
K40/2f10	Fuse 10	1E
K40/2f11	Fuse 11	2E
K40/2f12	Fuse 12	3E
K40/2f13	Fuse 13	4E
K40/2f14	Fuse 14	5E
K40/2f15	Fuse 15	6E
K40/2f16	Fuse 16	7E
K40/2f17	Fuse 17	8E
K40/2f18	Fuse 18	9E
K40/2f19	Fuse 19	10E
K40/2f2	Fuse 2	47A
K40/2f20	Fuse 20	11E
K40/2f21	Fuse 21	12E
K40/2f22	Fuse 22	13E
K40/2f23	Fuse 23	14E
K40/2f24	Fuse 24	15E
K40/2f25	Fuse 25	16E
K40/2f26	Fuse 26	17E
K40/2f27	Fuse 27	18E
K40/2f3	Fuse 3	11A
K40/2f4	Fuse 4	16A
K40/2f5	Fuse 5	41A
K40/2f6	Fuse 6	2C
K40/2f7	Fuse 7	2C
K40/2f8	Fuse 8	4C
K40/2f9	Fuse 9	4C
K40/2kA	Wiper park position heater relay	7A

**Document number:** pe54.15-p-2104-97ka


**Document title:** Wiring diagram of driver-side fuse and relay box

<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
K40/2kB	Circuit 15 relay	23A
K40/2kC	Circuit 15R relay	20A
K40/2kD	Jacket tube in/out adjustment relay 1	12A
K40/2kE	Jacket tube in/out adjustment relay 2	9A
K40/2kF	High pressure and return pump relay	51A
K40/2kG	Wiper stage 1 and 2 relay	30A
K40/2kH	Wiper On and Off relay	42A
K40/2kI	Jacket tube height adjustment relay 1	18A
K40/2kJ	Jacket tube height adjustment relay 2	14A
K40/4	Passenger-side fuse and relay module	34L
K40/4	Passenger-side fuse and relay module	37L
K40/5	Rear fuse and relay module	43L
M20	Steering column adjustment motor group	21L
M20m1	Fore/aft adjustment motor	21L
M20m2	Height adjustment up/down motor	23L
M46	SEQ [ASG] hydraulic pump	48L
M6/1	Wiper motor	40L
M6/1x1	Wiper motor connector	39K
N10/10	Driver-side SAM control unit	17L
N10/10	Driver-side SAM control unit	54A
N10/10	Driver-side SAM control unit	58A
N15/6	Automated manual transmission control unit	51L
N2/7	Restraint systems control unit	26L
N73	EIS [EZS] control unit	30L
R2/10	Wiper park heater	46L
U12	Valid for left-hand drive vehicles	53H
U12	Valid for left-hand drive vehicles	23H
U12	Valid for left-hand drive vehicles	11H
U127	Valid for engine 272, engine 273 KE	35H
U127	Valid for engine 272, engine 273 KE	
U13	Valid for right-hand drive vehicles	53J
U13	Valid for right-hand drive vehicles	23J
U13	Valid for right-hand drive vehicles	11H
U137	Valid for M113.963, M113.992, M113.995	41J
U152	Valid for engine 156	
U19	Valid for M112.973, M113.963	32H
U425	Valid for SL 55 AMG	32H
U428	Valid for SL 65 AMG and SL 600	41J
U428	Valid for SL 65 AMG and SL 600	35H


**Document number:** pe54.15-p-2104-97ka

**Document title:** Wiring diagram of driver-side fuse and relay box

<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
U428	Valid for SL 65 AMG and SL 600	
U428	Valid for SL 65 AMG and SL 600	
U674	Valid for automated manual transmission (SEQ) [ASG]	47G
W3/1	Ground (right front wheelhouse)	45L
W36	Ground (right footwell)	47L
W36	Ground (right footwell)	54L
W36	Ground (right footwell)	24L
W37	Ground (left footwell)	54L
W37	Ground (left footwell)	24L
X22/18	SEQ (ASG) connector, 2-pin	48H
X64/3	Wiper park heater connector	45H
Z3/4	Circuit 15 (unfused) connector sleeve (feed from ignition/starter switch - S2/1)	30H

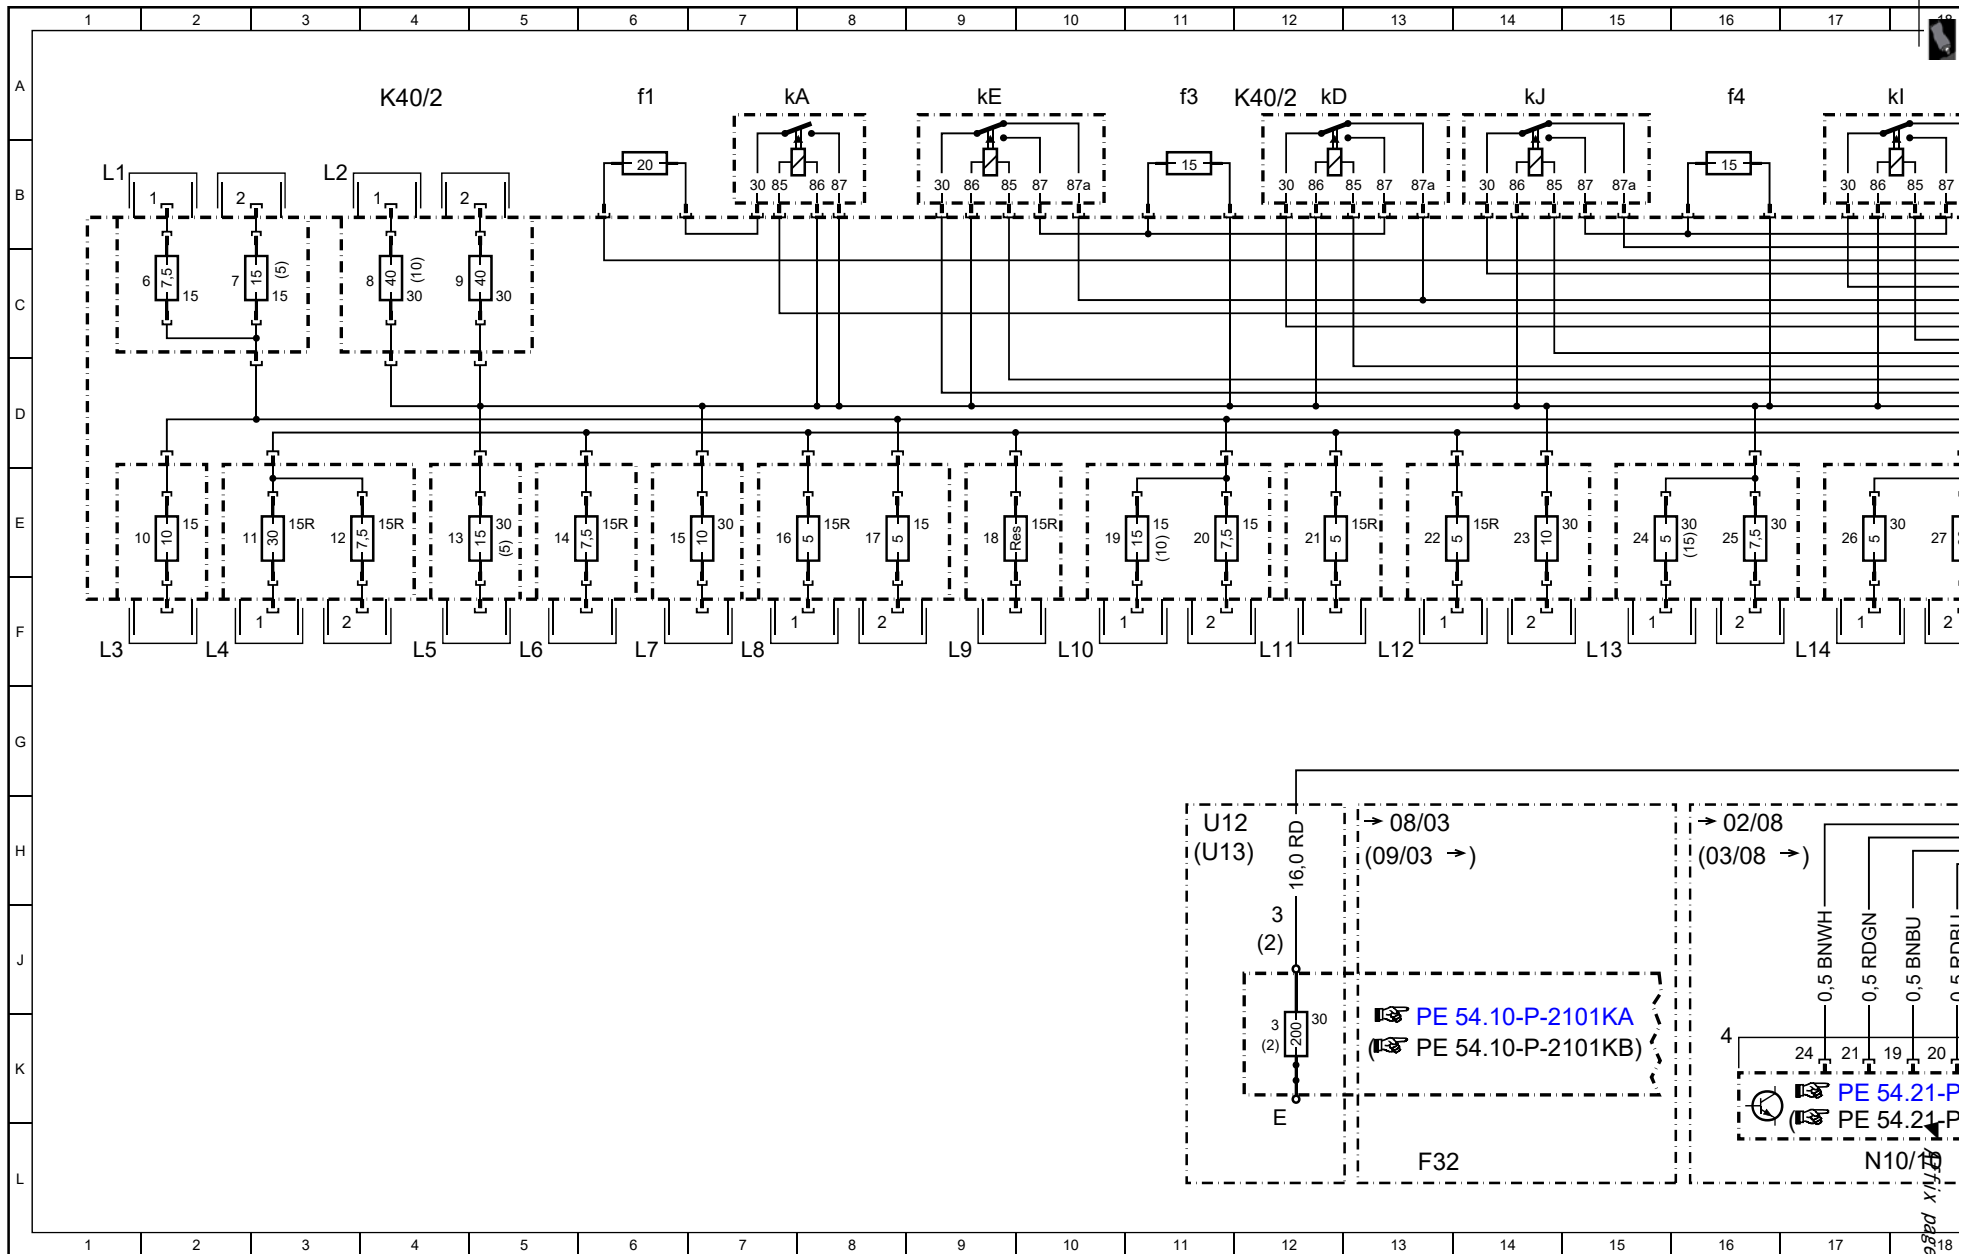

Fix page 2 here

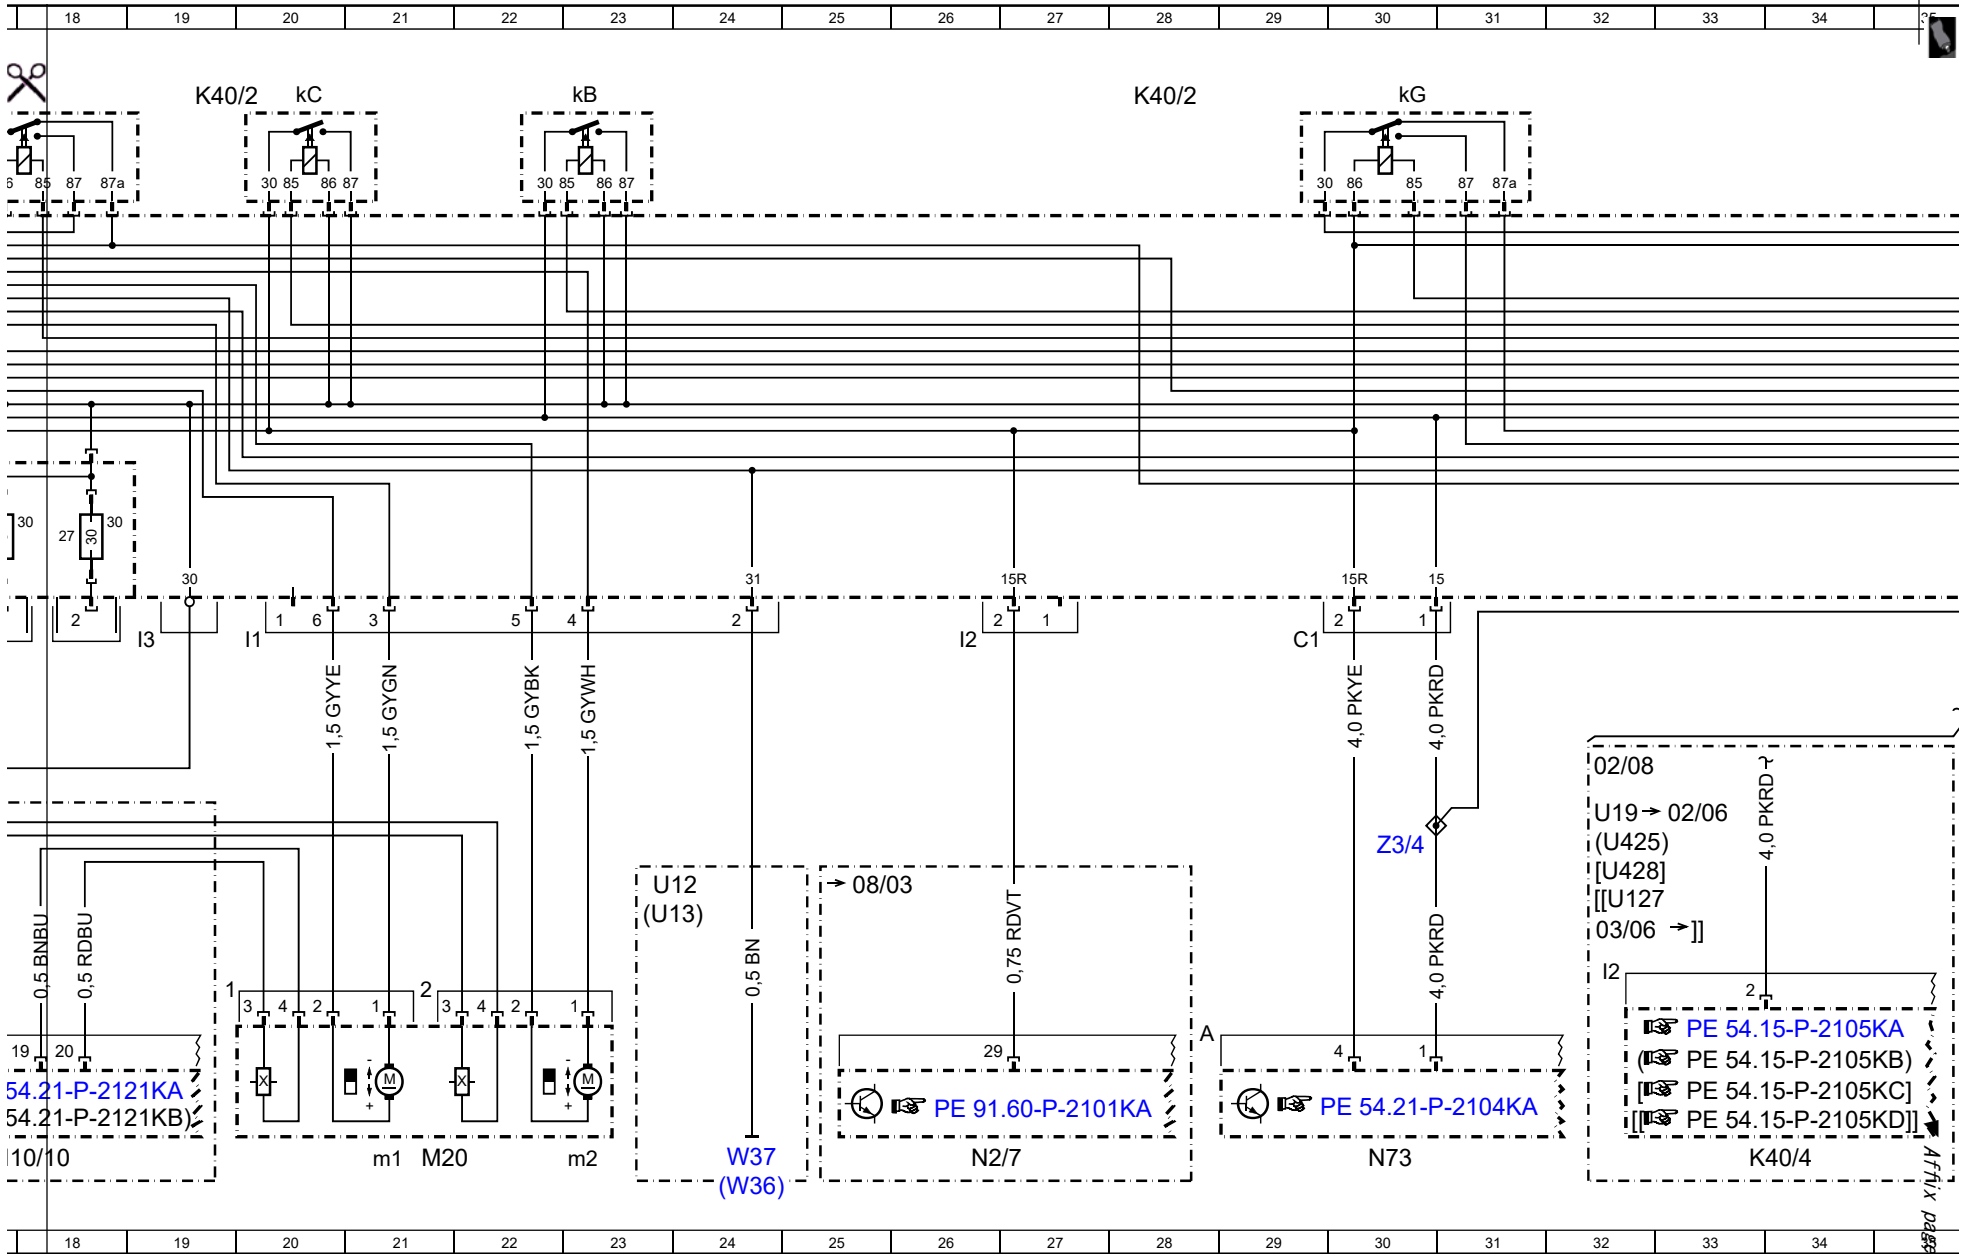

02/08  
 U19 → 02/06  
 (U425)  
 [U428]  
 [[U127  
 03/06 → ]]


I2


- PE 54.15-P-2105KA
- PE 54.15-P-2105KB
- PE 54.15-P-2105KC
- PE 54.15-P-2105KD

K40/4

Out here

Affix page 3 here

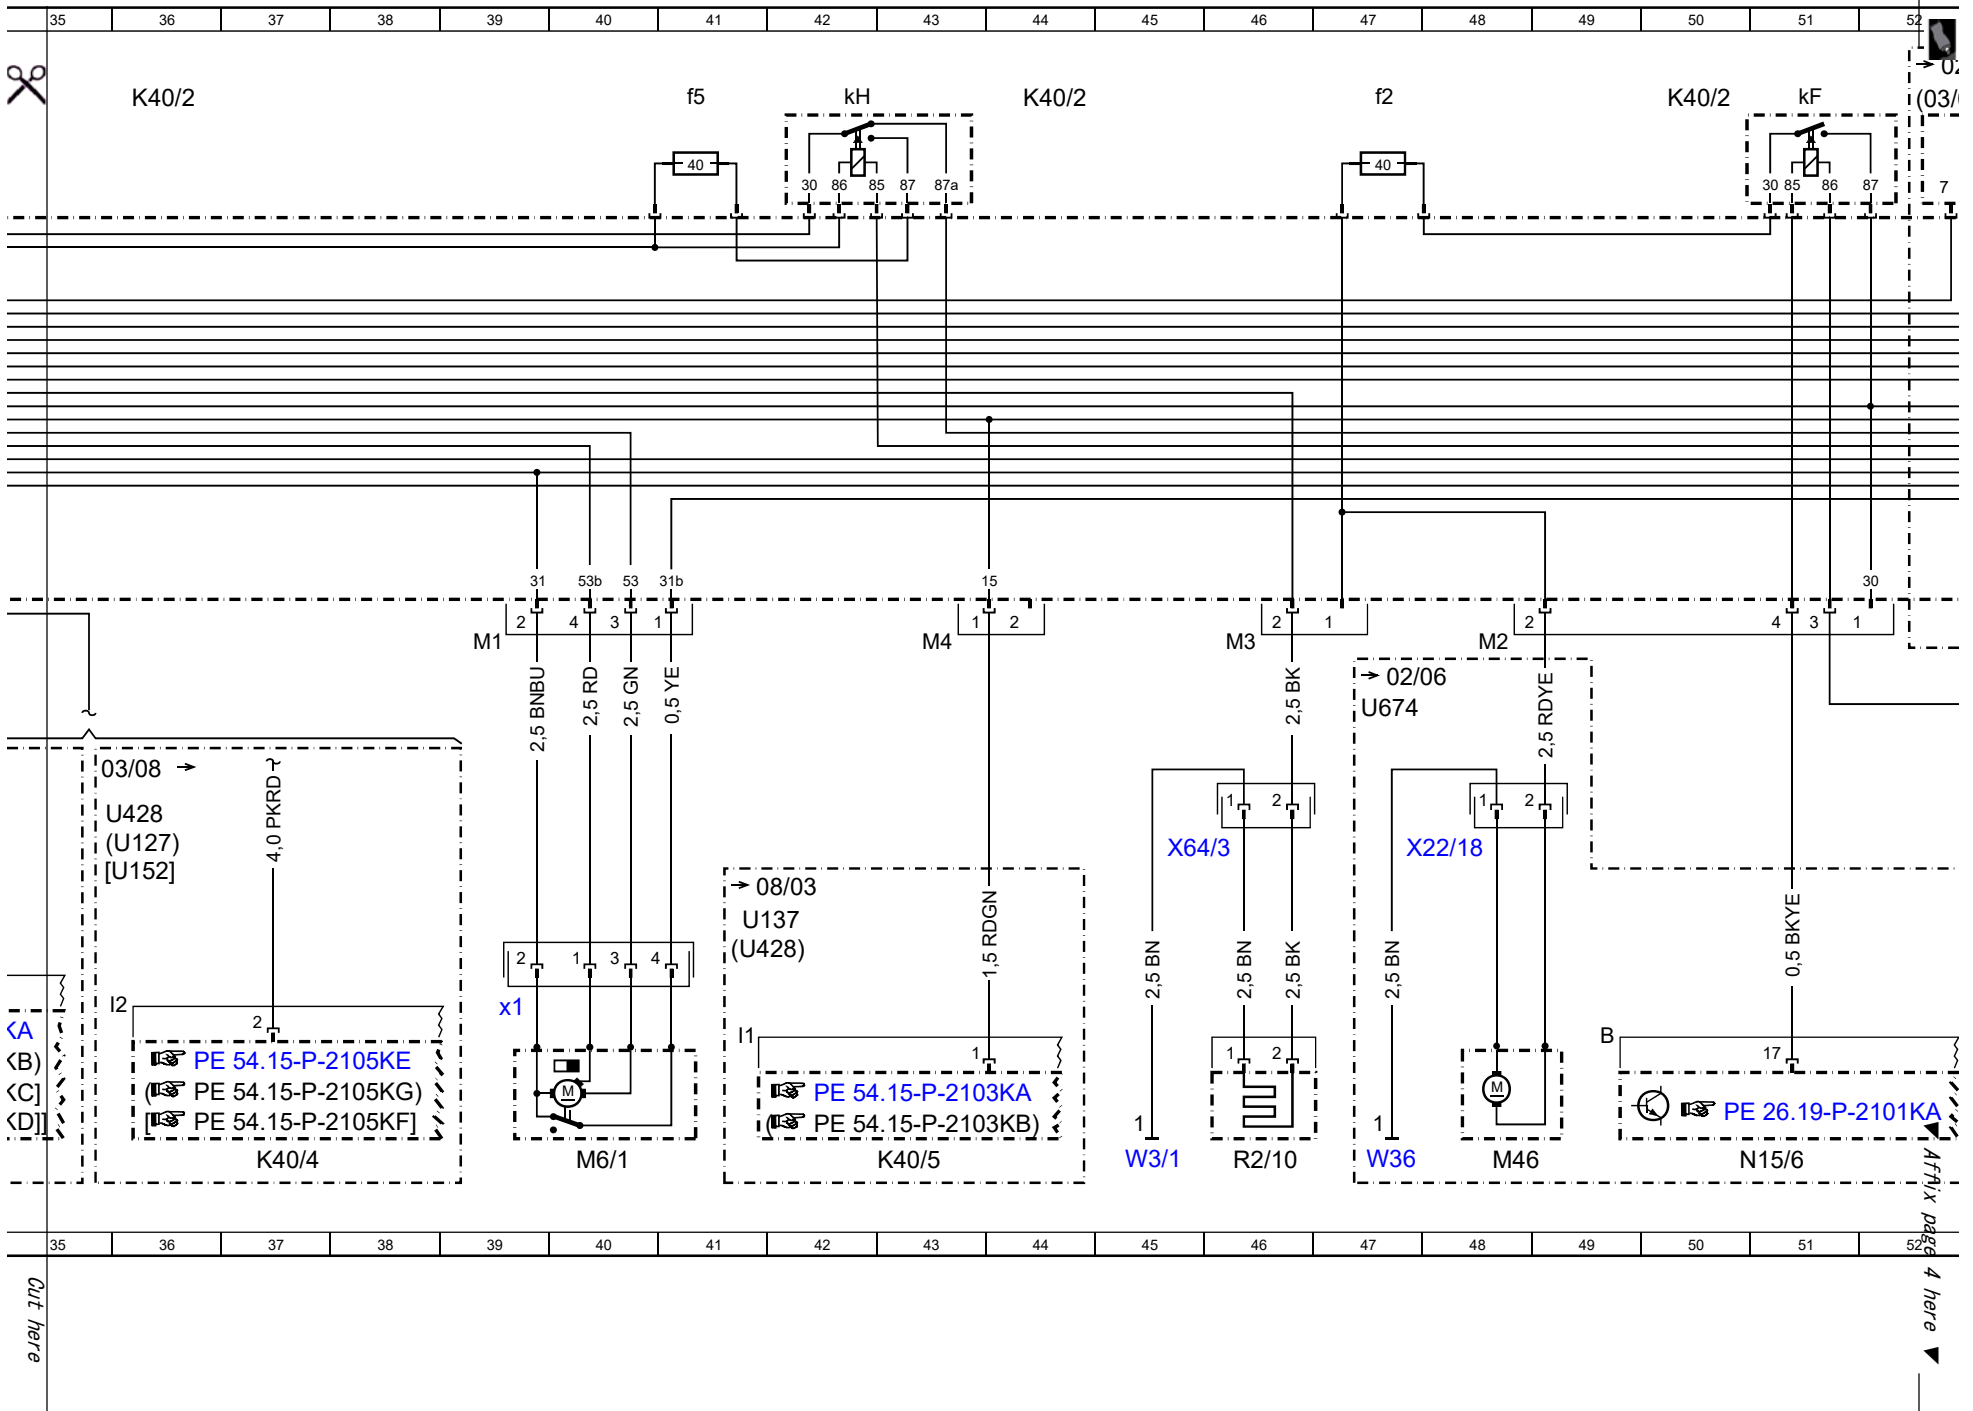

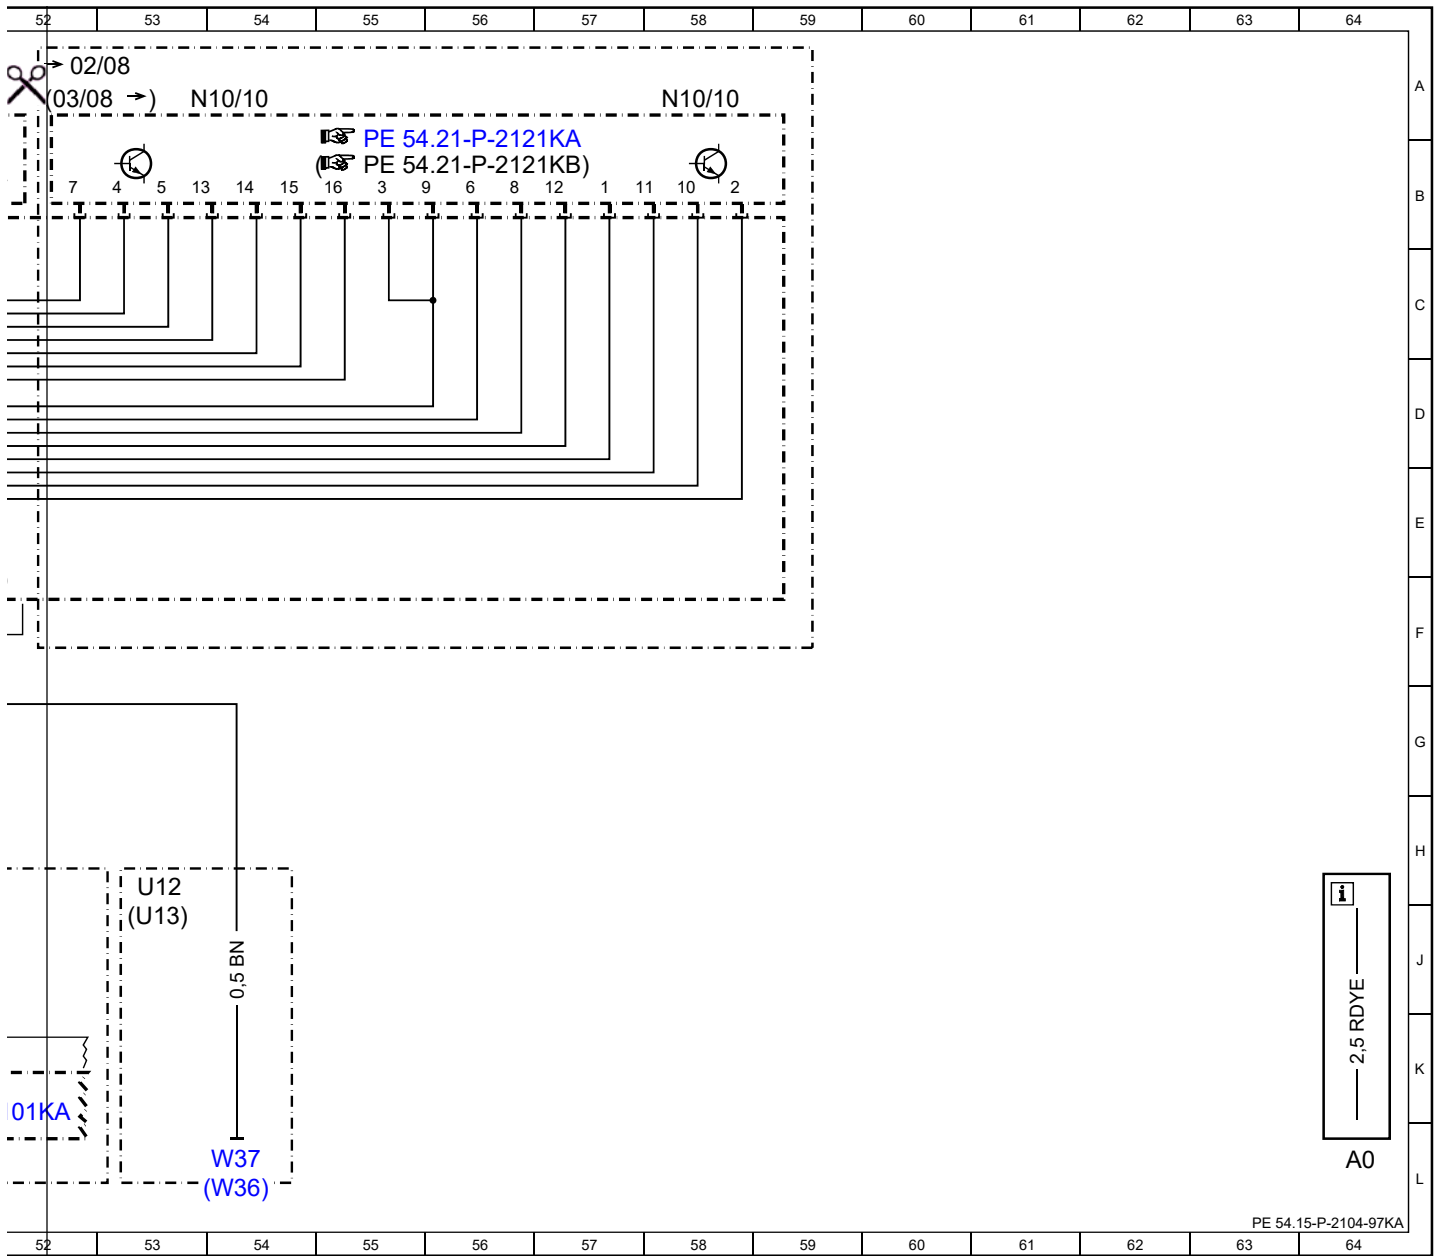

Out here