

Document number: pe54.10-p-2101-97ke


Document title: Wiring diagram of vehicle electrical system control unit

Code:	Designation:	Position:
A0	Color code key	
CAN B	Interior CAN	
F32	Front prefuse	2L
F33	Rear prefuse box	60A
F33f1	Fuse 1	60B
F33f2	Fuse 2	61B
F33f3	Fuse 3	63B
F52	Fuse through-plating	4A
F52	Fuse through-plating	12A
F52	Fuse through-plating	17A
F52f1	Fuse 1	17B
F52f2	Fuse 2	7B
G1	On-board electrical system battery	19L
G1	On-board electrical system battery	58L
G1/4	Starter battery	5L
G2	Alternator	7L
K40/2	Driver-side fuse and relay module	37L
K40/2f11	Fuse 11	36L
K40/4	Passenger-side fuse and relay module	11L
K40/4	Passenger-side fuse and relay module	14L
K40/4	Passenger-side fuse and relay module	62L
K40/5	Rear fuse and relay module	29L
K40/5f61	Fuse 61	28L
K57	Battery cutoff relay	22L
K75	Circuit 15R/30 cutoff relay	25L
K75	Circuit 15R/30 cutoff relay	33L
M1	Starter	17L
N10/10	Driver-side SAM control unit	44L
N73	EIS [EZS] control unit	55L
N82/1	Vehicle power supply control unit	20A
N82/1	Vehicle power supply control unit	28A
N82/1	Vehicle power supply control unit	36A
N82/1	Vehicle power supply control unit	44A
N82/1	Vehicle power supply control unit	53A
R3	Cigar lighter with ashtray illumination	41L
R3e1	Illumination	42L
R3r1	Heating element	40L
R3x1	Cigar lighter connector	40J
S93/3	SOS pushbutton switch	47L


**Document number:** pe54.10-p-2101-97ke


**Document title:** Wiring diagram of vehicle electrical system control unit

<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
S93/6	MB-Info and breakdown assistance button group	49L
U1	Valid for USA	46F
U127	Valid for engine 272, engine 273 KE	13E
U127	Valid for engine 272, engine 273 KE	23F
U127	Valid for engine 272, engine 273 KE	59G
U152	Valid for engine 156	23F
U152	Valid for engine 156	9E
U152	Valid for engine 156	
U201	Valid for Emergency Call	46F
U428	Valid for SL 65 AMG and SL 600	9E
U428	Valid for SL 65 AMG and SL 600	59G
U428	Valid for SL 65 AMG and SL 600	
W10	Ground (battery)	19H
W10	Ground (battery)	58H
W10/3	Ground (starter battery partition wall)	5G
W30	Ground (frame)	50L
W30	Ground (frame)	47H
W37	Ground (left footwell)	40H
W7	Ground (right wheelhouse in luggage compartment)	40G
W7	Ground (right wheelhouse in luggage compartment)	54E
X26/2	Engine separation point connector	14G
X30/17	Rear voltage distributor (CAN B) connector	52L
X35/63	Control unit box/engine separation point	10G
X39/29	Circuit 15R/58D connector	42E
X39/48	Breakdown assistance/info button plug distributor	48H
X58/1	Interior socket	40L
Z3/12	Circuit 15R connector sleeve	39G
Z4/4	Circuit 30Z connector sleeve (solder connector in harness)	63E

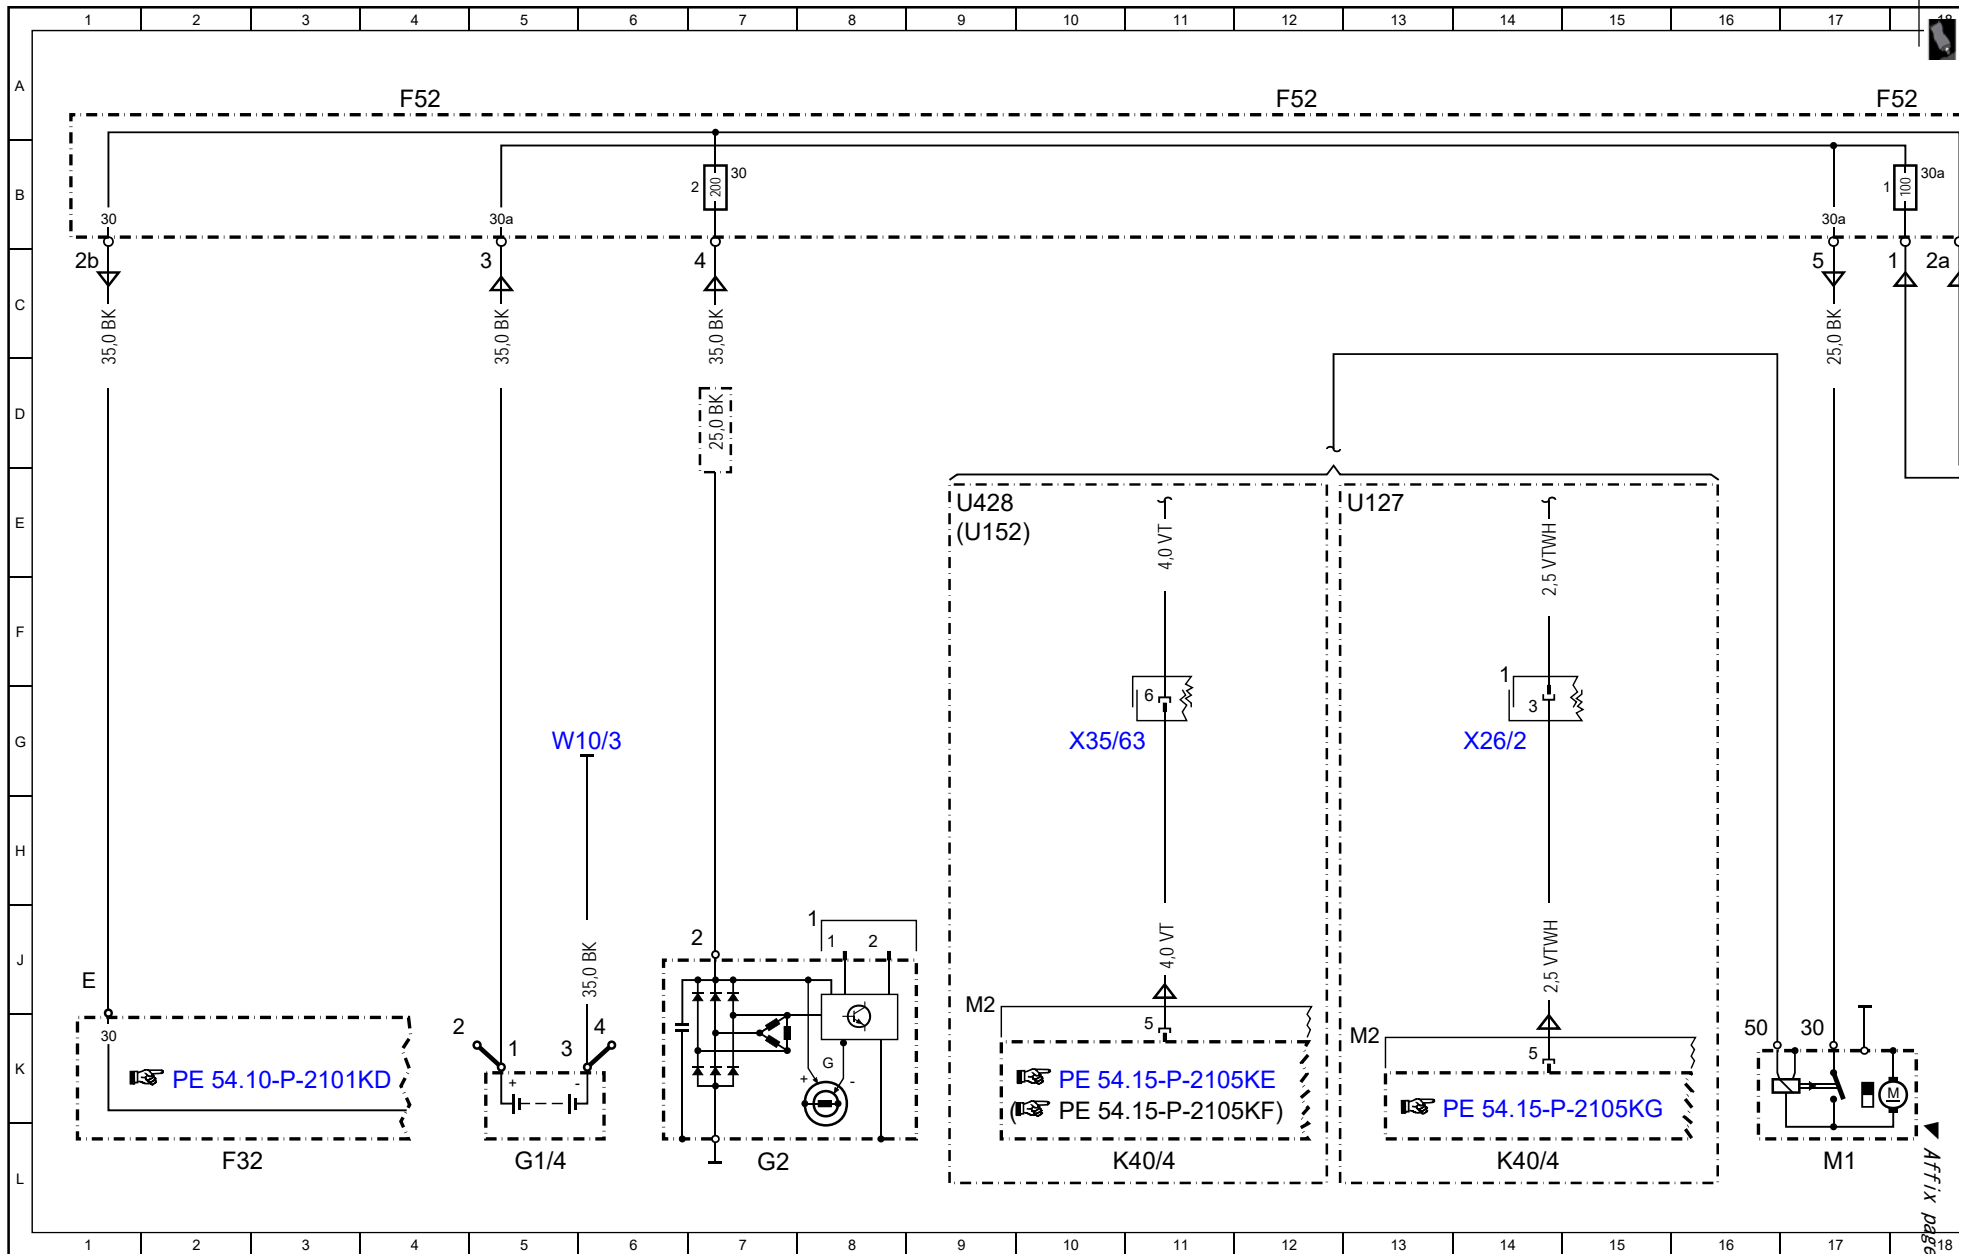

Affix page 2 here

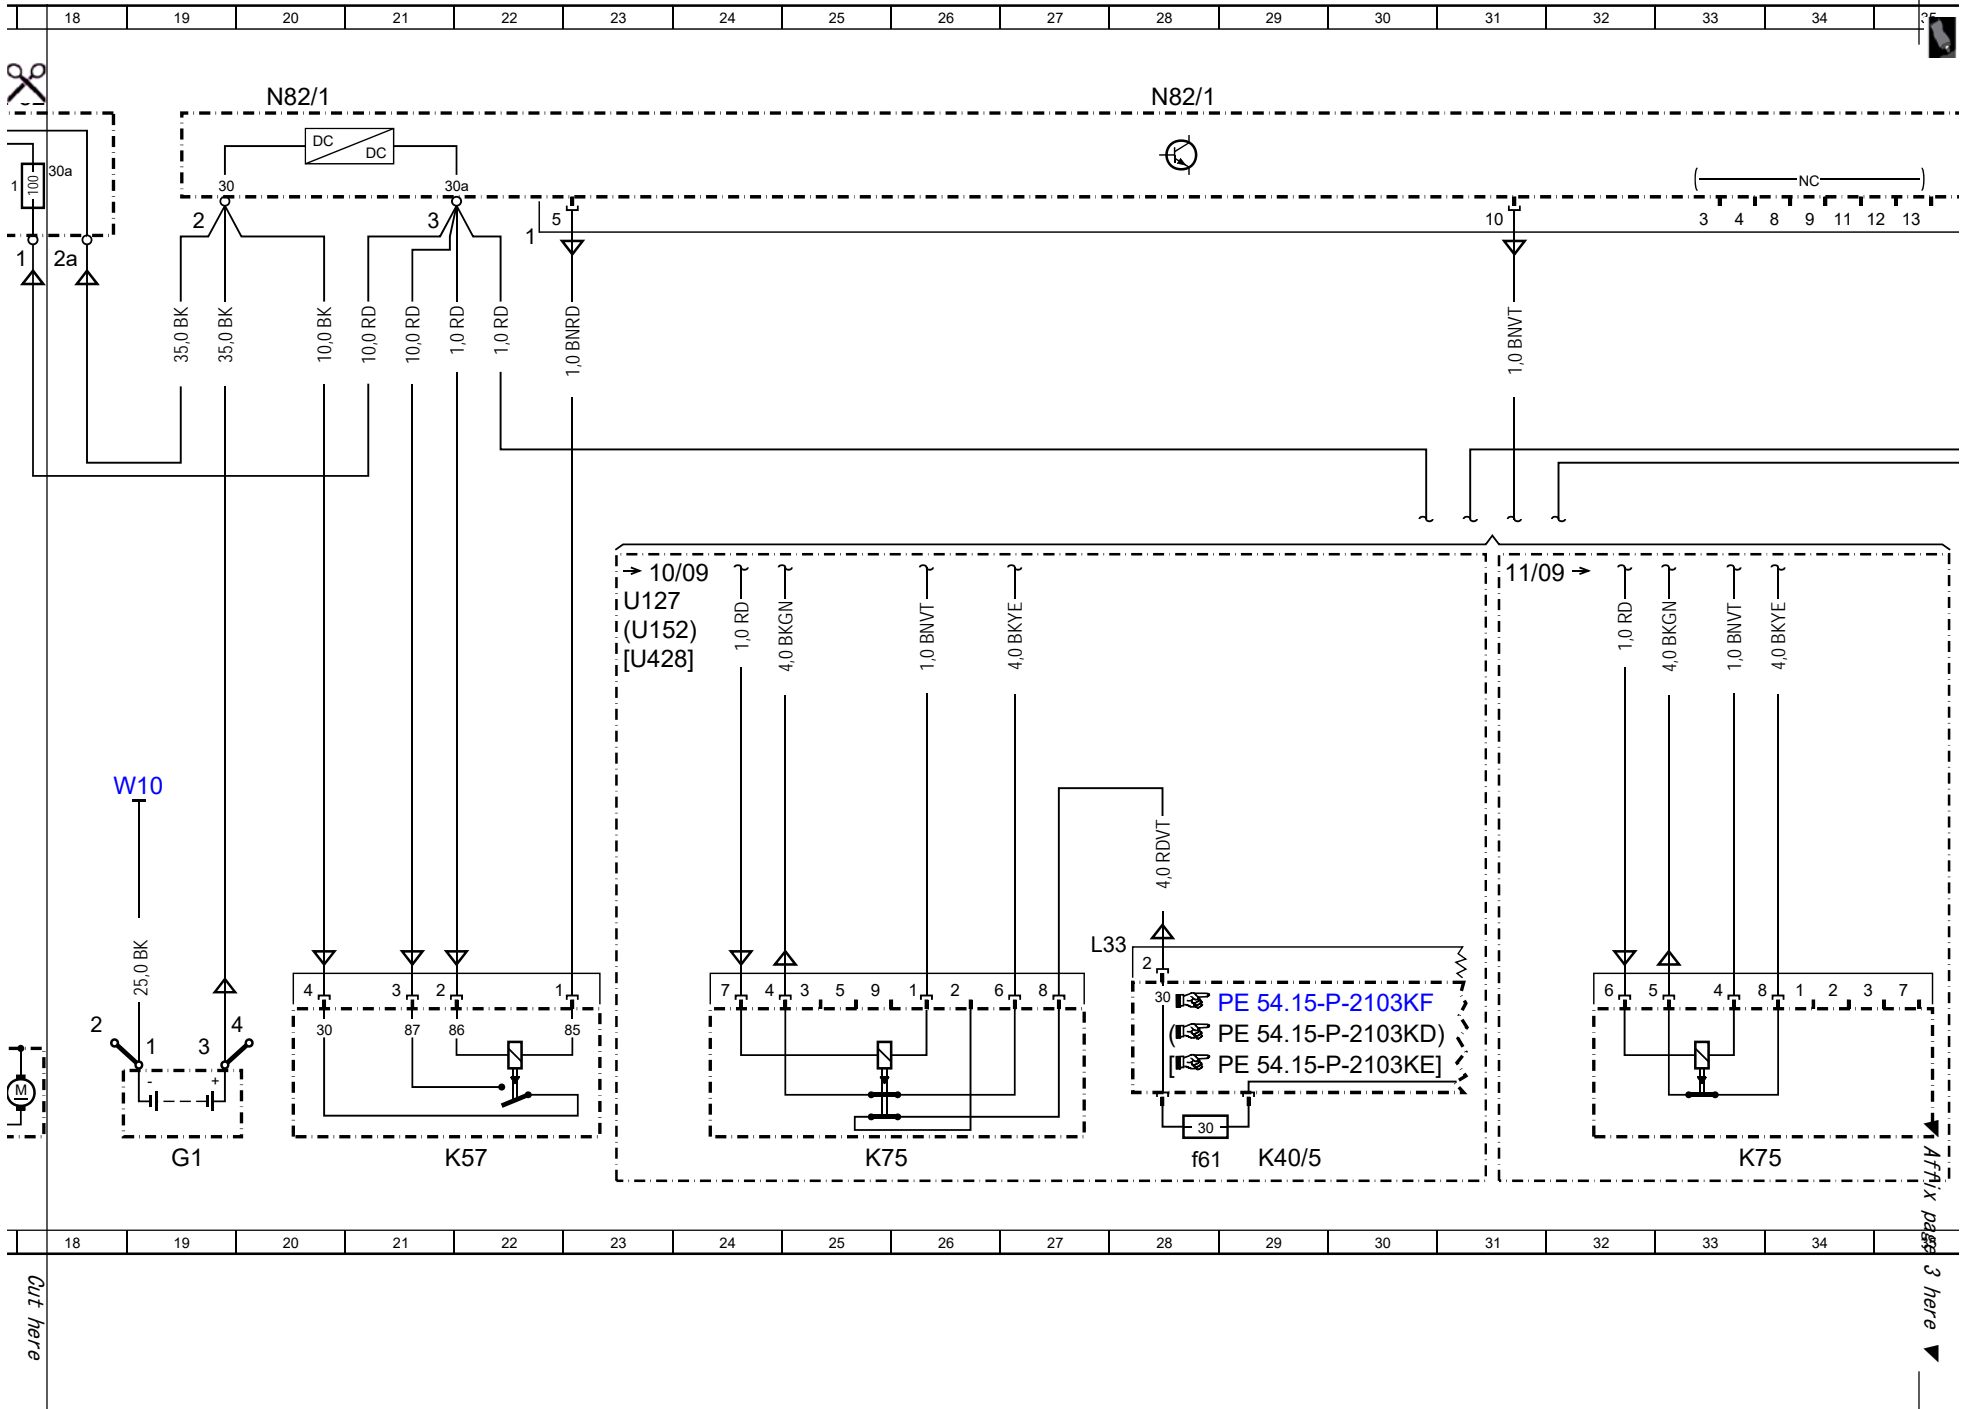

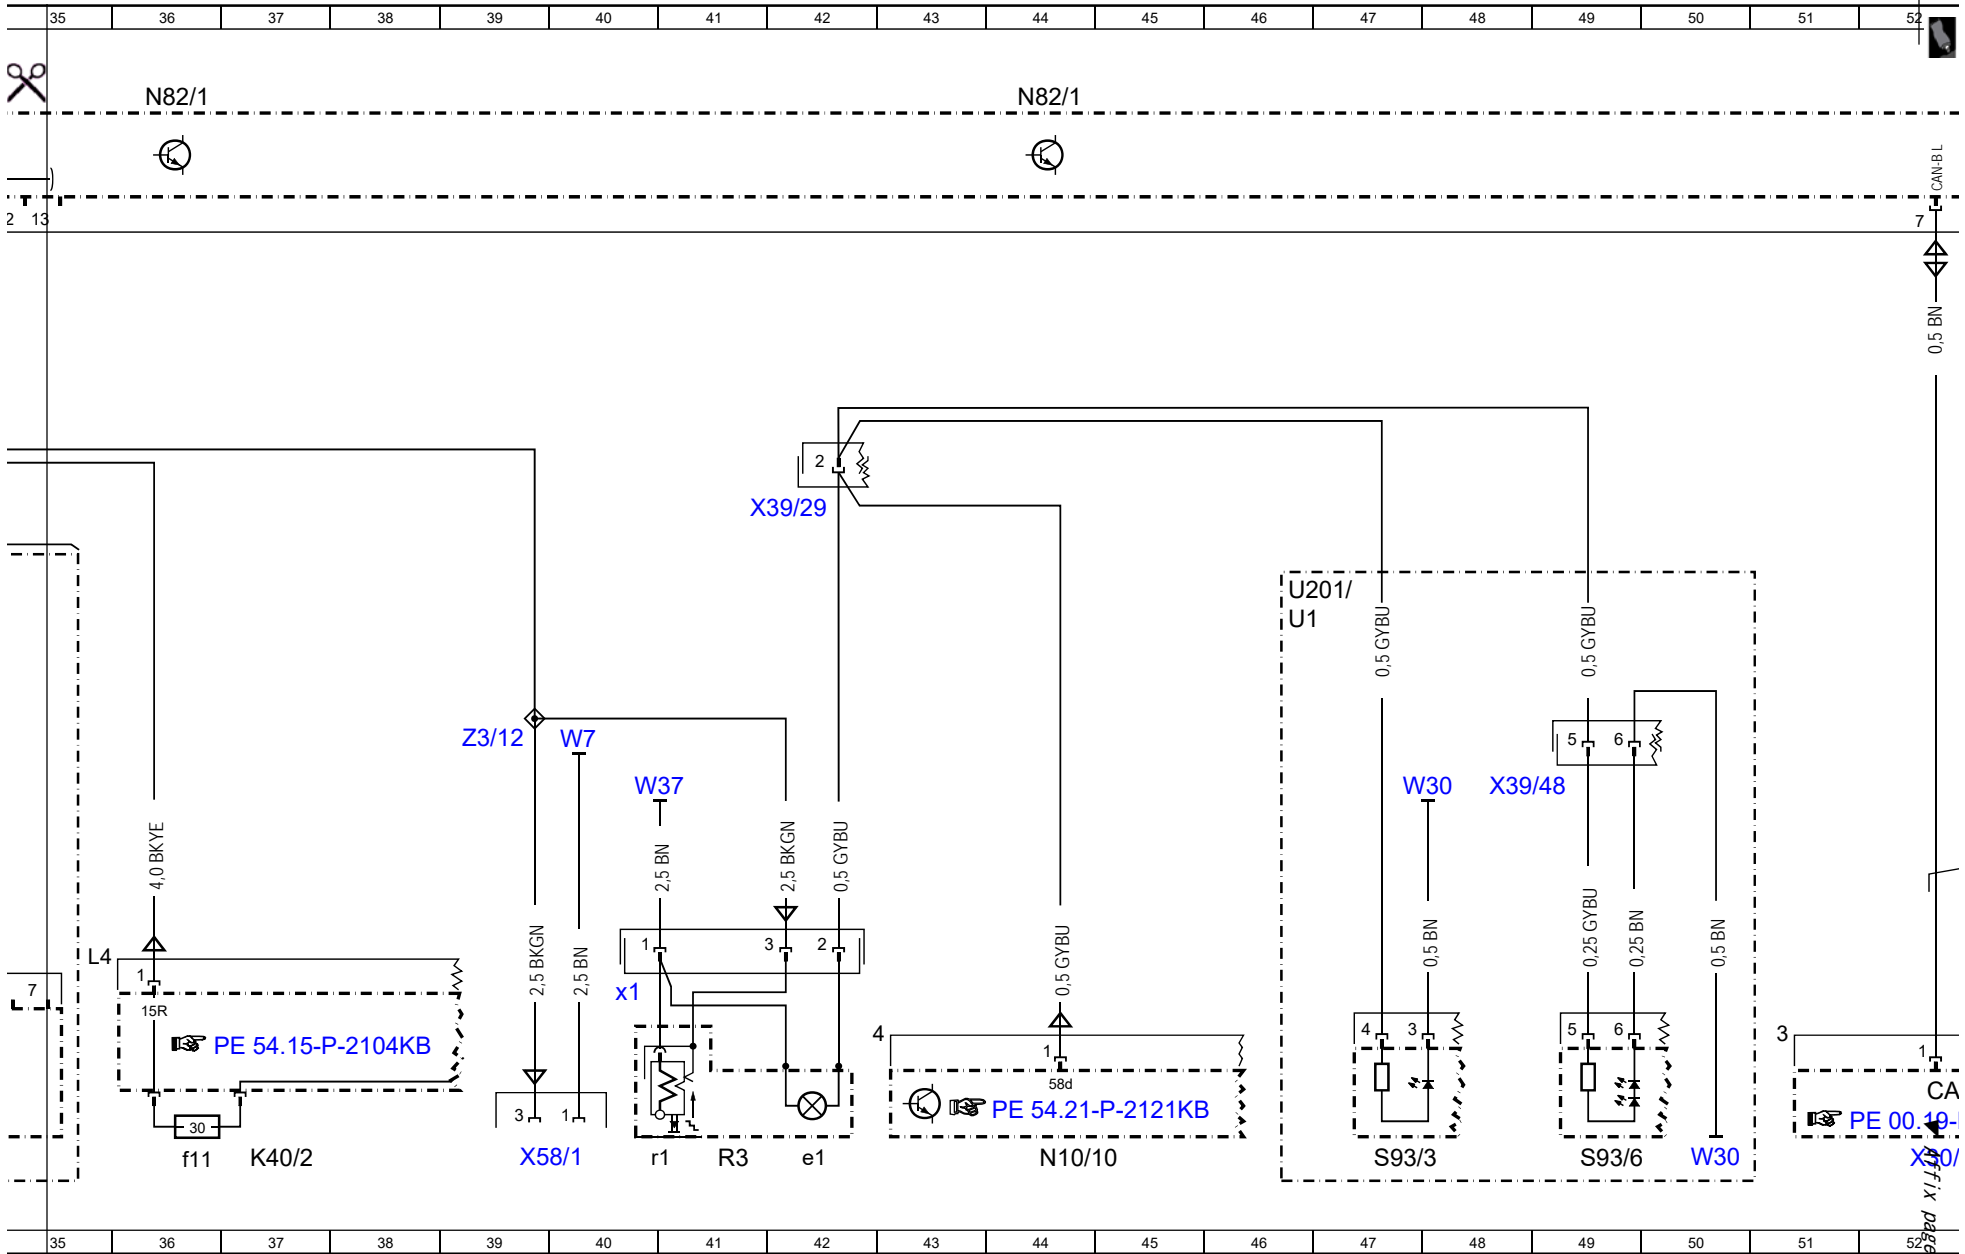

35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52

2 13

7

7

3

1


CA

PE 00.49

X30/

Out here

fix page 4 here

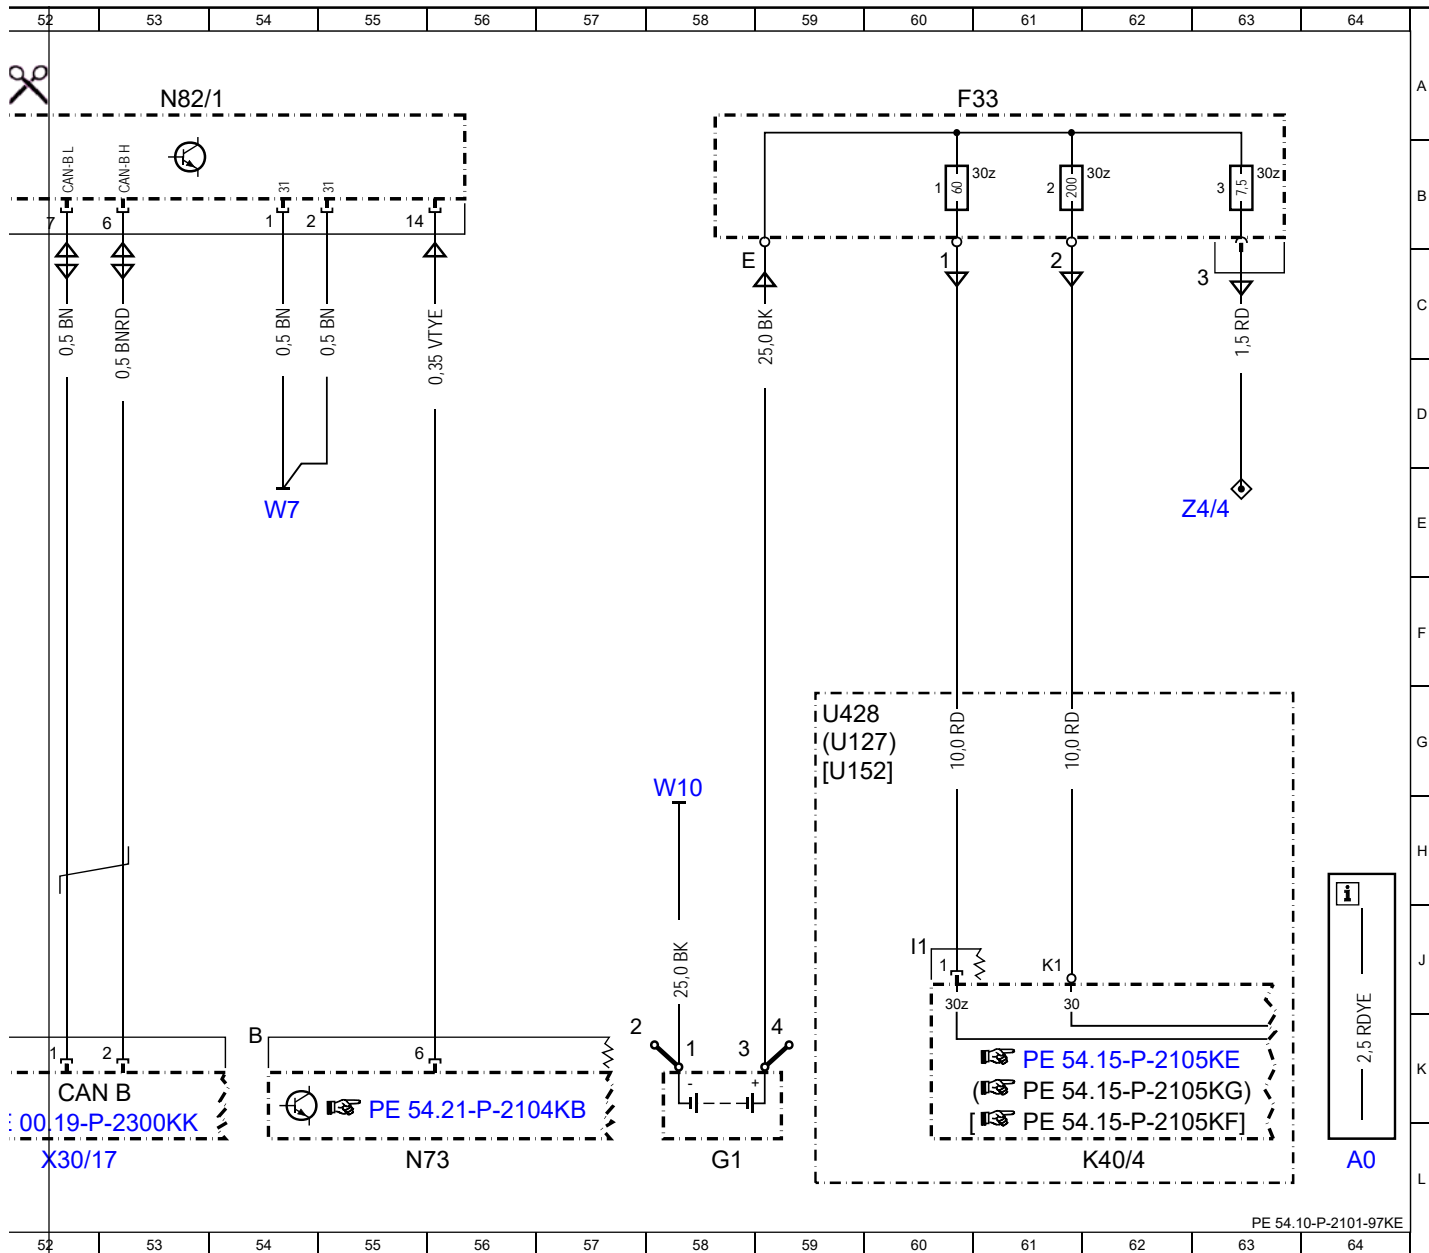

Cut here