


MODEL 231

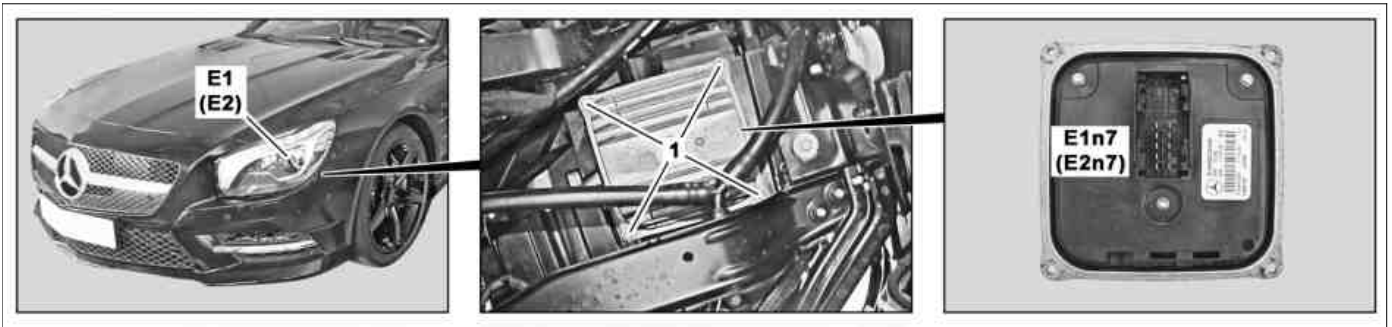

P82.10-7075-07

1 Bolts
 E1 Left front lamp unit
 E2 Right front lamp unit

E1n7 Left actuation module, LED exterior lighting
 E2n7 Right actuation module, LED exterior lighting

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1 	Carry out initial startup of left actuation module, LED exterior lighting (E1n7) or right actuation module, LED exterior lighting (E2n7) Connect STAR DIAGNOSIS and read out fault memory	When replacing left actuation module, LED exterior lighting (E1n7) or right actuation module, LED exterior lighting (E2n7). i Installation: Note string for LAM number on the left front lamp unit (E1) or right front lamp unit (E2).	AD00.00-P-2000-04A
2	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit		
3	Detach right or left front fender liner in front fender until left front lamp unit (E1) or right front lamp unit (E2) is accessible		AR88.10-P-1300RK
4	Remove bolt (1)		
5	Remove left actuation module, LED exterior lighting (E1n7) or right actuation module, LED exterior lighting (E2n7) from left front lamp unit (E1) or right front lamp unit (E2) and disconnect electrical connector	i Installation: Ensure gasket is correctly installed.	
6	Install in the reverse order		