


MODEL 231

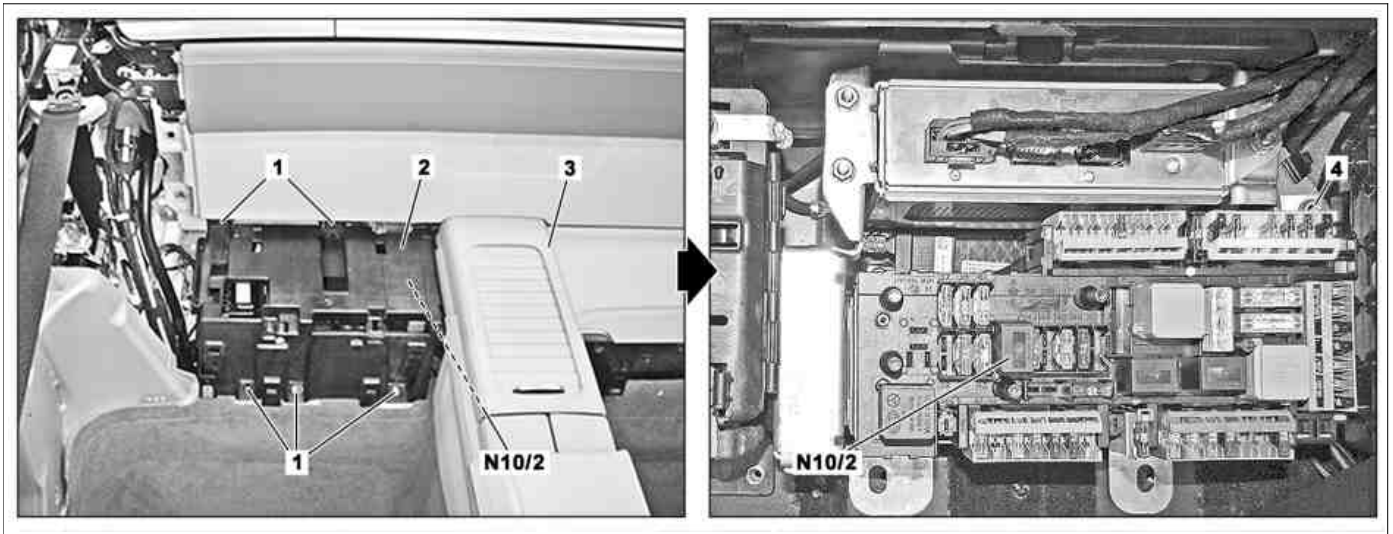


P54.21-3383-08

- 1 Screw
2 Bracket
3 Frame


- 4 Nut
N10/2 Rear SAM control unit with fuse and relay module

- 7 Fuse holder
N10/2 Rear SAM control unit with fuse and relay module

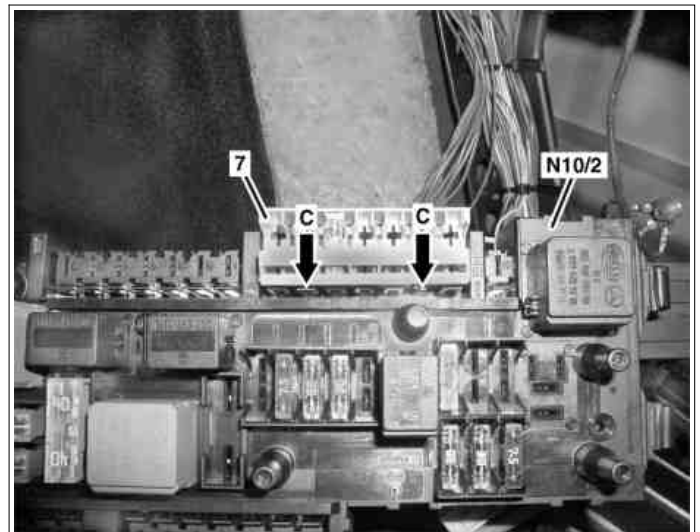


P54.21-2752-11

- 8 Electrical connector
- 9 Electrical connector
- 10 Contact blade
- N10/2 Rear SAM control unit with fuse and relay module

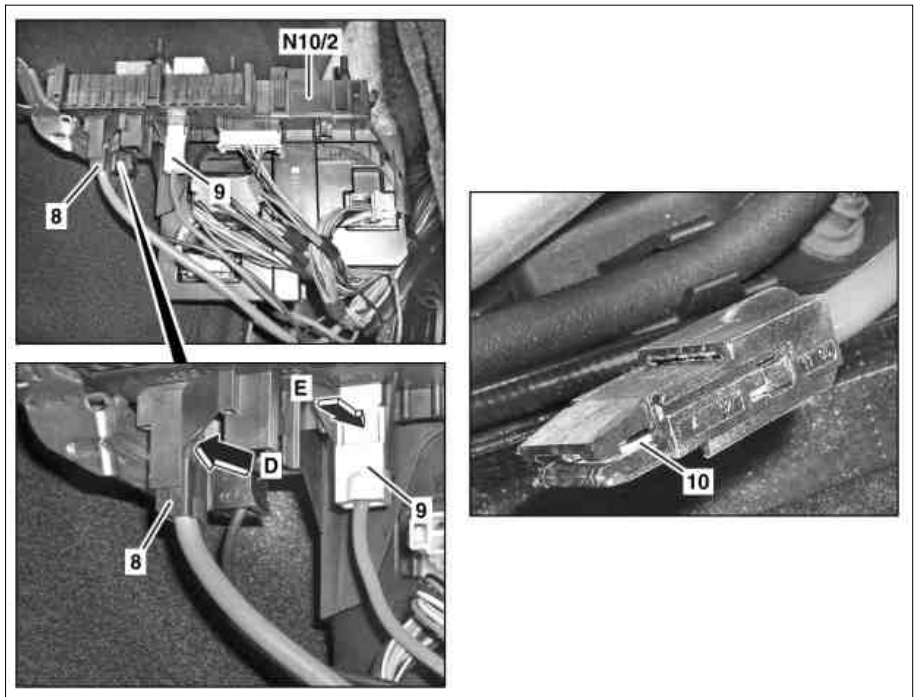

P54.21-2753-06

ⓘ	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
⚠ ⚠	Remove/install		
1 ➔ AD	Connect Star Diagnosis and perform initial startup of rear SAM control unit with fuse and relay module (N10/2) Connect STAR DIAGNOSIS and read out fault memory	When replacing the rear SAM control unit with fuse and relay module (N10/2).	AD00.00-P-2000-04A
2	Switch off ignition and remove transmitter key (A8/1) or KEYLESS-GO start/stop button (S2/3) from electronic ignition lock control unit (N73)	ⓘ KEYLESS-GO start/stop button (S2/3) only with code (889) KEYLESS-GO.	
3	Remove right side paneling in rear		AR68.30-P-4780RK
4	Remove frame (3)	ⓘ Removal: Carefully unclip the frame (3) upward.	
5	Unscrew bolts (1) and remove bracket (2)		
6	Unscrew nut (4)		
7	Lift out rear SAM control unit with fuse and relay module (N10/2)	ⓘ Installation: Make sure that electrical lines are not pinched. The electrical system can otherwise be damaged.	
8	Disconnect electrical connections (8, 9)	ⓘ The circuit 30 electrical connectors (8, 9) must be disconnected first and connected last. Short circuits can otherwise occur. ⓘ To do so, unlock and disconnect the electrical connectors (8, 9) by pushing back the tabs using an extraction hook (arrows D, E). ⓘ Installation: The contact blade (10) must make contact all the way forward in the connector housing of the electrical connectors (8, 9). ☑ Extraction hook	*140589023300
9	Disconnect remaining electrical connections from rear SAM control unit with fuse and relay module (N10/2)	ⓘ The number of electrical connectors depends on the vehicle equipment. ⓘ Installation: Pay attention to the installation position; this is indicated by color and mechanical coding.	
10	Unclip fuse holder (7) from rear SAM control unit with fuse and relay module (N10/2) (arrows C) and remove rear SAM control unit with fuse and relay module (N10/2)	ⓘ The number of fuse holders (7) is dependent on the vehicle equipment.	
11	Install in the reverse order		

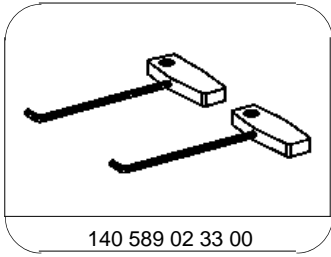

140 589 02 33 00

Extraction hook