



MODEL 231
with CODE B03 (ECO start/stop function)

- 6 Bolt
- 7 Ground cable
- 8 Nut
- 9 Nut
- A90/1 TV tuner (analog/digital)
- A90/3 TV digital tuner
- G1/13 ECO start/stop function additional battery
- N10/2 Rear SAM control unit with fuse and relay module

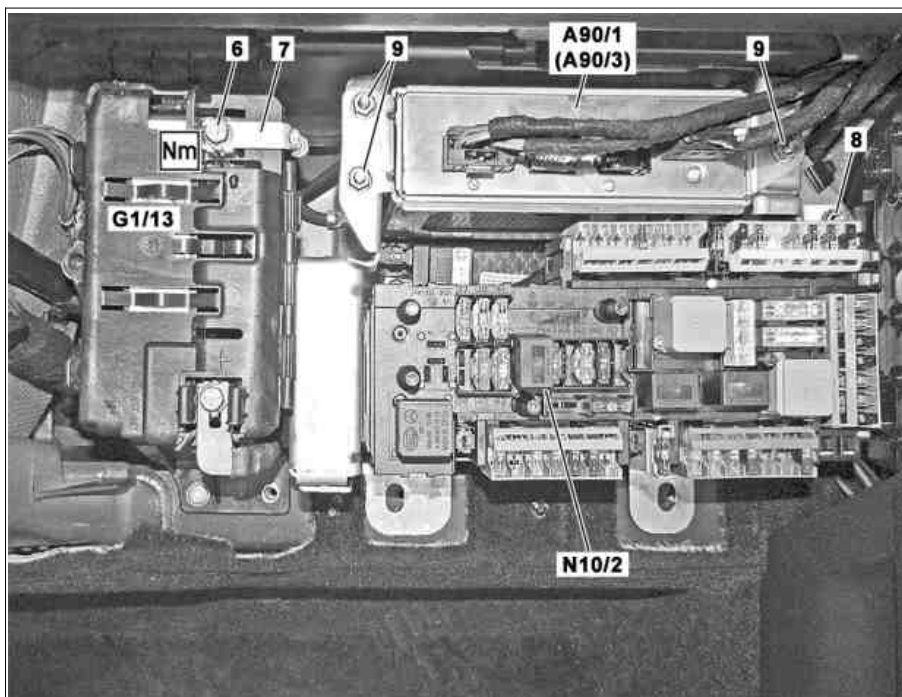

P54.15-3570-06

- 10 Nut
- 11 Electrical line
- 12 Electrical line
- 13 Electrical connector
- 14 Nut
- K114 ECO start/stop function additional battery relay

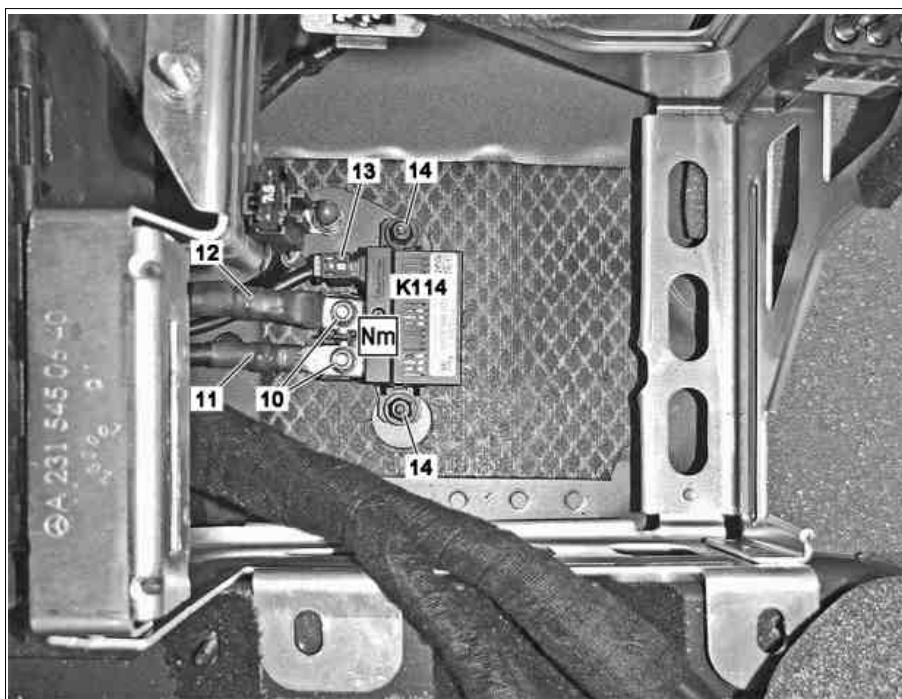

P54.15-3571-06

☒ ☒	Remove/install		
1	Remove rear SAM control unit with fuse and relay module (N10/2) and place to one side with electrical lines still attached		AR54.21-P-1259RK
2	Disconnect battery ground line		AR54.10-P-0003RK
3	Detach ground line (7) from additional battery for ECO start/stop function (G1/13)		AR54.10-P-0007RK
4	Detach TV tuner (analog/digital) (A90/1) or TV digital tuner (A90/3) and place to one side with lines attached	Vehicles with CODE 863 (Digital/analog TV tuner) or with CODE 865 (TV tuner)	AR82.85-P-7366RK

		⚠ Do not kink optical fiber. Otherwise it may be damaged.	
5	Unscrew nuts (10) and detach electrical lines (11, 12)	Nm Nut, positive battery cable to relay for additional battery	*BA54.15-P-1008-01A
6	Disconnect electrical connector (13)		
7	Unscrew nuts (14) and remove relay on additional battery for ECO start/stop function (K114)		
8	Install in the reverse order		

Nm Fuse and relay box

Number	Designation			MODEL 231
BA54.15-P-1008-01A	Nut, positive battery cable to relay for additional battery	M6	Nm	9