

**Document number:** pe15.00-p-2103-97rka  
**Document title:** Wiring diagram for Start/Stop engine

<b>Code:</b>	<b>Designation:</b>
A0	Color code key
A80	Intelligent servo module for DIRECT SELECT
F25/7	ECO start/stop function additional battery relay fuse
F32	Front electrical prefuse box
F32	Front electrical prefuse box
F32	Front electrical prefuse box
F32	Front electrical prefuse box
F32	Front electrical prefuse box
F32	Front electrical prefuse box
F32H59	Prefuse 159
F52/1	Firewall through-hole plating
G1	On-board electrical system battery
G1/13	ECO start/stop function additional battery
K114	ECO start/stop function additional battery relay
K88	Pyrotechnical separator
M1	Starter
N10/1	Front SAM control unit with fuse and relay module
N10/1kQ	Backup relay
N3/10	ME-SFI [ME] control unit
N73	Electronic ignition switch control unit
N89	Transmission oil auxiliary pump control unit
U1018	Valid for gasoline engine 276
U1018	Valid for gasoline engine 276
U1032	Valid for gasoline engine 278 and gasoline engine 157
U1032	Valid for gasoline engine 278 and gasoline engine 157
U1035	Valid for gasoline engine 279
U1035	Valid for gasoline engine 279
U12	Valid for left-hand drive vehicles
U12	Valid for left-hand drive vehicles
U13	Valid for right-hand drive vehicles
V19	ECO start/stop function diode
W10/4	ECO start/stop function additional battery ground point

