

**Document number:** pe91.30-p-2103-97rka  
**Document title:** Wiring diagram for AIRSCARF control unit

<b>Code:</b>	<b>Designation:</b>
A0	Color code key
M4/10	Left AIRSCARF fan motor
M4/10x1	Left AIRSCARF fan motor electrical connector
M4/11	Right AIRSCARF fan motor
M4/11x1	Right AIRSCARF fan motor electrical connector
N10/2	Rear SAM control unit with fuse and relay module
N10/2f63	Fuse 63
N10/2f64	Fuse 64
N25/7	AIRSCARF control unit
N25/7	AIRSCARF control unit
N25/7	AIRSCARF control unit
N25/7	AIRSCARF control unit
N32/1	Driver seat control unit
N32/2	Front passenger seat control unit
W71/3	Center rear compartment ground point
X30/32	Interior CAN 1 (CAN B) potential distributor electrical connector
X53/4	AIRSCARF control unit electrical connector
X55/53	Left seat AIRSCARF electrical connector
X55/54	Right seat AIRSCARF electrical connector
Z167/1z1	AIRSCARF fan ground connector sleeve

