

Document number: pe91.30-p-2051-97rka

Document title: Electrical function schematic for AIRSCARF

Code:

Designation:

1	Circuit 15R, status
10	
10	
2	Interior temperature sensor, signal
3	Outside temperature, signal
4	AIRSCARF button, status
4	AIRSCARF button, status
5	AIRSCARF fan motor, actuation
5	AIRSCARF fan motor, actuation
6	AIRSCARF heating element, actuation
6	AIRSCARF heating element, actuation
6	AIRSCARF heating element, actuation
6	AIRSCARF heating element, actuation
7	AIRSCARF status indication, request
7	AIRSCARF status indication, request
8	Vario roof, status
9	Vehicle speed, signal
A1	Instrument cluster
CAN B	Interior CAN
CAN B	Interior CAN
CAN B	Interior CAN
CAN B	Interior CAN
CAN B	Interior CAN
LIN 1	Instrument panel LIN
M4/10	Left AIRSCARF fan motor
M4/11	Right AIRSCARF fan motor
N10/1	Front SAM control unit with fuse and relay module
N22/7	Automatic air conditioning control and operating unit
N25/7	AIRSCARF control unit
N32/1	Driver seat control unit
N32/2	Front passenger seat control unit
N52	Vario roof control control unit
N70/1	Instrument panel control unit

