
- Center engine compartment paneling
- 2 Bolts
- 3 Front engine compartment paneling
- 4 Bolts
- 5 6 Rear engine compartment paneling
- Bolts

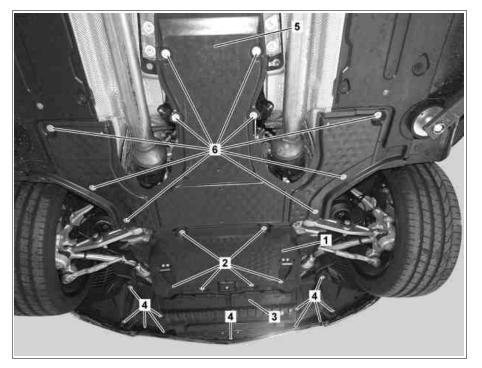

P61.20-2072-06

Picture item, etc.	Work instructions		
⚠ Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
i	Raise vehicle with vehicle lift		AR00.60-P-1000TX
1	Center engine compartment paneling (1)	i Unscrew bolts (2) and remove center engine compartment paneling (1).	
		Rechargeable drill / screwdriver gotis://G 58.0 01.1	
4	Front engine compartment paneling (3)	i First remove center engine compartment paneling (1). Unscrew bolts (4) and remove front engine compartment paneling (3).	
		Rechargeable drill / screwdriver gotis://G 58.0 01.1	
6	Rear engine compartment paneling (5)	paneling (1). Unscrew bolts (6) and remove rear engine compartment paneling (5). Rechargeable drill / screwdriver	
		gotis://G_58.0_01.1	