


MODEL 231

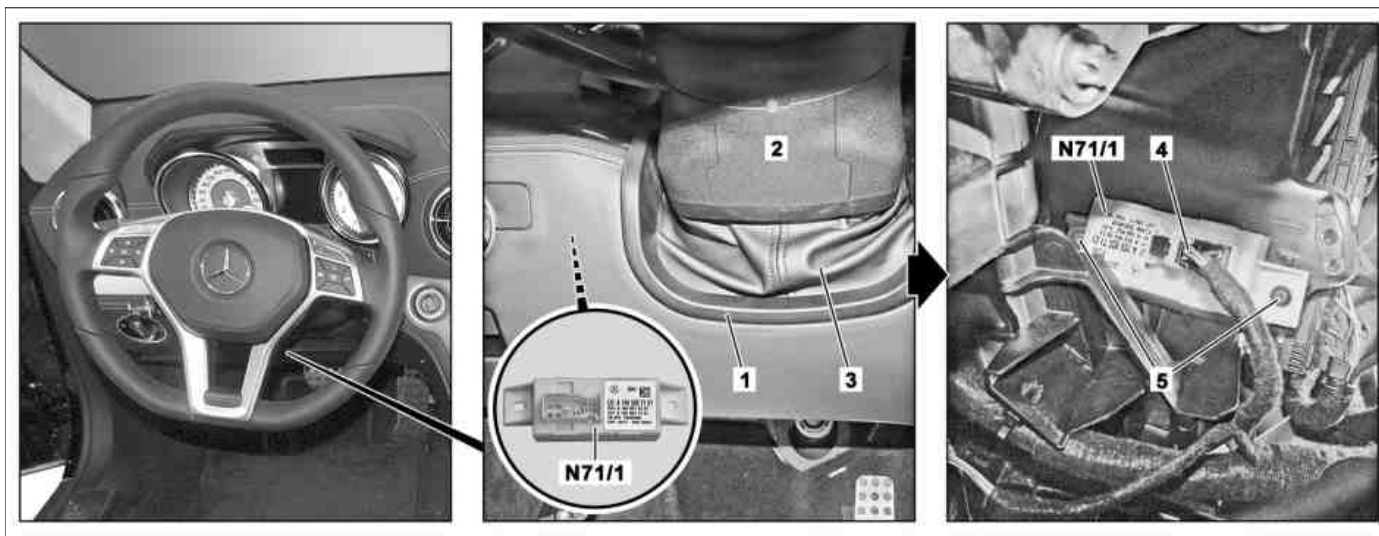


P82.10-7190-08

- 1 Frame
- 2 Steering column module
- 3 Cover

- 4 Electrical connector
- 5 Screw
- N71/1 Headlamp control unit

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1 	Connect STAR DIAGNOSIS and perform initial startup of headlamp control unit (N71/1) Connect STAR DIAGNOSIS and read out fault memory	When replacing headlamp control unit (N71/1).	AD00.00-P-2000-04A
2	Move driver seat to rearmost position		
3	Switch off ignition and remove transmitter key (A8/1) or KEYLESS-GO start/stop button (S2/3) from electronic ignition lock control unit (N73)	KEYLESS-GO start/stop button (S2/3) only with code (889) KEYLESS-GO.	
4	Remove cover below dashboard		AR68.10-P-1500RK
5	Release cover (3) from steering column tube module (2)	To do so, press the cover's (3) frame (1) off the steering column tube module (2). For a better view of the headlamp control unit (N71/1). Long wedge	*115589035900
6	Disconnect electrical connector (4)		
7	Remove bolts (5)		
8	Remove headlamp control unit (N71/1)		
9	Install in the reverse order		

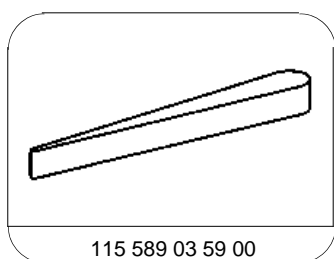

115 589 03 59 00

Long wedge