



Illustrated on model 219

- 01 Adapter
- 02 Support plate
- 03 Lifting platform support arms
- 1 Lift support point

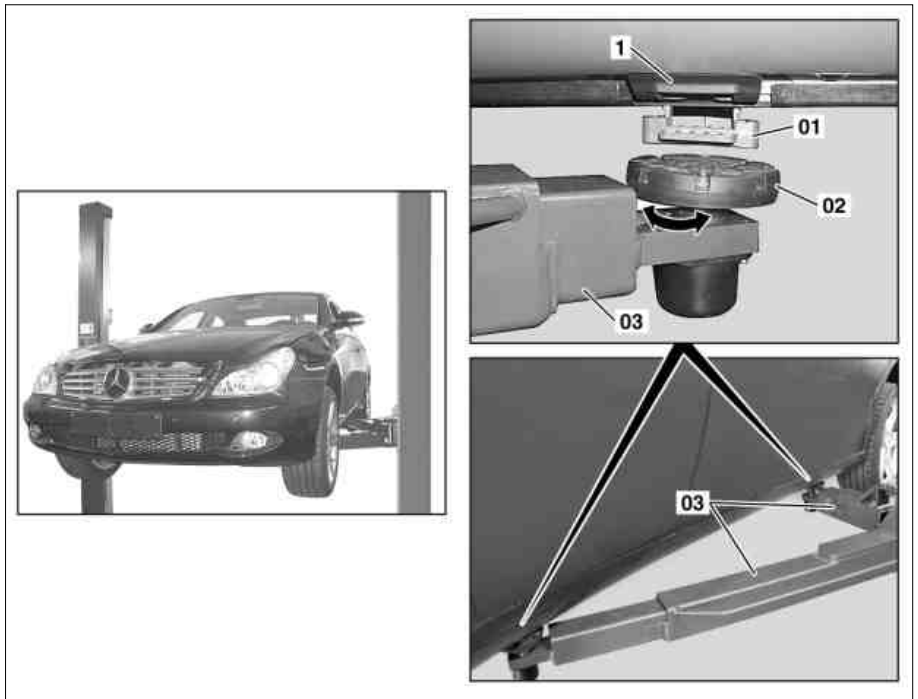

P00.60-2043-06

<p><b>⚠ Danger!</b></p>	<p><b>Lift/lower vehicle</b> <b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.</p>	<p>Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.</p>	<p>AS00.00-Z-0010-01A</p>
<p>1</p>	<p>Clip adapter (01) into lift support points (1) at side skirts</p>	<p><b>i</b> For removing the underfloor panelings. <b>☒</b> Adapter kit</p>	<p>*203589023100</p>
<p>2</p>	<p>Adjust support plates (02) of lifting platform support arms (03) to height of vehicle</p>	<p><b>i</b> Rotate support plates (02) until they are press against the adapters (01) or the lift support points (1) of the side skirts.</p>	
<p>3</p>	<p>Raise vehicle with vehicle lift</p>	<p>e.g.: Two-post lift <a href="#">gotis://H_00.1_01.1</a></p>	
<p>4</p>	<p>Secure the vehicle against tilting and toppling.</p>	<p><b>i</b> Before removing major assemblies (e.g. engine, transmission, axles).</p>	<p>AR00.60-P-0100TX</p>
<p>5</p>	<p>Lower vehicle in reverse order</p>		
	<p><b>Jack up/lower vehicle</b></p>		
<p>6</p>	<p>Lift vehicle with pit lift or floor jack</p>	<p>e.g.: Pit lift <a href="#">gotis://H_00.9_02.0</a> e.g.: Trolley jack <a href="#">gotis://H_00.12_01.0</a></p>	
<p>7</p>	<p>Secure the vehicle against tilting and toppling.</p>	<p><b>i</b> Place jack stands beneath lift support points (1). e.g.: Support stand <a href="#">gotis://H_00.12_13.0</a></p>	
<p>8</p>	<p>Lower vehicle in reverse order</p>		

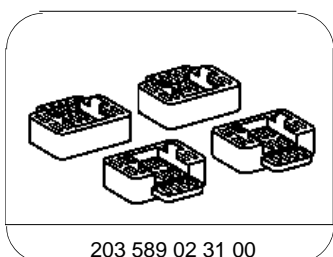

203 589 02 31 00

Adapter kit