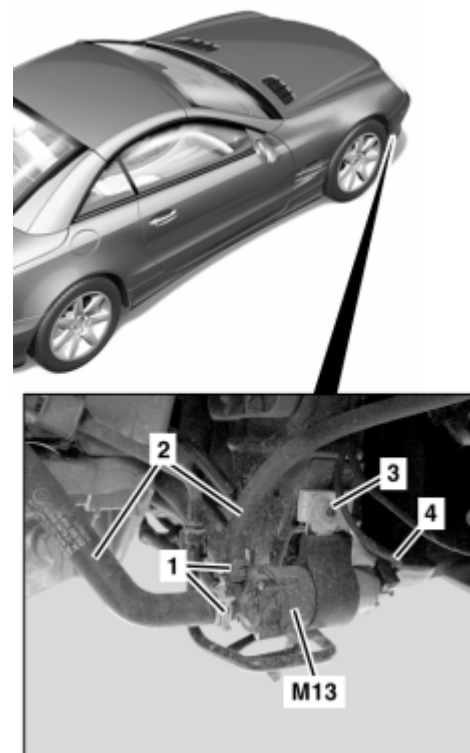


GF83.20-P-2109R

Heating water circulation pump, location/task/function

5.4.01

MODEL 230.4*M13 Heating water circulation pump*

P83.25-2084-03

Coolant circulation pump, position	The coolant circulation pump (M13) is located at the right front between wheelhouse and bumper, next to the radiator.	
Heating water circulation pump task	The heating water circulation pump (M13) serves to maintain a constant flow of hot water through the heat exchanger in the event of low engine speeds and residual engine heat utilization.	
Heating water circulation pump function		GF83.20-P-2102-01R