


- N18/2 AAC center and lateral nozzles pushbutton unit
- S6/5 Hazard warning flasher and CL [ZV] switch group

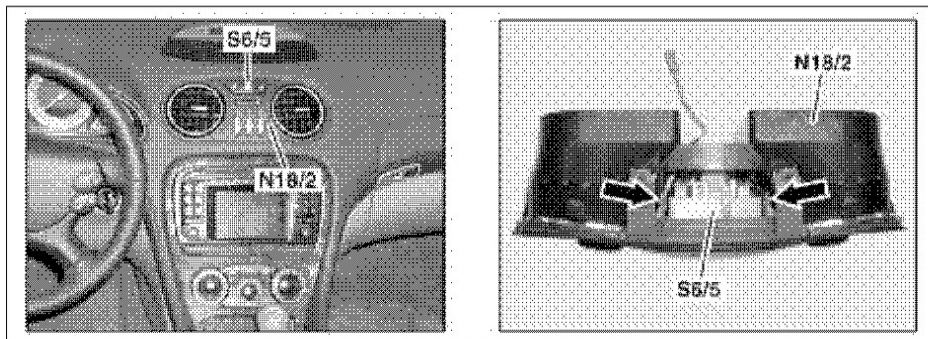

P80.20-2335-04

| ☒ ☒ | Remove/Install | | |
|-----|--|--|-----------------|
| 1 | Remove center air nozzle | | AR83.10-P-4503R |
| 2 | Press together detent hook (arrows) and remove hazard warning lights and CL switch group (S6/5) from the AAC center and side vents pushbutton unit (N18/2) | | |
| 3 | Install in the reverse order | | |