



## MODEL 230.4 up to 14.1.04

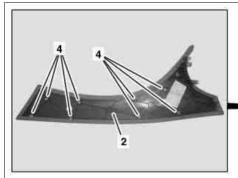


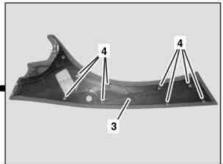

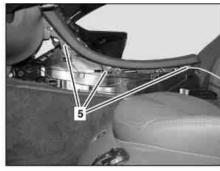

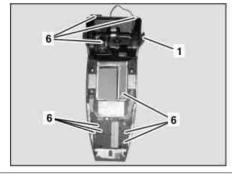



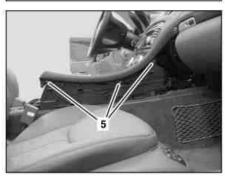

P68.20-2480-09

- 1 Center console cover
- 2 Left paneling


3 Right paneling4 Retaining clips

- 5 Bolts
- 6 Electrical connections

## **Modification notes**

10.1.00 Bloodifficat ground life replaced by Cwitch on Ightton Ceptration step 10	19.1.06	"Disconnect ground line" replaced by "Switch off ignition"	Operation step 10	
---	---------	--	-------------------	--

XX	Remove/install		
1	Remove driver and passenger seat downward and toward rear		
2	Remove cover on gearshift lever		AR68.20-P-2310R
3.1	Insert transmitter key into EIS control unit, actuate parking brake and move selector lever to position "N".	On vehicles with transmission 722	
4	Unclip left paneling (2) and right paneling (3) from retaining clips (4) with mounting wedge and remove	<b>3</b>	*110589035900
5	Remove bolts (5)		
6	Open stowage tray in center console		
7	Unclip center console cover (1) from instrument panel at top (arrows).		
8	Lift center console cover (1) until connectors on electrical connections (6) are accessible.		
9.1	Actuate parking brake and move selector lever to position "P"	On vehicles with transmission 722	
10	Switch off ignition and remove transmitter key from EIS control unit	I On vehicles with code (889) Keyless Go, press Keyless Go start/stop button repeatedly until ignition is switched off. Remove Keyless Go transmitter card or transmitter key from vehicle and store beyond reach of transmitter (min. 2 m).	
11	Disconnect connectors from electrical connections (6) and remove center console cover (1).		
12	Install in the reverse order		

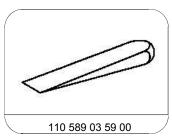

Mounting wedge