
ENGINE 113.990 in MODELS 211.076 /276

7 Right air guide duct 8 Cover at front end of engine 9 Left air guide duct



1 Bolt 2 Rubber seal 3 Bolts 4 Expanding rivet 5 Radiator crossmember 9 Flat spring

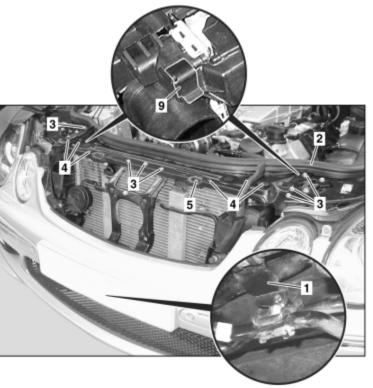

P20.40-2054-12

XX	Removing/installing			
⚠ _{Danger!}	Risk of death caused by vehicle slipping or toppling off the lifting platform.	Align vehicle between the columns of the hydraulic hoist and position the four support plates below the hoist support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A	
1	Disconnect ground cable from battery	Model 211.0	<u>AR54.10-P-0003T</u>	
		Model 211.2	AR54.10-P-0003TA	
2	Remove engine compartment paneling	i Only front part.	<u>AR61.20-P-1105T</u>	
3	Remove bolt (1) for oil cooling bracket on fan shroud			
4	Remove cover on engine front face (8)			
5	Remove air duct on the right (7) and air duct on the left (9)			
6	Disconnect electrical connector on the suction fan			
7	Remove the rubber seal (2) in the region of the radiator crossmember (5)			
8	Remove expanding rivet (4)			
9	Unscrew bolt (3) and remove radiator crossmember (5)	Bolt for center reinforcement on outer reinforcement	BA62.30-P-1008-02A	
		Bolt for center reinforcement on catch hook reinforcement	BA62.30-P-1009-02A	
10	Remove the left and the right flat spring (9)			
11	Release coolant hose from bracket on fan shroud			
12	Tilt the fan shroud in the upward direction against the direction of travel and remove it	i Installation: Ensure that the fan shroud retaining lugs are inserted in the mounts at the bottom of the radiator. Align fan shroud, check gap size of hood.		
13	Install in reverse order			

14	Check closing and opening mechanism for hood		
----	--	--	--

Hm Front end assembly with front reinforcement

Number Designation			Model 211	
BA62.30-P-1008-02A	Bolt for center reinforcement on outer reinforcement	N	lm	10
BA62.30-P-1009-02A	Bolt for center reinforcement on arrester hook reinforcement	N	lm	10