


MODEL 211.0 /2 /6 as of 1.7.04
with CODE (275) Memory package (driver seat, steering column, mirrors)
with CODE (242) Electrically adjustable front passenger seat with memory
except CODE (404) Left multicontour seat
except CODE (405) Right multicontour seat
except CODE (433) Left dynamic seat, incl. multicontour seat
except CODE (434) Right dynamic seat, incl. multicontour seat

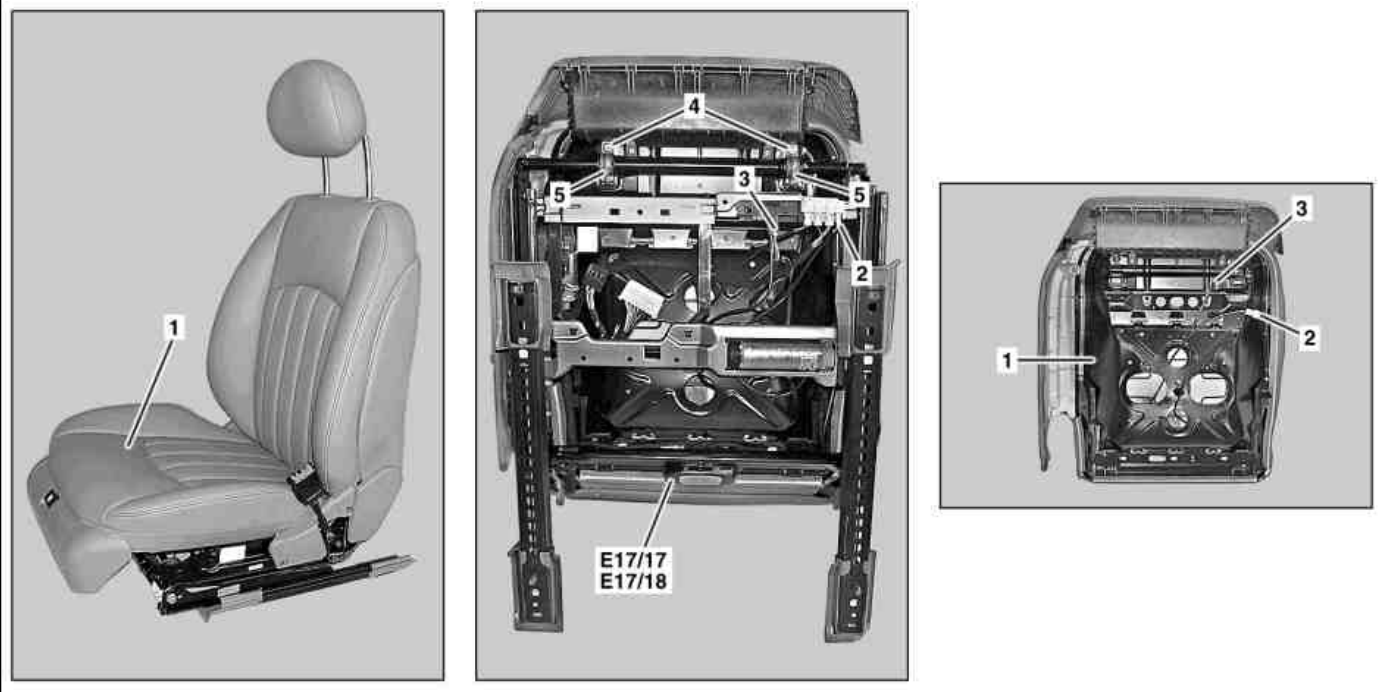

P91.10-2770-09

Shown on front passenger seat

- 1 Seat cushion**
- 2 Seat occupied recognition connector (front passenger seat only)**

- 3 Heated seats connector (with code (873) Heated left and right front seats or code (401) Front deluxe seats, incl. seat heating and seat ventilation)**

- 4 Bolts**
- 5 Bearing**
- E17/17 Right rear footwell lamp**
- E17/18 Left rear footwell lamp**

		Remove/install	
	⊗ ⊗		
1		Remove left or right front seat	AR91.10-P-1000T
2.1		Detach seat occupied recognition connector (2)	Only on passenger seat.
3.1		Detach heated seats connector (3)	On vehicles with code (873) Heated left and right front seats or code (401) Front deluxe seats, incl. seat heating and seat ventilation
4		Expose right rear footwell lamp (E17/17) or left rear footwell lamp (E17/18)	
5		Remove bolts (4)	i Installation: Assistant required for installation of seat cushion (1).
6		Remove bearing (5)	
7		Remove seat cushion (1)	i Installation: Pay attention to correct seating of bearing shells in bearing (5).
8		Install in the reverse order	