

M H H . C O S E R V I C E B O X



RESET SBC SERVICE LIGHT:

1st: make sure that engine is **running!!!**

In SD Developer mode you need to go to:

Entwickelingsdaten ([developer data](#)) ---> ansteuerungen ([control gear](#)) ---> Gesamtliste aller Ansteuerungen ([complete list of all the control circuits](#)).

To see how many times brake has been pressed there is a line that says:
Bremsenzahler (DJ_GetBrLive) ([brake payer \(dj_getbrlive\)](#)).

Then 1 line down there you see:

Bremsenzahler aktualisieren und Lebensdauerzahler F neu berechnen ([brake upgrade and lifetime payer payers recalculated f](#)) -> click it !

Parameter uINBR = 0

then click F3

1 line down you see (or search for this line):

Bremsenzahler auf beliebigen Wert setzen (DJ_SetNBr) -> click it

Parameter uINBR = 0

then click F3

then scroll down until you see the line's:

Lebensdauerzahler F neu berechnen (DJ_CalcLiveTime)

Parameter uINBR = 0

then click F3

Lebensdauerzahler F neu berechnen und schreiben (DJ_BuildAndWriteF)

Parameter uINBR = 0

then click F3

Log out of SBC !!

Log out of vehicle!!

Let engine run at least 10 minutes or drive at least 10 minutes if no coils are damaged, SBC fault code is not AKTUEL no more

From the desk of Rabih Hammoud
MHH.CO SERVICE BOX 2010 ®