


MODEL 219.3**with CODE (404) Left multicontour seat****with CODE (405) Right multicontour seat****with CODE (433) Left dynamic seat, incl. multicontour seat****with CODE (434) Right dynamic seat, incl. multicontour seat**

- 1 Multicontour backrest air cushion
2 Multipoint terminal

N32/19 Left front dynamic seat control unit
(with code (433) Left dynamic seat, incl. multicontour seat)

N32/22 Right front dynamic seat control unit
(with code (434) Right dynamic seat, incl. multicontour seat)

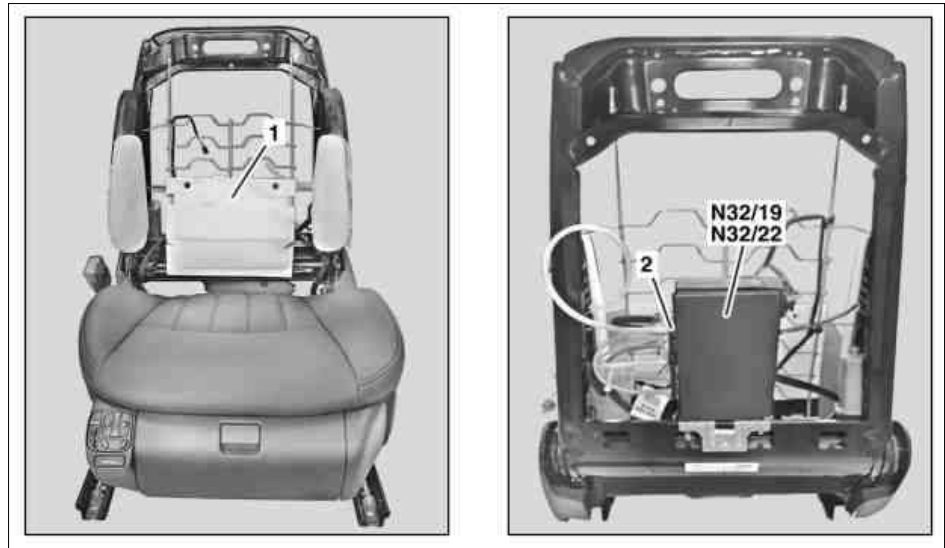

P91.25-2275-05

☒ ☒	Remove/Install		
1	Remove backrest upholstery from left or right front seat		AR91.10-P-1090TY
2.1	Unclip connection strip (2) from left front dynamic seat control unit (N32/19) or right front dynamic seat control unit (N32/22) and pull off	For vehicles with code (433) Left dynamic seat, incl. multicontour seat, or with code (434) Right dynamic seat, incl. multicontour seat	
3.1	Unclip pneumatic lines of air cushion for multicontour seat backrest (1) from the connection strip (2)	For vehicles with code (433) Left dynamic seat, incl. multicontour seat, or with code (434) Right dynamic seat, incl. multicontour seat	
3.2	Separate pneumatic lines of air cushion for multicontour seat backrest (1)	For vehicles with code (404) Left multicontour seat or with code (405) Right multicontour seat	
4	Remove multicontour seat backrest (1) at the clamping wire of the backrest	ⓘ Observe installation position of air cushion of multicontour seat backrest (1) at the tensioning wire.	
5	Install in the reverse order		