



DTB

Date: December 22, 2005
Order No.: P-B-15.30/55a
Supersedes: P-B-15.30/55 dated August 24, 2005
Group: 15

Revision: Addition of Model 211 and Applicable Procedure

SUBJECT: Model 203.040/052/054/056/061/064/065/076/081/084/087/092/261/264/281/284/740/747/764

Model 209.356/365/375/376/456/465/475/476

Model 211.026/056/065/070/076/082/083/087/256/265/276/282/283/287

All Model Years

Engine Not Starting / Starter Fuse Malfunctioning

If you receive customer reports in the above model vehicles of the engine not starting, the Starter Fuse in the Driver Signal Acquisition and Actuation Module (SAM) may be malfunctioning. The Driver SAM should be fitted with a larger 20 Amp fuse.

Procedure for Model 203 / 209

1. Perform a visual inspection of the Driver SAM (N10/1) and determine which fuse is installed in socket 52 (Figure 1, arrow). Consult STAR Finder for more information on the location of this fuse (10/1f52).
2. Replace the currently installed 15 Amp fuse with the 20 Amp fuse specified in this DTB.
3. Record the fuse rating change on the vehicle's Fuse Chart.

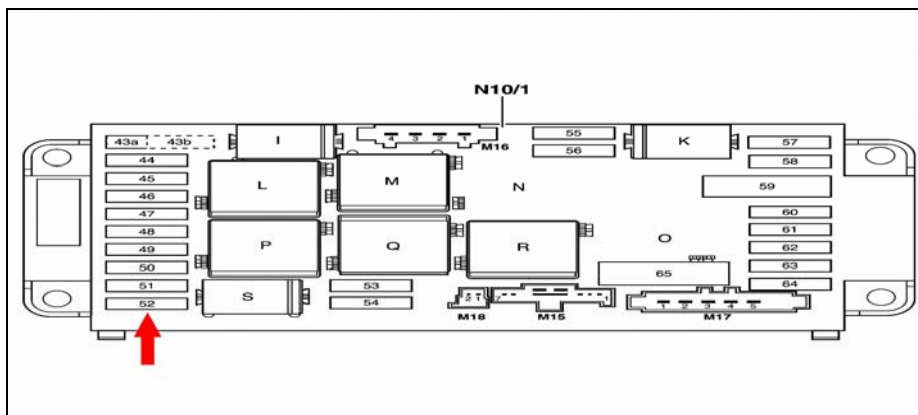


Figure 1

P-B-15.30/55a

This bulletin has been created and maintained in accordance with MBUSA-SLP S423QH001, Document and Data Control, and MBUSA-SLP S424HH001, Control of Quality Records.

Procedure for Model 211

1. Perform a visual inspection of the Driver SAM (N10/1) and determine which fuse is installed in socket 59 (Figure 2, arrow). Consult STAR Finder for more information on the location of this fuse (10/1f59).
2. Replace the currently installed 15 Amp fuse with the 20 Amp fuse specified in this DTB.
3. Record the fuse rating change on the vehicle's Fuse Chart.

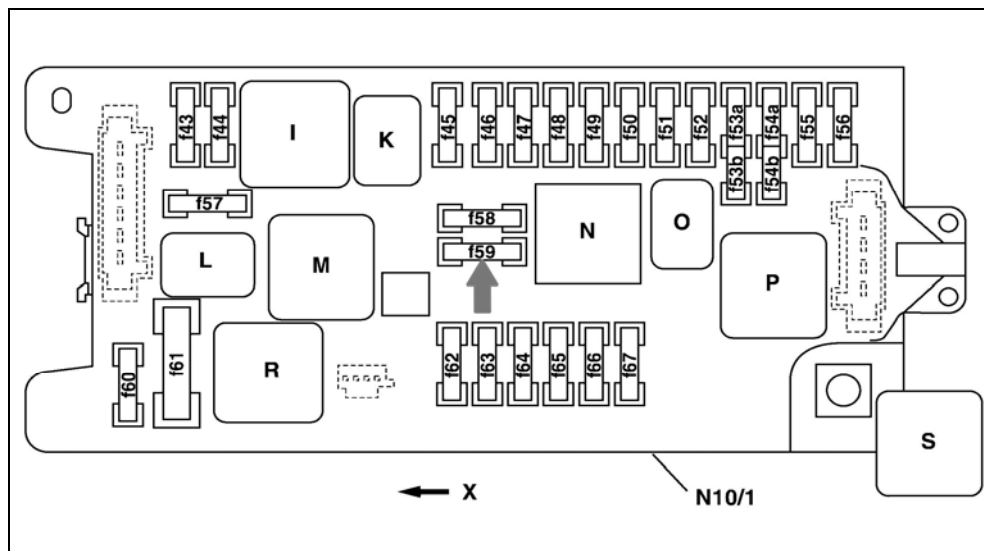


Figure 2

P-B-15.30/55a

Parts Information

Qty.	Part Name	Part Number
1	Fuse 20A	N072581 000306

i **Note:** The following allowable labor operations should be used when submitting a warranty claim for this repair.

In Case of Warranty

Operation: Fuse – specify location, replace (54-1286)

Damage Code	Operation Number	Time (hrs.)	Model Indicator (s)
54157 C8	54 1286	0.1 hrs.	P1, P2, P3, P4, P5, P6, P7, P8, P9, Q1, Q2, Q3, Q4, Q5, Q6, Q7, Q8, Q9, QA, S1, S2, S3, S4, S5, S6, S7, S8, T1, T2, T3, T4, T5, T6, T7, T8 U1, U3, U4, U5, U6, U7, U8