

	Checking		
<b>Danger!</b>	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
<b>Danger!</b>	<b>Risk of injury</b> caused by <b>fingers being pinched or crushed</b> when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
<b>Danger!</b>	<b>Risk of accident</b> caused by vehicle starting off by itself when engine is running. <b>Risk of injury</b> caused by contusions and burns during starting procedure or when working near the engine as it is running	Secure vehicle to prevent it from moving by itself. Wear closed and snug-fitting work clothes. Do not touch hot or rotating parts.	AS00.00-Z-0005-01A
<b>Danger!</b>	<b>Risk of injury</b> to skin and eyes caused by handling hot or glowing objects.	Wear safety gloves, protective clothing and safety glasses, if necessary.	AS00.00-Z-0002-01A
1	Check outside of ENGINE for oil leakage	Eliminate leaks prior to measuring oil consumption.	
2	Carry out engine oil and filter change	In order to avoid false measurements, for example through fuel in engine oil, the engine oil has to be changed before each oil consumption measuring trip. It is not necessary to change engine oil when driven less than 1000 km after last oil change.	
3	Start engine and bring to operating temperature		
4	Turn off engine		
5	Weigh engine oil		AR18.00-P-0025-05MM
6	Conduct measurement run	Conduct test run over a measured distance of 250 km (if measurement carried out by workshop personnel) or 1000 km (if measurement carried out by customer). If measurements are conducted by the workshop personnel, take into account operating conditions of the vehicle at the customer's.	
7	Start engine and bring to operating temperature		
8	Turn off engine		
9	Weigh engine oil again and determine oil consumption	To prevent measurement errors, the new measurement must be carried out at the place of the first oil measurement.	AR18.00-P-0025-05MM
10	If engine oil consumption requires, refill engine oil or conduct repair operations	The oil consumption may be as much as 0.8 liter of oil over 1000 km. The corresponding repair measures must only be carried out if oil consumption is higher than this.	