
Model 197


with code B07 (Ceramic brake system)
Model 212.074/075/076/077/274/275/276/277

with code B07 (Ceramic brake system)

Model 218.374/375/376/974/975/976

with code B07 (Ceramic brake system)

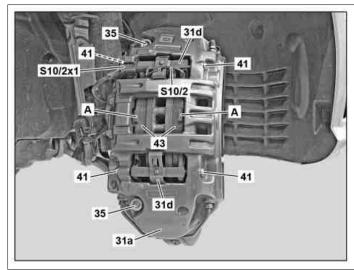

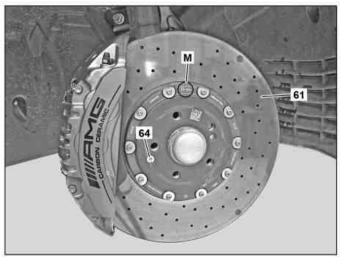

P42.10-2808-08


### Illustrated on model 197

31a 31d	Brake caliper Retaining spring	43 61	Brake pads Brake disk	M S10/2	Marking on installation side Right front brake wear sensor
35	Screw	64	Safety screw	S10/2x1	Right front brake wear sensor electrical connector
41	Stud	Α	Elevation		electrical confilector

## Shown on model 212 with code (B07) Ceramic brake system

31a Brake caliper31b Caliper support35 Screw

36 Bolts61 Brake disk

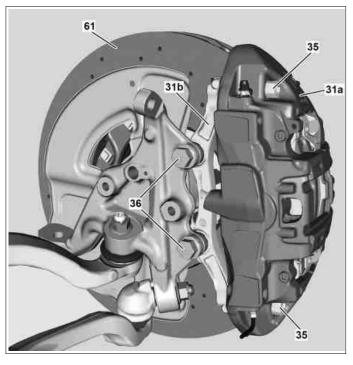

P42.10-2858-12

⚠ Danger!	<b>Risk of poisoning</b> from swallowing brake fluid. <b>Risk of injury</b> from skin and eye contact with brake fluid	Only pour brake fluid into suitable and appropriately marked containers. Wear protective clothing and eye protection when handling brake fluid.	AS42.50-Z-0001-01A
⚠ Danger!	<b>Risk of injury</b> . Skin or eye injuries may result when handling hot or glowing objects.		AS00.00-Z-0002-01A
<b>(b)</b>	Notes on repairs to brake system		AH42.00-P-0003-01A
19	Notes on handling, transport and storage of ceramic brake disks		AH42.10-P-9406-13A
(1)	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
(1)	Brake fluid notes		AH42.50-P-0001-01A
XX	Remove/install		
1	Remove engine compartment cover above brake booster	Vehicles with CODE (B14) AMG Carbon engine compartment cover	
2	Unscrew cap of brake fluid reservoir and extract some brake fluid	i In order to prevent the expansion reservoir overflowing when pressing back the brake pistons.	
3	Remove the front wheels	model 197	AR40.10-P-1100RQ
⊯AP		MODEL 212, 218	AP40.10-P-4050EW
<u> </u>	Check		
4 ₩ <b>~</b> AP	Check condition of brake disks (61)		AP42.10-P-4258QQ
5 <b>≨~AP</b>	Check brake lining thickness	Replace brake disks (61) as a set only.  MODEL 197, 212, 218  MODEL 197.3/4, 212, 218	AP42.10-P-4253A
		Check whether the brake pads (43) are worn beyond the wear limit.  If this point is ignored, the web between the sealing groove and dust cap can be damaged.  Replace brake pads (43) as a set only.	
		Check brake system for leaks using pressure tester: model 197 MODEL 212, 218	AR42.10-P-0015RQ AR42.10-P-0015EW
6	Disconnect electrical connector of right front	,	
<b>(b)</b>	brake wear sensor (S10/2x1)  Notes on installing brake wear indicator contact sensors		AH42.10-P-0003-01RQ
		i On the right brake caliper (31a).	
7	Detach electrical connector of right front brake wear sensor (S10/2x1) from brake caliper (31a)	i Installation: Replace screw/bolt.	
		i On the right brake caliper (31a). mm model 197Bolt, brake wear indicator to	*BA42.10-P-1002-10T
		brake caliper MODEL 212, 218Bolt, brake wear sensor	*BA42.10-P-1002-10J
		to brake caliper	
8	Press back brake piston using resetting device	Attach pusher tool to the elevations (A) of the brake pads (43). Secure remaining brake pistons to prevent them slipping out.	
		i If the brake pistons are sluggish replace brake caliper (31a).  Resetting device	*000589524300
			*601589076300
9.1	Remove bolts (35) and remove brake caliper (31a)	model 197	
		Installation: Replace bolts (35).	*BA42.10-P-1001-10T
		Nm Bolt, fixed brake caliper to wheel carrier	DA42.10-F-1001-101

1		le.	I
		The brake caliper (31a) and brake caliper support (31b) must always be removed together as a complete unit and should not be separated.	
		It will otherwise no longer be possible to guarantee optimum alignment of the brake caliper (31a) to the brake disk (61). This can then result in greater wear and an incorrect contact pattern.	
		li Installation: Replace the bolts (36).	
		(31a) to the brake caliper support (31b) must not be loosened.	
		Self-locking bolt, brake caliper support to steering knuckle	*BA42.10-P-1008-10J
10	Secure brake caliper (31a) to vehicle free of tension	Do not kink the brake hose or subject it to tensile loads.	
		Otherwise damage will occur.  i Do not damage paint of brake caliper (31a)	
11	Remove brake pads (43) from brake caliper (31a)	i Do no loosen or remove screw bolts (41) Press the brake pads (43) off the screw bolts (41) against the force of the retaining springs (31d).  i Brake pads (43) are to be disposed of as special waste. The local authorities can provide information regarding whether	
		disposal is also permitted as industrial waste similar to domestic waste.  i Installation: Do not apply brake pastes or	
		lubricants to the brake pads (43) and brake calipers (31a).  i Installation: Only complete sets of brake	
		pads (43) approved by Mercedes-Benz may be installed.	
<b>4</b>	Check		
12	Check brake calipers (31a) for leaks and dust boots for damage	i Install new brake calipers (31a) if necessary.	
13	Check retaining springs (31d) for deformation and correct seat	i If necessary, replace retaining springs (31d).	
<b>₽</b>	Clean		
14	Clean contact surfaces of brake pads (43) on brake caliper (31a)	Do not use sharp-edged or pointed tools to clean. Otherwise damage may occur. Assembly cleaner	*DD00 45 7 4000 044
15	If necessary, clean the perforation in the brake disks (61)	, ,	*BR00.45-Z-1028-04A
	` ′		AR42.10-P-2260-01RQ
16	Pull right front brake wear sensor (S10/2) out of pad backing plate of brake pad (43)		
		Installation: Replace the defective right front brake wear sensor (S10/2).	
17	Detach brake hose from brake caliper (31a)	When replacing the brake caliper (31a). model 197 MODEL 212, 218	AR42.10-P-0013RQ AR42.10-P-0013EW
		Seal connections immediately. Otherwise damage can be caused by escaping brake fluid.   Record plug	*129589009100
18	Remove locking bolt (64) and remove brake disk (61)	When removing the brake disk (61).	
		i Installation: Observe the marking on the installation side (M).	
		installation: Replace locking bolt (64). m model 197Locking bolt of front axle brake	*BA42.10-P-1002-06A
		disk Mm MODEL 212, 218Locking bolt, brake disk of front axle to wheel hub	*BA42.10-P-1002-06H
	Clean		
19	Clean contact surface and interference fit of		
	brake disk (61)  ), L/01/17, ar42.10-p-0225qq, Remove/install brake disk, brake caliper and l		Page 3 of 5

20	Lightly grease seat of brake disk (61)	Paste, hot lubrication 1 kg, DBL 6879.20	*BR00.45-Z-1005-06A
21	Install in the reverse order		
22	Bleed brake system	After removing/installing the brake caliper (31a).	
		model 197	AR42.10-P-0010RQ
		MODEL 212, 218	AR42.10-P-0010EW
23	Check brake system for leaks	After removing/installing the brake caliper (31a).	
		model 197	AR42.10-P-0100-01RQ
		MODEL 212, 218	AR42.10-P-0100-01V
⚠ Danger!	Risk of accident when commissioning the vehicle due to a lack of braking effect when the service brake is operated for the first time after repair work.	Before starting the engine, actuate brake pedal several times until pressure is built up and maintained in the brake system.	AS42.50-Z-0002-01A
24	Operate the brake pedal several times until the brake pads (43) abut the brake disks (61)	i Firm resistance should be noticeable at the brake pedal.	•
<b>4</b>	Check	and pound	
25	Check fluid level in brake fluid reservoir; correct if necessary	MODEL 197, 212, 218	
<b>⊯</b> AP	·	MODEL 197.3/4	AP42.10-P-4210RQ
FAP		MODEL 212, 218	AP42.10-P-4210EW
⚠ Danger!	Risk of death caused by limbs being caught or crushed by rotating parts when performing tests on the brake test stand	Never leave the vehicle unattended on the rollers except in an emergency. Ensure that no one is under the vehicle or near rotating parts during testing. In case of emergency, use the EMERGENCY OFF switch to shut down test stand.	AS42.00-Z-0001-01A
26	Carry out brake test on the test stand		
<b>⊯</b> AP			AP42.00-P-4290BA
27	Install engine compartment cover above brake booster	MODEL 197, 212, 218 with CODE B14 (AMG Carbon engine compartment cover)	

# Nm Front axle brake caliper

Number	Designation		MODEL 197 with CODE B07
BA42.10-P-1001-10T	Bolt, fixed brake caliper to wheel carrier	lm.	120

## Nm Brake disks, brake cover plate

Number	Designation	Model 197
BA42.10-P-1002-06A	Locking bolt of front axle brake disk Nm	10

# Nm Brake disks, brake cover plate

Number	Designation		Model 212	Model 218
BA42.10-P-1002-06H	Locking bolt, brake disk of front axle to wheel hub	m	10	10


# Nm Front axle brake caliper


Number	Designation		212.074/075/076/077 /274/275/276/277	MODEL 218.374/375/376/97 4/975/976 with CODE B07
BA42.10-P-1002-10J	Bolt, brake wear sensor to brake caliper	Nm	8	8

# Nm Front axle brake caliper


Number	Designation		MODEL 197 with CODE B07
BA42.10-P-1002-10T	Bolt, brake wear indicator to brake caliper N	m	8

Number	Designation			MODEL	MODEL
				212.074/075/076/077	
				/274/275/276/277	4/975/976 with
				with CODE B07	CODE B07
BA42.10-P-1008-10J	Self-locking bolt, brake caliper support to	M14	Nm	180	180
	steering knuckle				

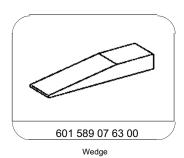

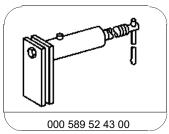

Resetting device

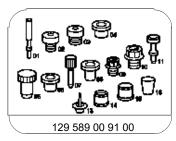

Record plug

#### Repair materials

Number	Designation	Order number
BR00.45-Z-1005-06A	Paste, hot lubrication 1 kg, DBL 6879.20	A 000 989 76 51
BR00.45-Z-1028-04A	Assembly cleaner	Adolf Würth GmbH & Co. KG Reinhold-Würth-Str. 12-17 74653 Künzelsau-Gaisbach Germany Tel. +49 7940 15-0 Fax +49 7940 15-1000 www.wuerth.de