


P83.25-2279-09

Shown with code (581) Comfort automatic air conditioning

- | | | |
|---|--|------------------------------------|
| 1 Heat exchanger | 6 Diffuser fittings (with code (581) Comfort automatic air conditioning) | 12 Line bracket |
| 2 Gasket | 7 Relay lever (with code (581) Comfort automatic air conditioning) | 13 Screw |
| 3 Screws/bolts (with code (581) Comfort automatic air conditioning) | 8 Actuator motors carrier (with code (581) Comfort automatic air conditioning) | A32 AC housing |
| 4 Electrical connector (with code (581) Comfort automatic air conditioning) | 9 Screw | M2/6 Left blend air flap actuator |
| 5 Screws/bolts (with code (581) Comfort automatic air conditioning) | 10 Bracket | M2/7 Right blend air flap actuator |
| | 11 Gasket | |

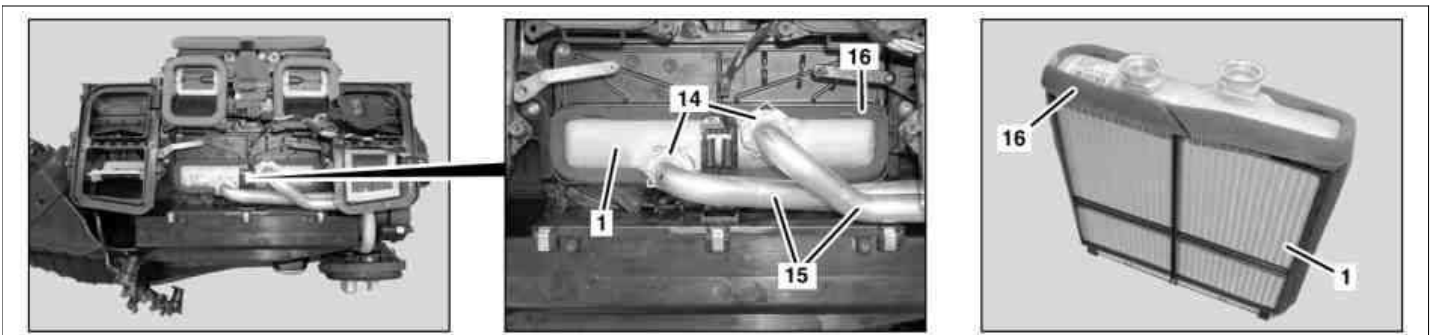

P83.25-2280-07

Shown with code (581) Comfort automatic air conditioning

- | | | |
|--------------------|------------------|-----------|
| 1 Heat exchanger | 15 Coolant lines | 16 Gasket |
| 14 Retaining clips | | |