
11.12.08 AR68.30-P-4100EW Remove/install door sill


MODEL 212

- Front door sill molding
- 2 3 Retaining clips
- Clip
- Lug

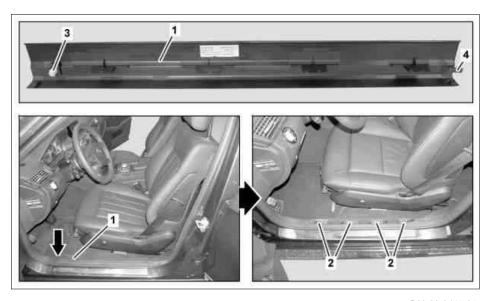

P68.30-3415-05

- 5 Rear door sill molding
- Clip
- 6 7 Shackles

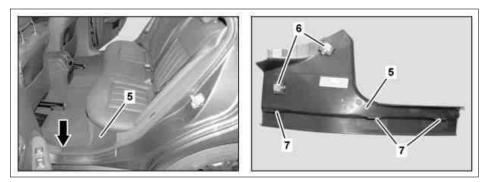

P68.30-3416-04

X	Remove/install		
1	Unclip front door sill (1) or rear door sill (5) in front area (arrow) upward	The front door sill (1) is secured in the front area (arrow) with a clip (3).	
		i Installation: Check clip (3) and replace if necessary.	
2	Loosen front door sill (1) from front toward rear from retaining clips (2)	,	
		Do not lift front door sill (1) upward in rear area to prevent damaging lug (4).	
3	Pull front door sill (1) toward front out of B-pillar paneling at bottom and remove		
		i Pull front door sill (1) out of B-pillar paneling at bottom until lug (4) is exposed.	
4	Loosen lugs (7) from rear door sill (5) from from toward rear from retaining clips, unclip clips (6) and remove rear door sill (5).	When removing rear door sill (5).	
		i Installation: Check clips (6) and replace, if	
		necessary.	
5	Install in the reverse order		