MODEL 204, 207, 212, 218

Shown with model 204.0

| | 1 | Mirror base | cover |
|--|---|-------------|-------|
|--|---|-------------|-------|

2 Check card


- 3 Lock
- N70 Overhead control panel control unit (with code (414) Power glass tilting/sliding sunroof)
- N70/3 Overhead control panel electronics (without code (414) Power glass tilting/sliding sunroof)

| 1 1 | 2 N70 N70/3 |
|--------------|-------------------|
| NTO NTO/3 | |

P82.20-3000-06

| () | Information on preventing damage to electronic | | AH54.00-P-0001-01A |
|-------|--|---|--------------------|
| | components due to electrostatic discharge | | |
| XX | Remove/install | | |
| 1 | Carry out initial startup of overhead control panel control unit (N70) or overhead control panel electronics (N70/3) | When replacing overhead control panel control unit (N70) or overhead control panel electronics (N70/3). | |
| ⊯ A D | Connect STAR DIAGNOSIS and read out fault memory | | AD00.00-P-2000-04A |
| | | i With code (882) Interior monitoring also perform initial startup of ATA [EDW] control unit. | |
| 2 | Switch off ignition and remove transmitter key | | |
| 3.1 | Unclip mirror base cover (1) | MODEL 204, 207.3, 212, 218 | *115589035900 |
| 3.2 | Unclip rain sensor cover | MODEL 207.4 without CODE 513 (Speed Limit Assist) without CODE 608 (Automatic high beam control) | |
| 3.3 | Slide cover for rain sensor to the foremost position and remove downwards | MODEL 207.4 with CODE 513 (Speed Limit Assist) with CODE 608 (Automatic high beam control) | |
| 4 | Release and lower overhead control panel control unit (N70) or overhead control panel electronics (N70/3) | 1 Use a check card (2) or similar object to slide centrally between the headliner and the overhead control panel control unit (N70) or the overhead control panel electronics (N70/3) and push lock (3) towards direction of travel. | |
| 5 | Disconnect all electrical connectors at the overhead control panel control unit (N70) or overhead control panel electronics (N703) | 1 Depending on vehicle equipment. | |
| 6 | Detach and remove overhead control panel control unit (N70) or overhead control panel electronics (N70/3) (arrow) | | |
| 7 | Install in the reverse order | | |

| 8 | Normalize tilting/sliding roof | When replacing overhead control panel control | |
|---|--------------------------------|---|--|
| | | unit (N70) with code (414) Power glass titling/ | |
| | | sliding roof. | |

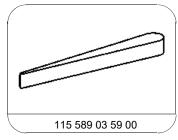

Long wedge