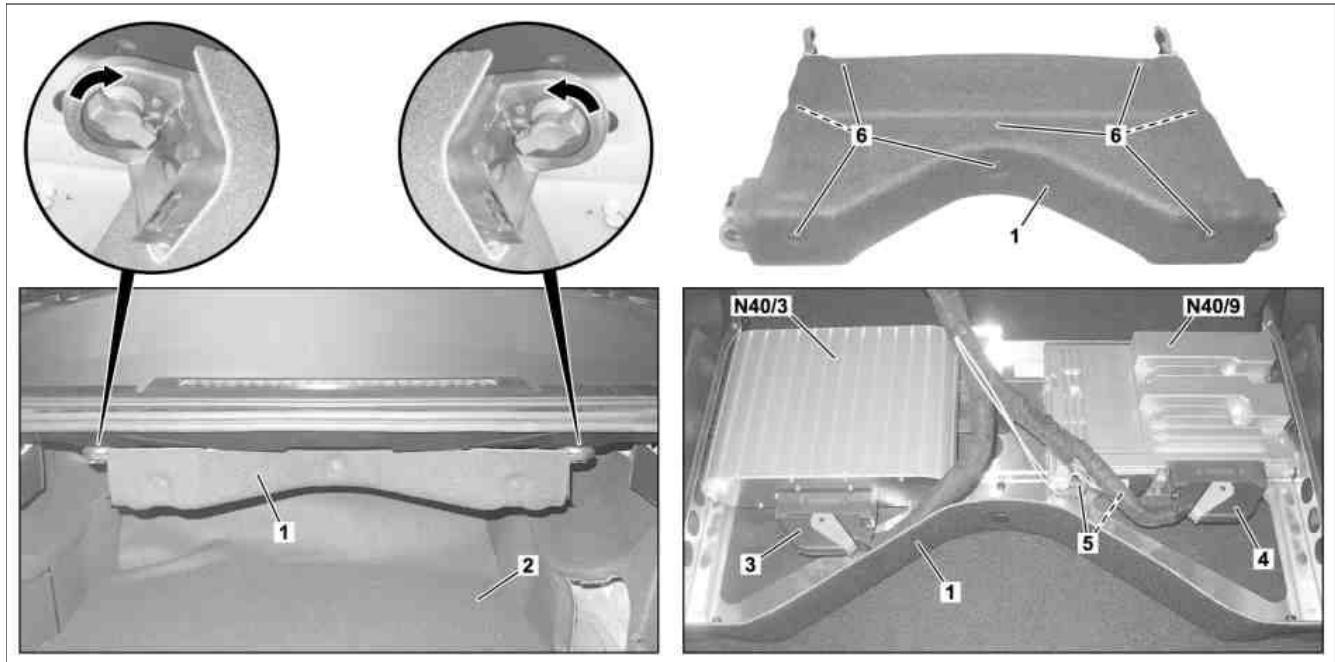
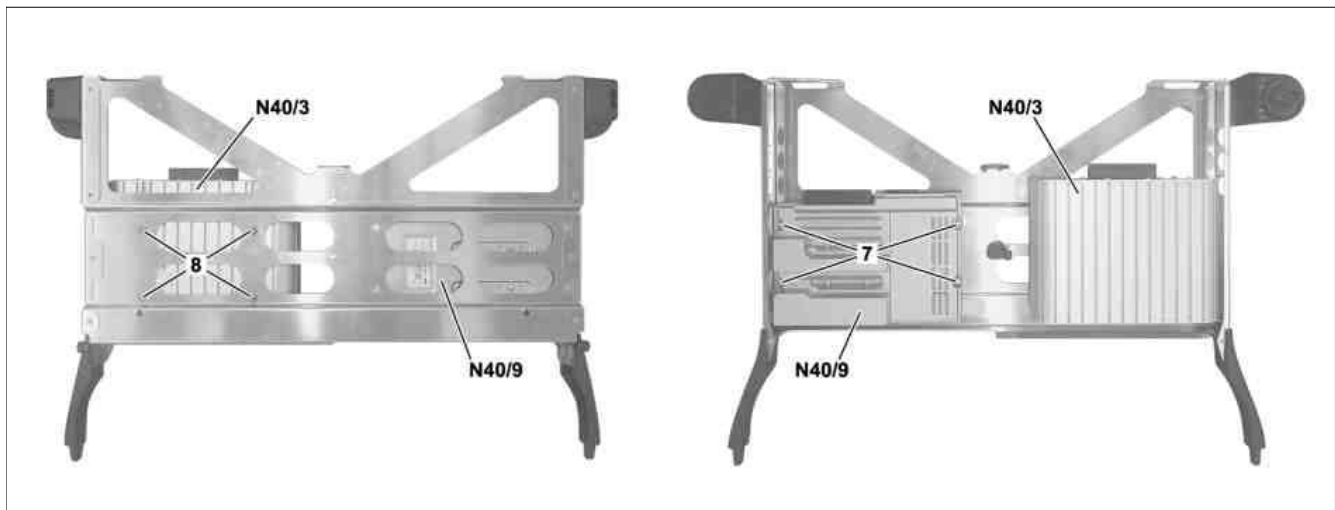


MODEL 212.0/1
 as of model year 2014
 with CODE 811 (Advanced sound system)



P82.62-4069-09



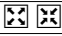

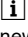

- | | | | | | |
|---|----------------------|---|--|-------|-------------------------------------|
| 1 | Stowage compartment | 4 | Electrical connector | N40/3 | Sound system amplifier control unit |
| 2 | Trunk floor | 5 | Electrical connectors with optical fiber | N40/9 | Rear bass speaker amplifier |
| 3 | Electrical connector | 6 | Expanding rivets | | |



P82.62-4070-08

7 Nuts
8 Nuts

N40/3 Sound system amplifier control unit
N40/9 Rear bass speaker amplifier

| | | | |
|--|--|--|---------------------|
|  | Information on preventing damage to electronic components due to electrostatic discharge | | AH54.00-P-0001-01A |
|  | Notes on avoiding damage to optical fibers during repair work | | AH82.60-P-0001-05AK |
|  | Remove/install | | |
| 1  | Connect diagnostic system and conduct initial startup of sound system amplifier control unit (N40/3) and rear bass speaker amplifier (N40/9) | When replacing sound system amplifier control unit (N40/3) and rear bass speaker amplifier (N40/9).  Installation: Copy buffered basic data to new sound system amplifier control unit (N40/3) and rear bass speaker amplifier (N40/9). | AD00.00-P-2000-04A |
| 2.1 | Switch off ignition and remove transmitter key from electronic ignition lock control unit | Except CODE 889 (Keyless-Go) | |
| 2.2 | Switch off ignition and remove Keyless-Go start/stop button from electronic ignition lock control unit | With CODE 889 (Keyless-Go) | |
| 3 | Release stowage compartment (1) (arrows) and place downwards on trunk floor (2) |  Carefully place stowage compartment (1) downwards on trunk floor (2). Otherwise the sound system amplifier control unit (N40/3) and rear bass speaker amplifier (N40/9) may be damaged. | |
| 4 | Detach electrical connections (3, 4) | | |
| 5 | Disconnect electrical connectors with optical fiber (5) | | |
| 6 | Remove expansion rivets (6) | When removing sound system amplifier control unit (N40/3). | |
| 7 | Remove nuts (7) | When removing rear bass speaker amplifier (N40/9). | |
| 8 | Remove nuts (8) | When removing sound system amplifier control unit (N40/3). | |
| 9 | Remove sound system amplifier control unit (N40/3) or rear bass speaker amplifier (N40/9) | | |
| 10 | Install in the reverse order | | |