



MODEL 212

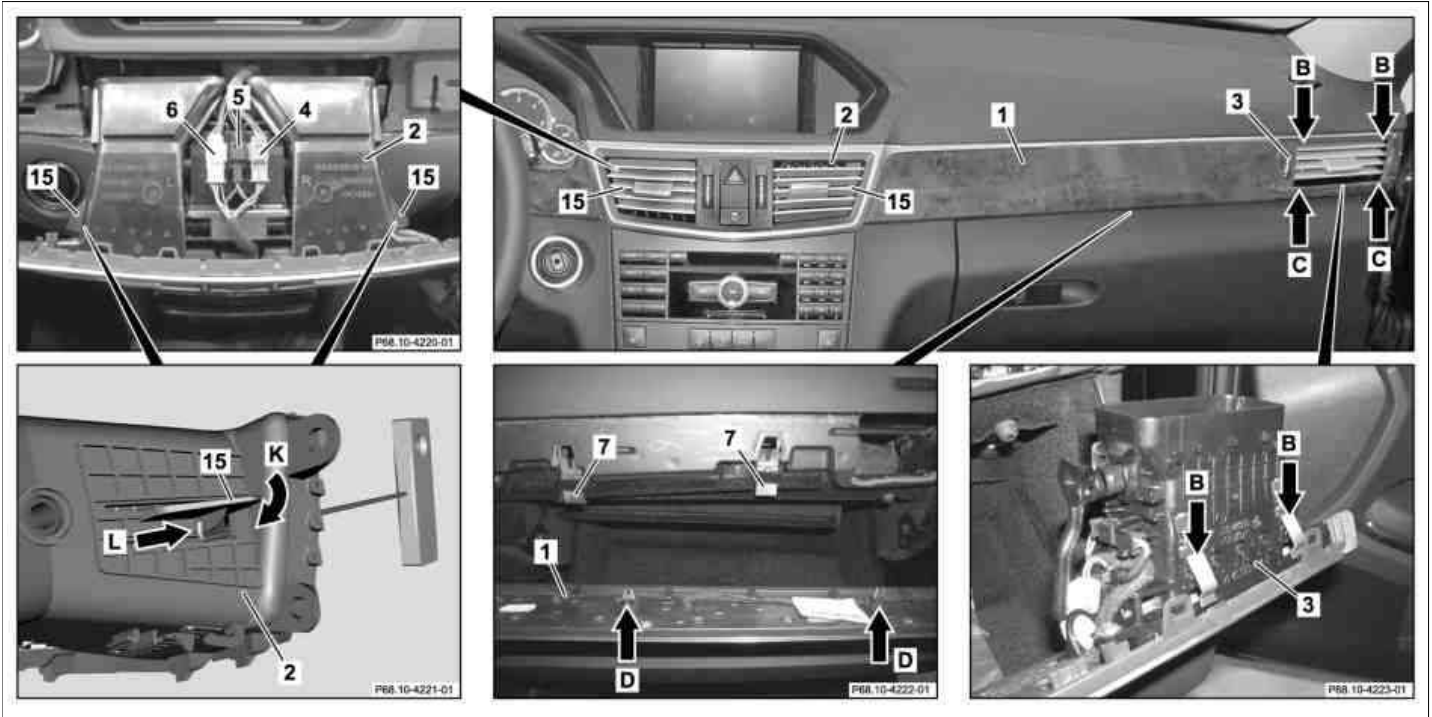

P68.10-4219-09


- | | | | | | |
|---|---------------------------|---|---|----|----------------------|
| 1 | Passenger side trim strip | 4 | Electrical connector (with code (954) Avantgarde or with code (955) Elegance) | 6 | Electrical connector |
| 2 | Center air outlet | 5 | Electrical connector | 7 | Retaining clamp |
| 3 | Side air vent | | | 15 | Catch hook |

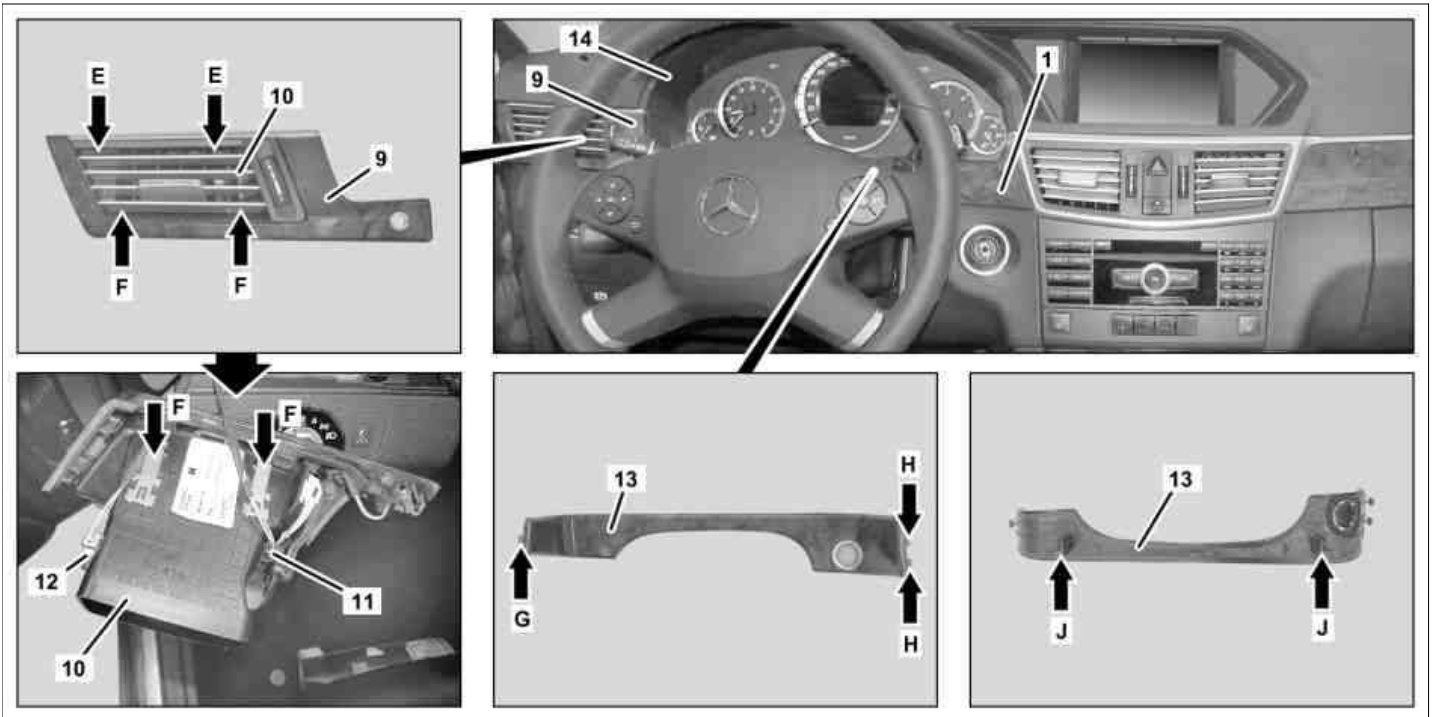

P68.10-4093-09

- | | | | | | |
|----|---------------------------|----|---|----|-------------------------------|
| 1 | Passenger side trim strip | 11 | Electrical connector | 13 | Instrument cluster trim strip |
| 9 | Driver side trim strip | 12 | Electrical connector (with code (954) Avantgarde or with code (955) Elegance) | 14 | Instrument cluster covering |
| 10 | Side air vent | | | | |

| | Remove/install | | |
|----|---|--|------------------|
| | Passenger side trim strip (1), driver side trim strip (9) and instrument cluster trim strip (13) can be removed separately. To remove instrument cluster trim strip (13), loosen driver side trim strip (9) and passenger side trim strip (1) and allow to hang down with electrical lines connected. | | |
| | Passenger side trim strip (1) | | |
| 1 | Open glove compartment lid | | |
| 2 | Pull retaining clips (7) downward beyond catch point and leave in cutout for glove compartment | Installation: Ensure that retaining clips (7) are seated correctly in pins (arrows D) on passenger side trim strip (1). | |
| 3 | Hook extraction hooks into openings on catch hook (arrows B and C) | | *140589023300 |
| 4 | Loosen passenger side trim strip (1) with side air vent (3) from instrument panel by pulling extraction hook | Pull out carefully, danger of breaking passenger side trim strip (1). | *140589023300 |
| 5 | Install extraction hook in openings of catch hooks (15) on center air vent (2) and push catch hook in direction of vent center (arrows K) | Center air vent (2) is unlocked | *140589023300 |
| 6 | Hook extraction hook on catch hook (15) carefully in center air vent (2) (arrows L) and loosen passenger side trim strip (1) with center air vent (2) out of instrument panel by pulling extraction hook | Pull out carefully, danger of breaking passenger side trim strip (1). | *140589023300 |
| 7 | Pull passenger side trim strip (1) with side air vent (3) and center air vent (2) out of instrument panel | | |
| 8 | Disconnect electrical connectors (4, 5, 6) | Electrical connector (4) only with code (954) Avantgarde or code (955) Elegance. | |
| 9 | Remove passenger side trim strip (1) | | |
| 10 | Remove center air vent (2) | When replacing passenger side trim strip (1). | AR83.10-P-4503EW |
| 11 | Remove side air vent (3) | When replacing passenger side trim strip (1). | AR83.10-P-4740EW |
| | Driver side trim strip (9) | | |
| 12 | Hook extraction hook into openings on catch hook (arrows E and F) | | *140589023300 |
| 13 | Loosen driver side trim strip (9) with side air vent (10) from instrument panel by pulling extraction hook | Pull out carefully, danger of breaking driver side trim strip (9). | *140589023300 |
| 14 | Pull driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connectors (11, 12) are accessible | Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. | |
| 15 | Disconnect electrical connectors (11, 12) | Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. | |
| 16 | Remove side air vent (10) | When replacing driver side trim strip (9). | AR83.10-P-4740EW |
| | Instrument cluster trim strip (13) | | |
| 17 | Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster panel (14) | | |
| 18 | Unclip catch hook (arrows J) from instrument panel cover (14) | Installation: Ensure that catch hooks (arrows J) are seated correctly in instrument panel cover (14). | |
| 19 | Remove instrument panel trim strip (13) | | |
| 20 | Install in the reverse order | | |

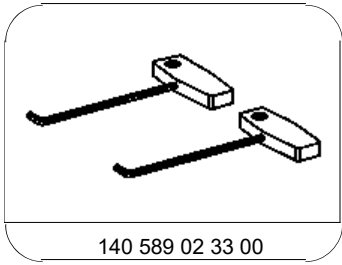

Pulling hook