


MODEL 207, 212, 218

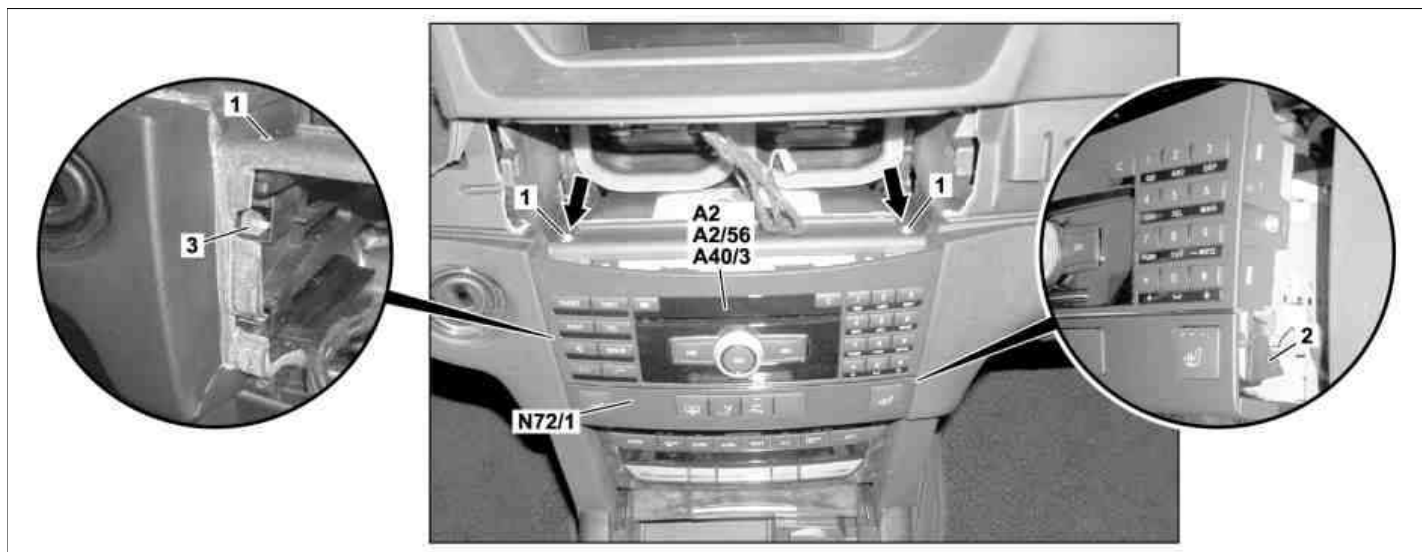

P82.60-7926-08

Shown on model 212 with open lock

1	Screw	A2	Radio (with CODE 505 (Radio 20 NTG5 without navigation capability) or with CODE 510 (Audio 20 with CD changer) or with CODE 522 (Audio 20 radio) or with CODE 523 (MB Audio 20 radio))	N72/1	Upper control panel control unit
2	Electrical connector	A2/56	Radio with auto pilot system (with CODE 511 (Audio 50 APS with DVD changer) or with CODE 525 (MB Audio 50 APS radio))		
3	Lock	A40/3	COMAND controller unit (with CODE 512 (COMAND APS with DVD changer) or with CODE 526 (COMAND (without navigation)) or with CODE 527 (COMAND APS with single DVD drive (with navigation)) or with CODE 528 (COMAND with DVD changer USA (without navigation)) or with CODE 531 (COMAND APS))		


 


MODEL 218 as of model year 2015

4 Cover



P82.60-9473-01

ⓘ	Notes on avoiding damage to optical fibers during repair work	AH82.60-P-0001-05AK
---	---	---------------------

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	<b>Remove/install</b>		
1	Connect diagnostic system and perform initial startup of radio (A2) or radio with auto pilot system (A2/56) or COMAND controller unit (A40/3)	When replacing radio (A2) or radio with auto pilot system (A2/56) or COMAND controller unit (A40/3).	AD00.00-P-2000-04A
 AD			
2.1	Switch off ignition and remove transmitter key from electronic ignition lock control unit	MODEL 207, 212, 218 without CODE 889 (KEYLESS-GO)	
2.2	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit	MODEL 207, 212, 218 with CODE 889 (KEYLESS-GO)	
3	Remove Audio/COMAND display	MODEL 218 as of model year 2015	AR82.60-P-7722ELA
4	Remove trim piece from right instrument panel	MODEL 212, 218 MODEL 212 MODEL 218	AR68.10-P-1180EW AR68.10-P-1180EL
5	Remove center air vents	MODEL 207	AR83.10-P-4503EC
6	Unclip cover (4) from instrument panel (arrows B) and remove	MODEL 218 as of model year 2015	
7	Completely remove screws/bolts (1), position screws/bolts (1) again and press screws/bolts (1) in direction of arrow so that lock (3) is opened	 The lock (3) must be completely opened. Otherwise, the radio (A2) or the radio with auto pilot system (A2/56) or the COMAND controller unit (A40/3) can be damaged.	
8	Cover center console with a dry cloth and pull radio (A2) or radio with auto pilot system (A2/56) or COMAND controller unit (A40/3) far enough out of the instrument panel for the electrical connector (2) of the upper control panel control unit (N72/1) to be accessed		
9	Disconnect electrical connector (2) of upper control panel control unit (N72/1)		
10	Pull radio (A2) or radio with auto pilot system (A2/56) or COMAND controller unit (A40/3) far enough out of instrument panel until electrical connectors or optical fiber connector are accessible on the back of the unit		
11	Disconnect electrical connectors and optical fiber connector on back of radio (A2) or radio with auto pilot system (A2/56) or COMAND controller unit (A40/3), unhook retaining clip and remove radio (A2) or radio with auto pilot system (A2/56) or COMAND controller unit (A40/3)		
12	Remove upper control panel control unit (N72/1)	When replacing radio (A2) or radio with auto pilot system (A2/56) or COMAND controller unit (A40/3).	AR54.21-P-1262CY
13	Install in the reverse order		