

MODEL 204, 212



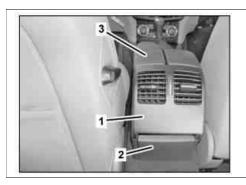

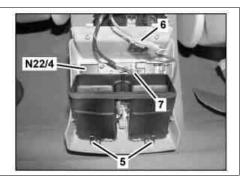

P83.10-2630-07

## Shown on model 204.0


- 1 Air vent
- 2 Cover
- 3 Armrest
- 4 Pop rivets
- 5 Catch hook

- 6 Electrical connector
- 7 Electrical connector (with code (581) Comfort automatic air conditioning)

N22/4 Rear automatic climate control operating unit (with code (581) Comfort automatic air conditioning)

## Shown on model 212.0 with code (279) Electronic gear selector


- 1 Air vent
- 3 Armrest
- 4 Pop rivets

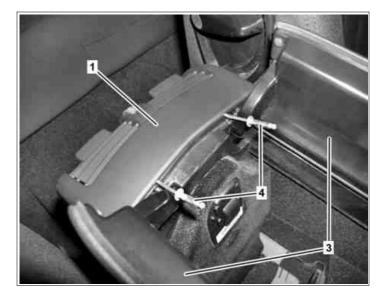

P83.10-2711-11

| XX  | Remove/install   |  |                    |
|-----|--|--|--------------------|
| (3) | Information on preventing damage to electronic components due to electrostatic discharge   |  | AH54.00-P-0001-01A |
| 1   | Switch off ignition and remove transmitter key (A8/1) or KEYLESS-GO start/stop button (S2/3 from electronic ignition lock control unit (N73) | KEYLESS-GO start/stop button only on vehicles with code (889) Keyless-Go.  |                    |
| 2   | Unclip cover (2)   | Model 204.0/2/3, 212 without code (301) Ashtray package/smoker package or Model 204.9 without code (301) Ashtray package/smoker package and without code (864) Rear entertainment system  Solution Installation: First attach cover (2) at bottom. | *115589035900      |
| 3   | Remove DVD player bracket (A40/4)  | For model 204.9 with code (864) Rear entertainment system  | AR82.60-P-7506CY   |
| 4   | Open armrest (3) and release catch hooks (5) at air vent (1)   | Release of catch hooks (5) with two blind rivets (4) is shown as an example. Other suitable tools or objects with a diameter of approx. 2 mm and a length of approx. 40 mm can be used.  |                    |

| 5 | Remove air vent (1) upwards from center console and disconnect electrical connectors (6)       |  |                   |
|---|--|--|-------------------|
| 6 | Disconnect electrical connectors (7) at rear automatic air conditioning operating unit (N22/4) | i On vehicles with code (581) Comfort automatic air conditioning                           |                   |
| 7 | Remove rear AAC operating unit (N22/4)   | i For vehicles with code (581) Comfort automatic air conditioning when replacing air vent. | AR83.40-P-6350ELH |
| 8 | Install in the reverse order   |  |                   |

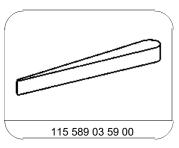

Long wedge