


MODEL 212
 up to model year 2014
 with CODE 432 (Left and right dynamic multicontour seat)

MODEL 218
 up to model year 2015
 with CODE 432 (Left and right dynamic multicontour seat)

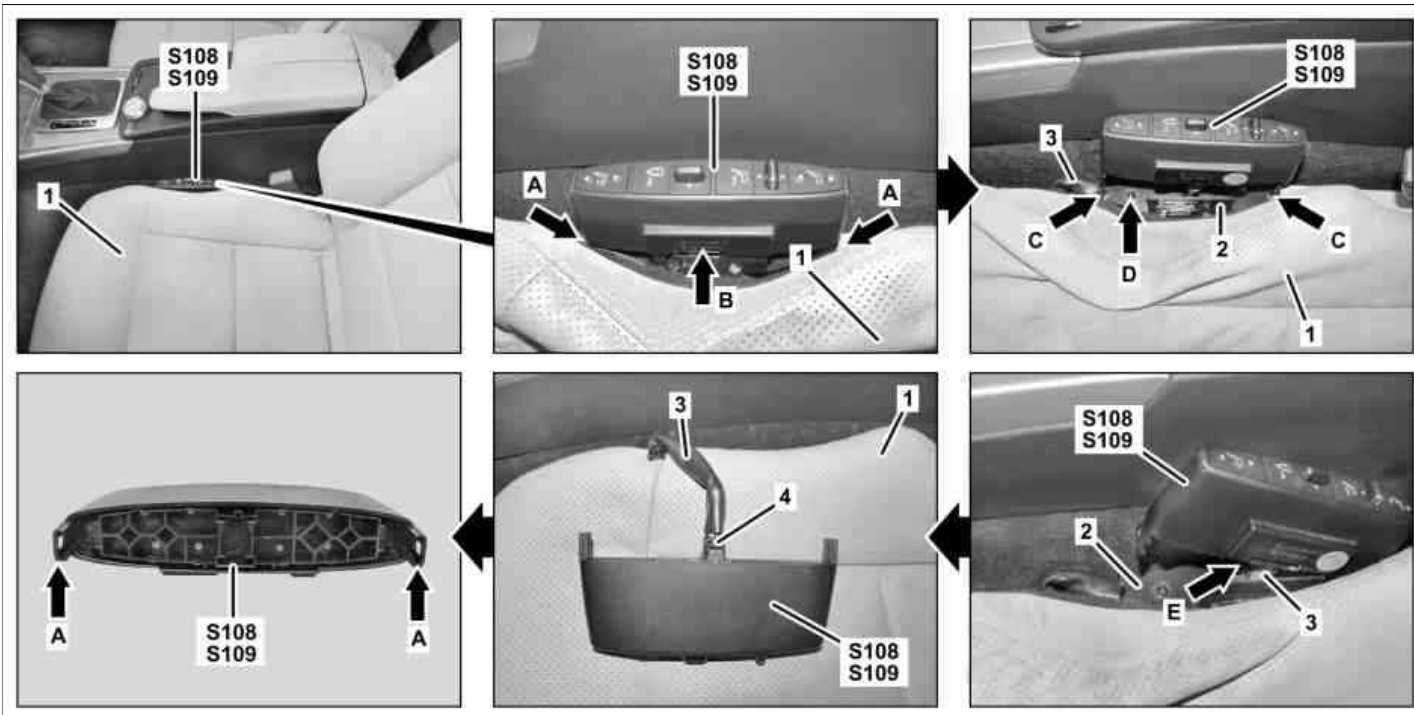


P91.25-2501-09

Shown on model 212

- | | | | | | |
|---|--------------|---|---------------------------|------|---|
| 1 | Seat cushion | 3 | Electrical wiring harness | S108 | Front passenger active multicontour seat button group |
| 2 | Bracket | 4 | Electrical connector | S109 | Driver active multicontour seat button group |

☒ ☒	Remove/install		
1	Push left or right seat cushion (1) far enough to one side to access the supports (arrows A) of the front passenger active multicontour seat button group (S108) or the driver active multicontour seat button group (S109)		
2	Unclip supports (arrows A) of front passenger active multicontour seat button group (S108) or driver active multicontour seat button group (S109) at the lug catch hooks (arrows C)	i Installation: Ensure correct seating of the supports (arrows A) in the lugs (arrows C).	
3	Push front passenger active multicontour seat button group (S108) or driver active multicontour seat button group (S109) far enough upwards out of bracket (2) until the electrical wiring harness (3) can be removed from the opening (arrow E) of the bracket (2)	i Installation: Ensure correct seating of front passenger active multicontour seat button group (S108) or driver active multicontour seat button group (S109) in the lug (arrow B) of bracket (2).	
4	Remove electrical wiring harness (3) from the opening (arrow E) of bracket (2)	i Installation: Ensure correct seating of the electrical wiring harness (3).	

5	Unclip electrical wiring harness (3) from bracket (2) (arrow D)	i Installation: Ensure correct seating of the electrical wiring harness (3) in bracket (2) (arrow D). ☑ Clip remover	*452589016300
6	Lift front passenger active multicontour seat button group (S108) or driver active multicontour seat button group (S109) far enough until the electrical connector (4) can be disconnected		
7	Disconnect electrical connector (4)		
8	Remove front passenger active multicontour seat button group (S108) or driver active multicontour seat button group (S109)		
9	Install in the reverse order		

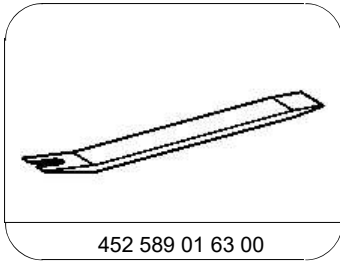

452 589 01 63 00

Clip remover