


MODEL 216  
MODEL 221

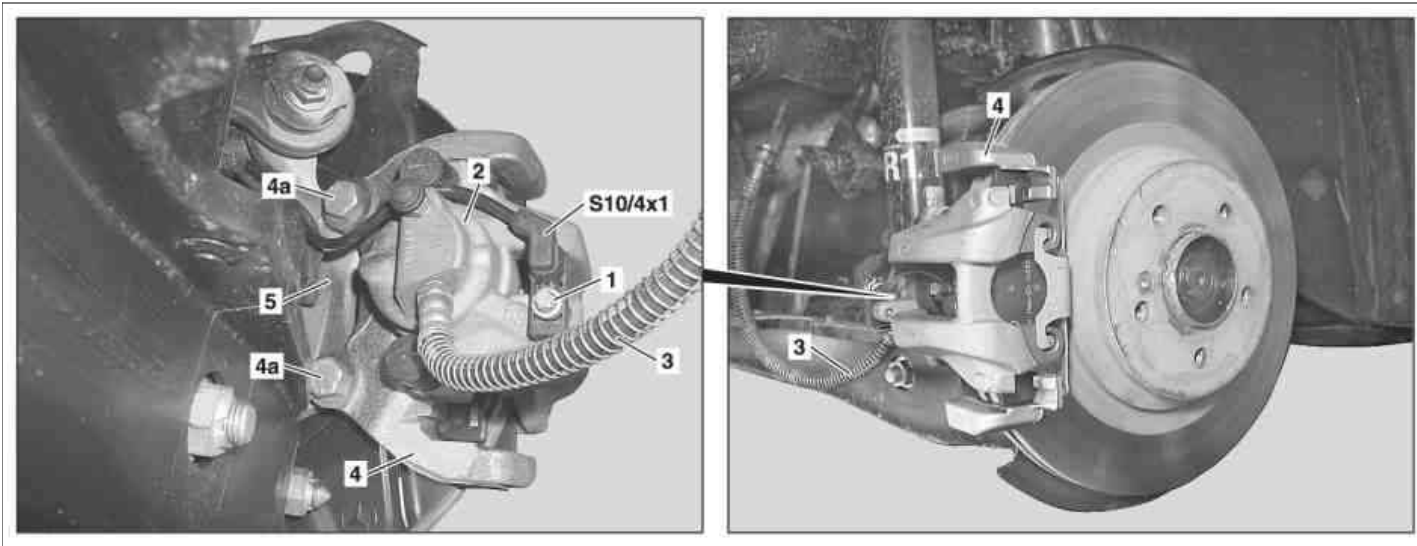

P42.10-2538-08

**1-piston brake caliper**


- 1 Screw
- 2 Brake caliper
- 3 Brake hose
- 4 Caliper support
- 4a Screw
- 5 Wheel carrier

S10/4x1 Right rear brake pad contact sensor connector

**4-piston brake caliper**

- 1 Screw
- 2 Brake caliper
- 2a Screw
- 3 Brake hose
- 5 Wheel carrier

S10/4x1 Right rear brake pad contact sensor connector

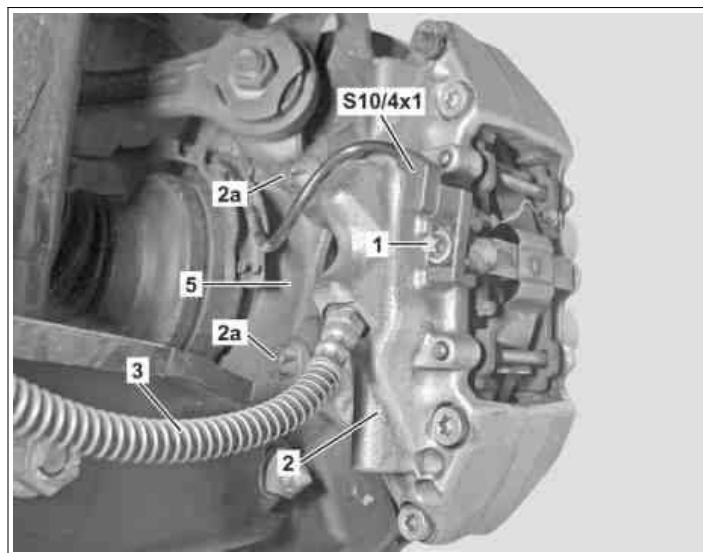

P42.10-2564-11

☒ ☒	Remove/install		
	<b>Risk of injury</b> to skin and eyes caused by handling hot or glowing objects.	Wear safety gloves, protective clothing and safety glasses, if necessary.	AS00.00-Z-0002-01A
ⓘ	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Remove brake pads on rear axle	with 1-piston brake caliper with 4-piston brake caliper	AR42.10-P-0160SX AR42.10-P-0161SX
2	Remove bolt (1) and remove right rear brake pad contact sensor connector (S10/4x1) from brake caliper (2)	When removing the right brake caliper (2)  <b>Nm</b>	*BA42.10-P-1002-12M
3	Remove brake hose (3)		AR42.10-P-0013SX
4.1	Remove bolts (4a) and detach brake caliper support (4) from wheel carrier (5)	When replacing the 1-piston brake caliper (2)	

		Nm	*BA42.10-P-1004-12M
4.2	Remove bolts (2a) and detach brake caliper (2) from wheel carrier (5)	With 4-piston brake caliper (2) Nm	*BA42.10-P-1004-12M
5	Install in the reverse order		

**Nm Rear axle brake caliper**

Number	Designation		Model	Model	Model	Model
			216 except 216.374/ 377/379	216.374/ 377/379	221 except model 221.074/ 077/174/ 177/179	221.074/ 077/174/ 177/179
BA42.10-P-1002-12M	Bolt, brake pad contact sensor to brake caliper	Nm	8	8	8	8
BA42.10-P-1004-12M	Self-locking bolt, brake caliper to wheel carrier	Nm	110	110	110	110