


MODEL 207, 212, 218

- 1 Screw
 2 Steering knuckle
 3 Line bracket

- L6/1 Left front axle speed sensor
 L6/2 Right front axle speed sensor

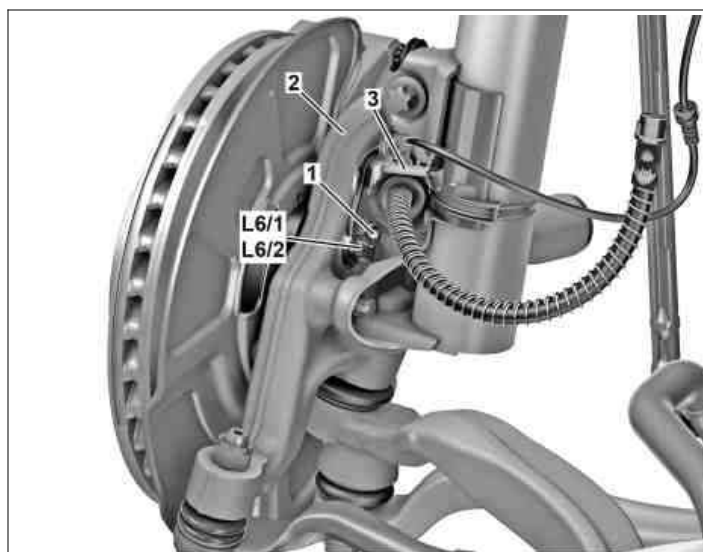

P42.30-2161-11

☒ ☒	Remove/install		
ⓘ	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Remove front wheel	Model 207 Model 212, 218	AP40.10-P-4050CW AP40.10-P-4050EW
2	Remove fender liner of front fender		
3	Disconnect electrical connector of left front axle rpm sensor (L6/1) and right front axle rpm sensor (L6/2) at front axle electrical distributor		AR33.10-P-0100-06CW
4	Unclip electrical feed line of left front axle rpm sensor (L6/1) and right front axle rpm sensor (L6/2) from line bracket (3)	ⓘ Installation: Ensure lines are installed correctly.	
5	Remove bolt (1) and pull left front axle rpm sensor (L6/1) and right front axle rpm sensor (L6/2) out of steering knuckle (2)		
6	Install in the reverse order		
7	Connect STAR DIAGNOSIS, read and erase diagnostic trouble code memory		AD00.00-P-2000-04A