



- Model** 204.08/09/28/29/38/90/93/98/99, 207.38
Model 205 with transmission 722.96/97
Model 205, 213, 217, 218, 222, 238, 253, 257, 290 with transmission 725.0 with code M005 (4MATIC)
Model 212, 217, 218, 222 with transmission 722.97
Model 212.08/09/28/29, 216, 218.39/99, 221 with transmission 722.96
Model 217, 222 with transmission 722.96

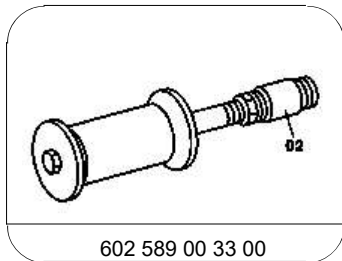

602 589 00 33 00

Impact extractor

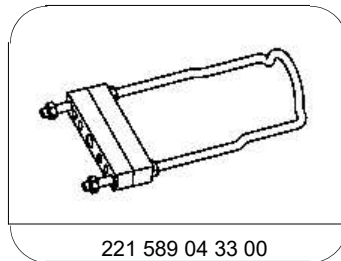

221 589 04 33 00


Extraction tool

ⓘ The knock-on balancing weight must be mounted on the ⓘ impact extractor (02) so that the impact travel is short. Otherwise the body may be damaged.

- 1 ⓘ Mount extraction tool (03) onto drive flange (4).

Shown on front axle differential 175

- 02 Slide hammer puller
 03 Extraction tool
 1 Front axle transmission
 2 Pinion housing
 4 Drive flange

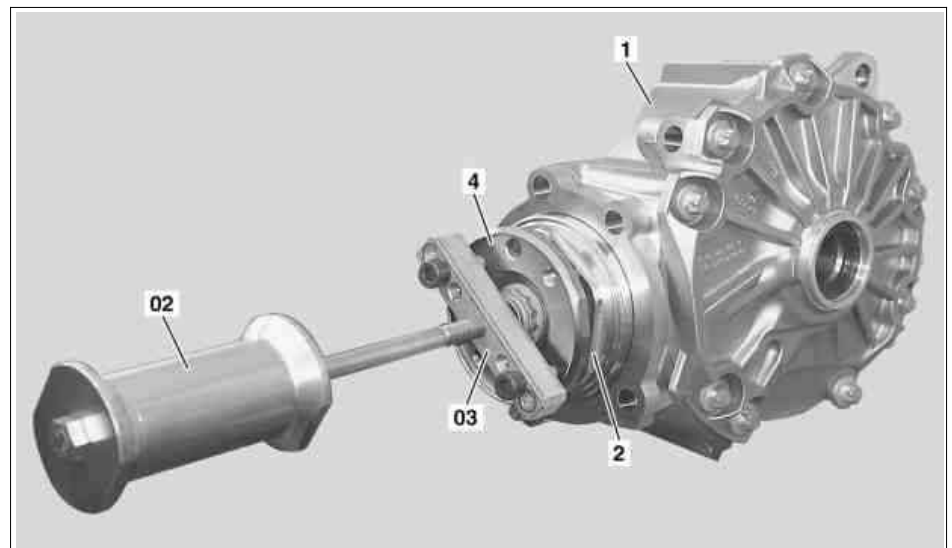

P33.30-2130-05

- 2 Mount ⓘ impact extractor (02) onto ⓘ extraction tool (03).

- 3 Pull pinion housing (2) out of front axle differential (1).