

2018 Mercedes Benz E63S AMG 4MATIC Sed (213.089) V8-4.0L Turbo (177.980)

Vehicle > Technical Service Bulletins

LOWER CONTROL PANEL: LEFT/RIGHT SWITCH BLOCK IS LOOSE/NOT ENGAGED



- Lower control panel: Left/right switch block is loose/not engaged -

Topic number	LI54.25-P-064053
Version	1
Design group	54.25 Switches
Date	05-11-2016
Validity	Model series 213 up to VIN end number A025655
Reason for change	

Complaint

The left or right switch block on the lower control panel is loose or not correctly engaged

File	Designation
Schalterblock.JPG.jpg	Figure 1

Cause

Switch block mounting (See picture 1 in attachment).

Remedy

Remove lower control panel and mount switch block correctly from rear, make sure while doing so that both catch hooks (front/rear) are engaged.

Symptoms

Symptom

Body / Interior equipment / Switches, interior, general / Loose

Parts

Part number	ES1	ES2	Designation	Quantity	Note	EPC
					No parts are required	

Operation numbers/damage codes

Op. no.	Operation text	Time	Damage code	Note
			82F0H38	
54-3445	LEFT SIDE			
54-3446	RIGHT SIDE			

Schalterblock

