

- Model** 118, 167, 177, 243, 247
with code 521 (Connect 20 Mid (NTG7))
- Model** 118, 167, 177, 243, 247
with code 525 (Connect 20 High (NTG7))
- Model** 213
except code 800 (Model year 2020)
except code 806 (Model year 2016)
except code 807 (Model year 2017)
except code 808 (Model year 2018)
except code 809 (Model year 2019)
- Model** 238
except code 800 (Model year 2020)
except code 807 (Model year 2017)
except code 808 (Model year 2018)
except code 809 (Model year 2019)
- Model** 257
except code 800 (Model year 2020)
except code 801 (YoM 20/1)
except code 808 (Model year 2018)
except code 809 (Model year 2019)
- Model** 290
except code 800 (Model year 2020)
except code 801 (YoM 20/1)
except code 809 (Model year 2019)

Shown on model 213.073

- 3 Finger navigation pad
- 4 Driver display



P00.20-A038-06

	Dialing		
1	Call up workshop level in the instrument cluster.	<p>i The workshop level with the menu items is shown on the driver's display (4): "Vehicle data", "ASSYST PLUS", And other equipment-dependent menu items.</p>	AP00.20-P-0046E

2	Switch electronic ignition lock control unit to position "2" (circuit 15).	i No fault messages are allowed to appear on the driver's display (4).	
3	Use swipe movements on the finger navigation pad (3) to select and confirm the "ASSYST PLUS" menu item on the driver's display (4).	i The following menu items appear on the driver display (4): "Service data", "Full service".	
	Read out service data		
4	Use swipe movements on the finger navigation pad (3) to select and confirm the "Service data" menu item.	i Note down the workshop code shown on the driver's display (4) in the reception report.	
5	Use swipe movements on finger navigation pad (3) to scroll forward to remaining time and remaining distance.	i Note down the remaining time and remaining distance shown on the driver's display (4) in the reception report.	
	Reset service data		
6	Use swipe movements on the finger navigation pad (3) to select and confirm the "Full Service" menu item on the driver's display (4).	i The current service items appear on the driver's display (4).	
7	Use swipe movements on the finger navigation pad (3) to select and confirm the "Confirm Service" menu item on the driver's display (4).	i Model 118, 167, 177, 247, 213, 238, 257, 290 The oil selection appears on the driver's display (4).	
8	Select and confirm specification for engine oil used using swipe movements on the finger navigation pad (3).	Model 118, 167, 177, 247, 213, 238, 257, 290	
9	Use swipe movements on the finger navigation pad (3) to select and confirm the "Yes" menu item on the driver's display (4).	i "Reversal not possible" is shown on the driver's display (4).	
10	Use swipe movements on the finger navigation pad (3) to select and confirm the "Confirmation" menu item in the driver's display (4).	i "Full Service completed" appears in the driver's display (4). If the service is not performed or only partly performed after resetting the maintenance computer, ↓ reset the maintenance computer to the default value again.	AP00.20-P-0044A
	Deactivation		
11	Press "Back" button (2) and change back to workshop level menu item.	i The workshop level with the menu items is shown on the driver's display (4): "Vehicle data", "ASSYST PLUS", And other equipment-dependent menu items.	
12	Close workshop level in the instrument cluster.		AP00.20-P-0046E