



68-449 Removal and installation of trim on rear pillar

Removal

- 1 Pull chafing strip in range of trim from rear pillar.
- 2 Disconnect the 3 front fastening hooks on trim in direction of vehicle center.
- 3 Pull trim forward and remove.

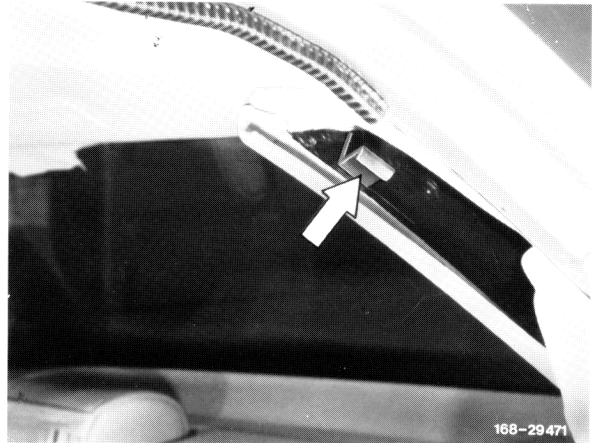


- 4 Unscrew belt end fitting on vehicle floor, removing rear seat cushion for this purpose.
- 5 Guide belt end fitting through opening in trim and remove trim.

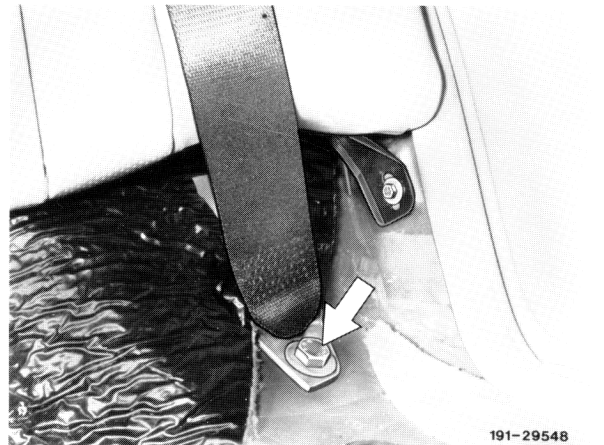


Installation

- 6 Align holding clip on trim.
- 7 Guide belt end fitting through opening in trim and screw to vehicle floor.

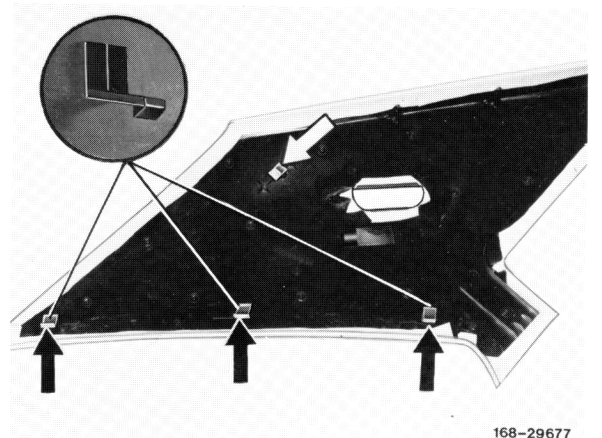

8 Insert trim from the front with holding clamp into recess on rear pillar and clip on by means of the 3 front fastening hooks.

9 For further installation proceed vice versa.

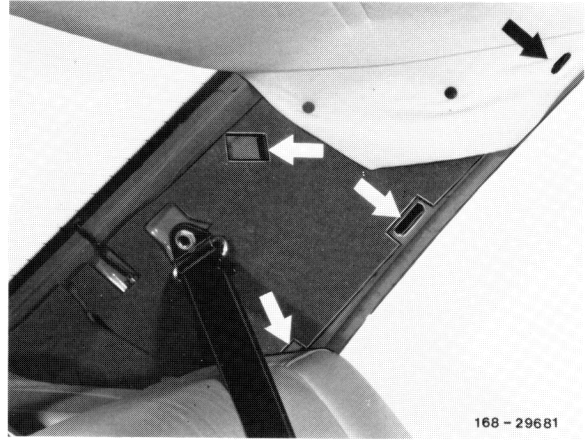

B. T-sedan

Remove and install


1 Remove loading space trim at the left or open at the right.

2 Remove spare wheel.


3 Remove loading space lamp.



4 Remove trim below.

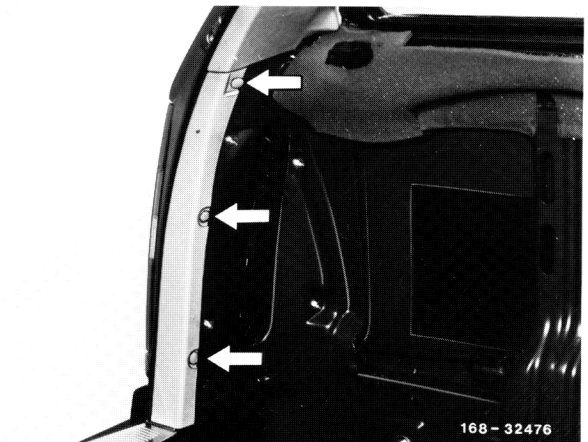

5 Unscrew screw at the top, pull trim in downward direction and remove.

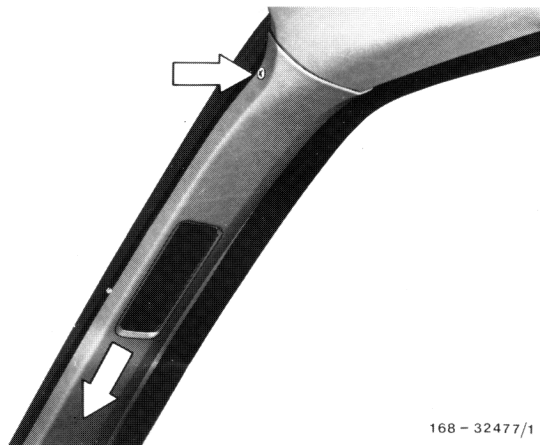

168 - 32477/1

6 Introduce trim with hook (arrows) into recess on rear pillar from below and fasten with screw at the top.

7 Connect loading space lamp and fasten with clips.



168 - 32475

8 Lift rubber lip from frame of side window pane above trim.



168 - 32474

9 Fasten trim below above sheet metal fold and insert plastic clips (3 each).

10 For further installation proceed vice versa.



168 - 32476